

# POLARIS **GENERAL** MAINTENANCE SCHEDULE



## BEFORE EVERY RIDE



**Engine Oil**  
Check oil level



**Coolant**  
Check fluid level



**Exhaust System**  
Clean spark arrestor & inspect for damage



**Transmission**  
Check fluid level



**Tires**  
Inspect condition & check pressure



**Air Filter**  
Inspect & clean, replace as needed

## EVERY 500 MILES / 6 MO



**Engine Oil**  
Change engine oil and filter & inspect for leaks



**Drive Belt**  
Inspect & adjust, replace as needed



**Coolant**  
Test coolant strength & inspect for leaks



**General Lubrication**  
All fittings, pivots, cables, etc.

## EVERY 1,000 MILES / 1 YR



**Drivetrain**  
Change transmission fluid & gearcase oil



**Battery**  
Test, clean & check fluid level

## EVERY 2,000 MILES / 2 YR



**Brake Pads & Fluid**  
Inspect pad wear & change brake fluid



**Spark Plugs**  
Inspect & replace as needed

## EVERY 5,000 MI / 5 YR



**Coolant**  
Flush coolant system



**Valve Clearance**  
Inspect & adjust as needed

Check your owner's manual for additional recommended service items and vehicle-specific timing.

Visit [GENERAL.POLARIS.COM](https://GENERAL.POLARIS.COM) and create an account to view owner's manuals, create maintenance records, and see vehicle specific maintenance intervals for all your Polaris vehicles.