

POLARIS RANGER®

MAINTENANCE SCHEDULE



BEFORE EVERY RIDE



Engine Oil
Check oil level



Coolant
Check fluid level



Exhaust System
Clean spark arrestor & inspect for damage



Transmission
Check fluid level



Tires
Inspect condition & check pressure



Air Filter
Inspect & clean, replace as needed

EVERY 500 MILES / 6 MO



Engine Oil
Change engine oil and filter & inspect for leaks



Drive Belt
Inspect & adjust, replace as needed



Coolant
Test coolant strength & inspect for leaks



General Lubrication
All fittings, pivots, cables, etc.

EVERY 1,000 MILES / 1 YR



Drivetrain
Change transmission fluid & gearcase oil



Battery
Test, clean & check fluid level

EVERY 2,000 MILES / 2 YR



Brake Pads & Fluid
Inspect pad wear & change brake fluid



Spark Plugs
Inspect & replace as needed

EVERY 2,500 MI / 2½ YR



Shock Absorbers
Rebuild or replace

EVERY 5,000 MI / 5 YR



Coolant
Flush coolant system

Check your owner's manual for additional recommended service items and vehicle-specific timing.

Visit [RANGER.POLARIS.COM](https://www.polaris.com/ranger) and create an account to view owner's manuals, create maintenance records, and see vehicle specific maintenance intervals for all your Polaris vehicles.