



QUICK START GUIDE

POLARIS FLEX JUMP-STARTER




PACKAGE CONTENTS



Jump starter



Thermoformed case

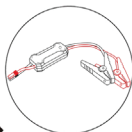

Smart jumper cables




Car charger




Wall charger




AT A GLANCE

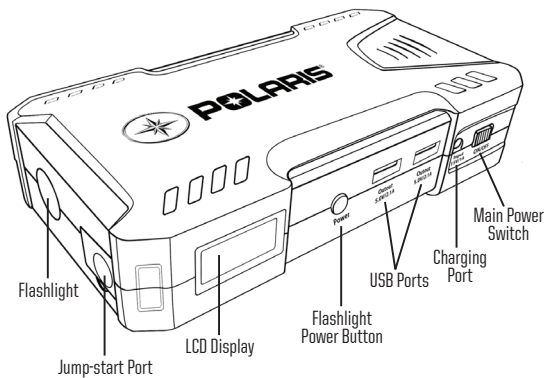


JUMP-STARTING YOUR VEHICLE

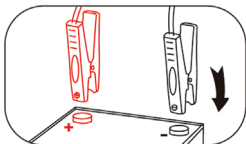


1. Attach the red Jump-starting clamp to the red positive [+] battery terminal, and connect the black clamp to the negative [-] battery terminal.

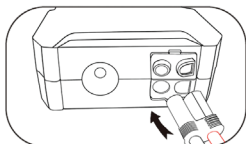

2. Plug in the jumper cables.

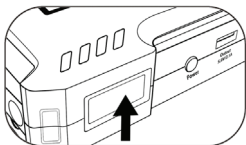

3. Switch on jump-starter and check it is over 50% charged.

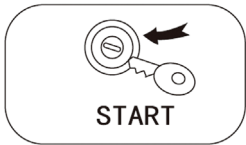


4. Start your engine.

JUMP-STARTING YOUR VEHICLE



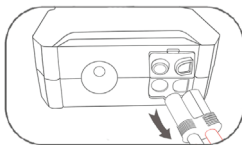


For maximum output and product longevity, wait 30 seconds between jump-start attempts.







Unplug the jumper cables within 30 seconds.

- ⚠** Do not connect the red and black clamps together.
- ⚠** If display shows 50% or less, charge jump-starter prior to next use. Failure to do so could result in damage to jump-starter.
- ⚠** Jumper cables must be connected properly to the vehicle's battery terminals. (See your vehicle owner's manual for proper jump-starting procedure.)


KNOWING THE CABLES

	Steady	Ready to jump-start.
	Steady	Standby. Cables are plugged into the jump-starter and are now ready to be connected to the battery.
	Flashing	<ol style="list-style-type: none">1. Cables are hooked up properly but have not been used for 60 seconds. Please press reset button to be ready.2. Reverse Polarity Protection: clamps are attached to the incorrect battery terminals. Please connect terminals and press reset button.3. Short Circuit Protection: Black and red clamps are touching. Please connect the correct terminals and press reset button.


KNOWING THE CABLES

	Flashing	Reverse Charging Protection: Vehicle voltage normal, jump-starting is not necessary. Please seek a service professional for further assistance.
	Slow Flashing	Over Temperature Protection: Cables are overheated, allow cables to cool until the red light reappears. Press reset button prior to next use.
	Rapid Flashing	Over Discharge Protection: The voltage of Jump-Starter is low, recharge your Jump-Starter.
	No Flashing	Please contact Polaris customer service.


USING USB PORTS

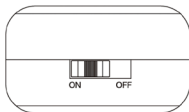

Turn on the main switch

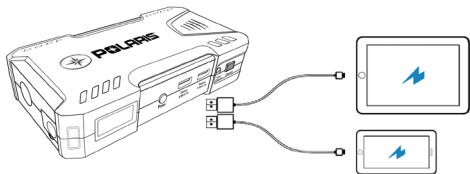

USING THE FLASHLIGHT

 


Turn on the main switch

Press and hold power button for 3 seconds:
Steady flashlight beam.


Next quick press: SOS Strobe

Next quick press: Fast Strobe


Next quick press: Turn off flashlight

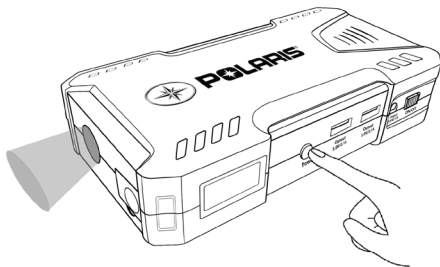

RECHARGING THE PRODUCT

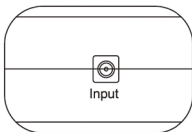


Locate the charging port.

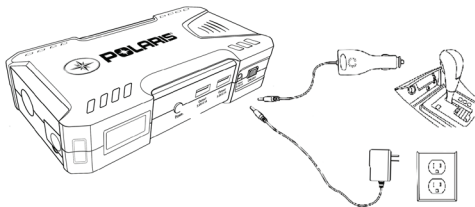

PRODUCT SPECIFICATIONS

Capacity	12000mAh / 44.4Wh
Weight	556g / 19.6oz
Size	178 x 91 x 45 mm / 7.0 x 3.6 x 1.8 in
Input	15V / 2.1Ax2
USB Output	5V / 2.1Ax2
Flashlight	200 Lumens

CUSTOMER SERVICE

	12-Month Limited Warranty
	1 (888) 704-5290
	www.polarispower.com