

# ALUMINUM RADIATOR GUARDS KIT



**P/N 2883768**

## INTERNATIONAL INSTRUCTIONS

### DE DEUTSCH

Laden Sie die neuesten PDF-Anweisungen von [www.indianmotorcycle.de](http://www.indianmotorcycle.de) herunter.

### FR FRANÇAIS

Télécharger les dernières instructions en format PDF sur [www.indianmotorcycle.fr](http://www.indianmotorcycle.fr).

### IT ITALIANO

Scarica l'ultima versione delle istruzioni in formato PDF da [www.indianmoto.it](http://www.indianmoto.it).

### EN ENGLISH

Download the latest PDF instructions from [www.indianmotorcycle.com](http://www.indianmotorcycle.com).

### ES ESPAÑOL

Descargue las instrucciones más recientes en formato PDF de [www.indianmotorcycle.mx](http://www.indianmotorcycle.mx) / [www.indianmotorcycle.es](http://www.indianmotorcycle.es).

### ZH 中文

从[www.indianmotorcycle.cn](http://www.indianmotorcycle.cn) 下载最新的PDF说明。

1



2



3



4




## APPLICATION

Verify accessory fitment at [www.indianmotorcycle.com](http://www.indianmotorcycle.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

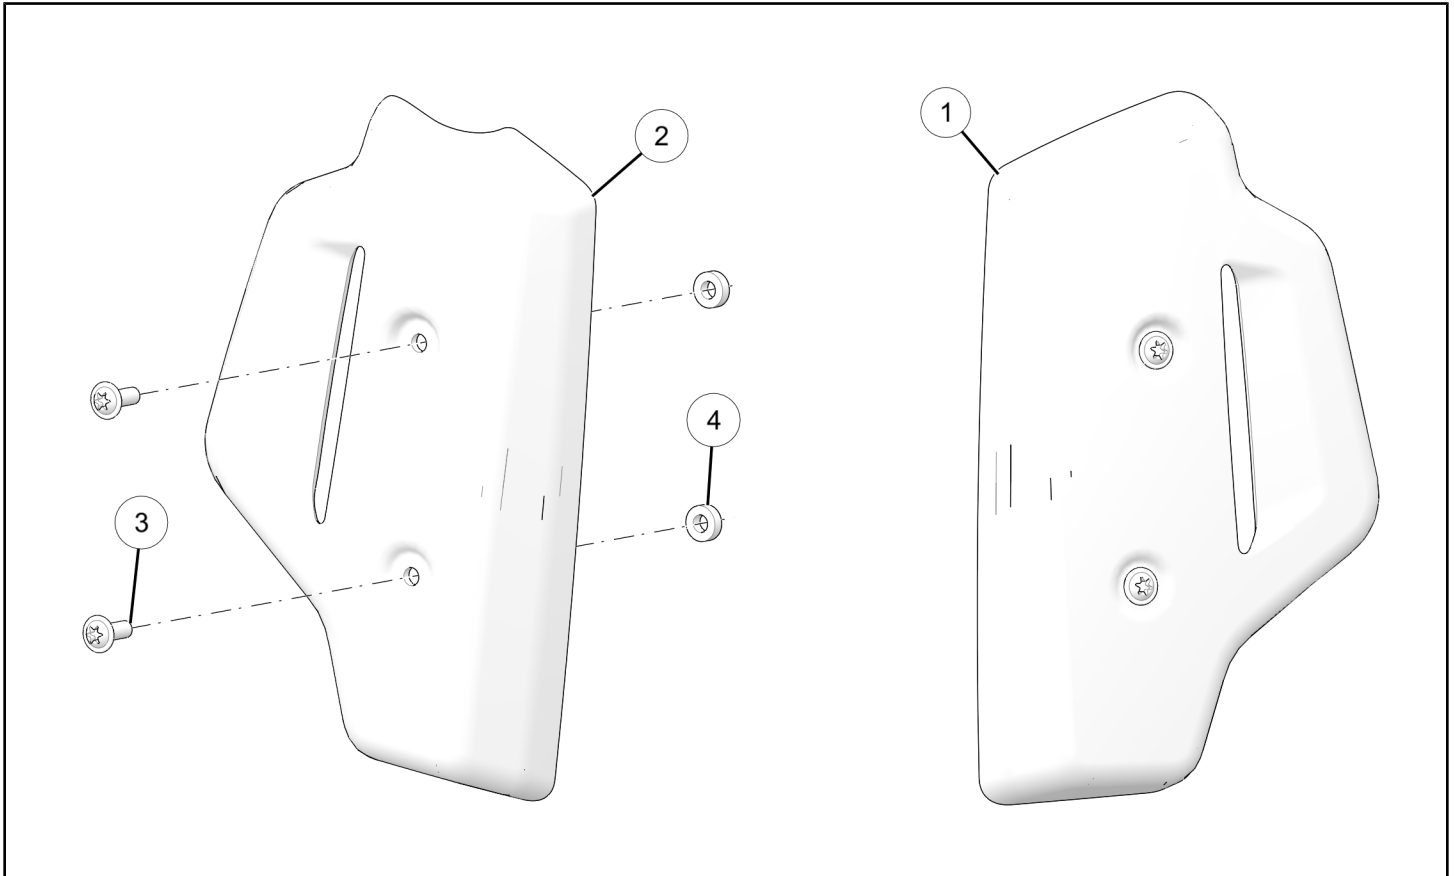

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Radiator Guard-LH	5266659
2	1	Radiator Guard-RH	5266660
3	4	Screw-Flat Head, M6 x 1 x 16	7520560
4	4	Spacer-Radiator Guard	7521100
	1	Instructions	9929578

## TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Screwdriver Set, Torx®
- Socket Set, Hex Bit, Metric
- Socket Set, Torx® Bit
- Torque Wrench

## IMPORTANT

Your accessory kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

# INSTALLATION INSTRUCTIONS

## VEHICLE PREPARATION

### GENERAL


1. Turn key or ignition switch to OFF position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicles is stable prior to installation.

### RADIATOR GUARD REMOVAL


1. Remove two radiator cover fasteners (A) and one push-pin (B) from radiator cover.

#### TIP

Tilt radiator cover to maneuver around radiator pressure cap.

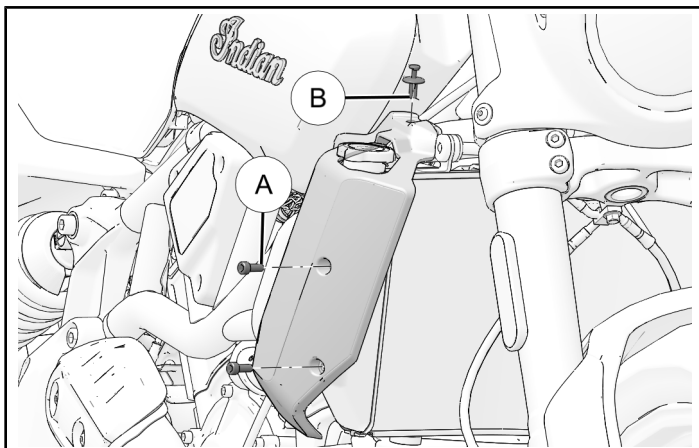

2. Remove two radiator cover fasteners (A) and one push-pin (B) from radiator cover.

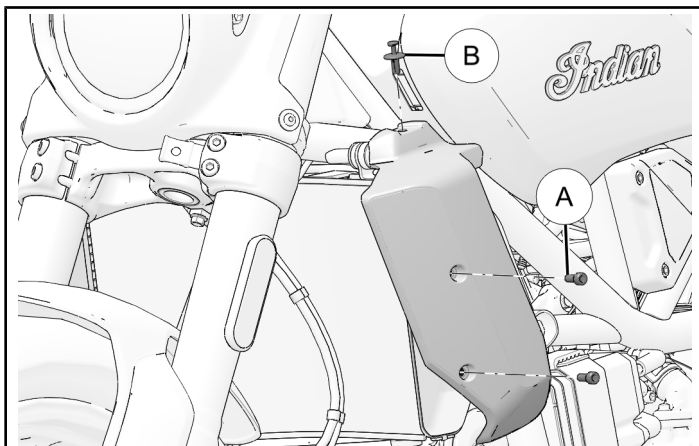


## ACCESSORY INSTALLATION

1. Install LH radiator guard (1) with two radiator guard fasteners (3) and two spacers (4).

#### TORQUE


Radiator Guard Fasteners (3):  
36 in-lbs (4 Nm)

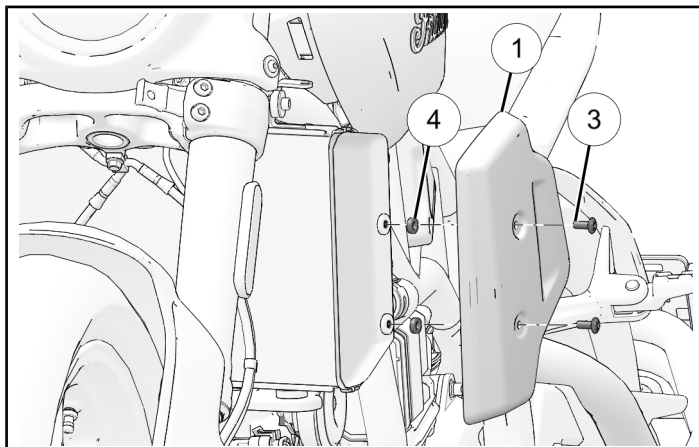

2. Install RH radiator guard (2) with two radiator guard fasteners (3) and two spacers (4).

#### TORQUE

Radiator Guard Fasteners (3):  
36 in-lbs (4 Nm)

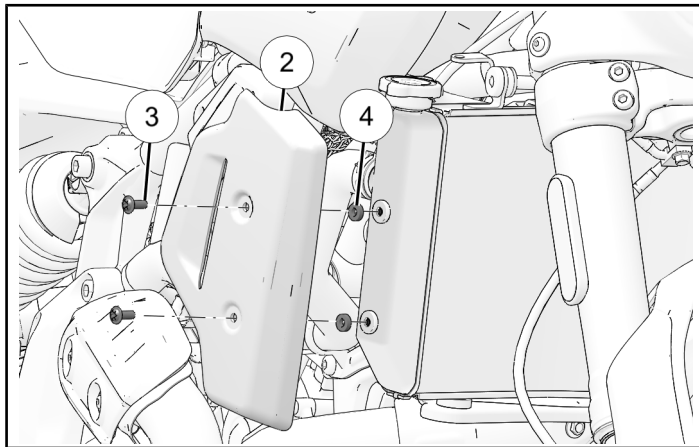

## FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

