

Hinged Window Assembly Replacement

Insert a screw through each end of the window bracket through the door frame.



Install two nuts and torque.

(be careful not to torque to tight as they will crack the window hinge)



Attach the clamps on both sides of the window for the door frame using two (2) rivets per clamp

