# **BEACON LIGHT KIT**

## P/N 2883265

## **APPLICATION**

Verify accessory fitment at Polaris.com.

## **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## **KIT CONTENTS**

This kit contains parts for installation of the beacon light only. Prior installation of the following additional kits is also required (sold separately):

- Light Bar Harness Kit, PN 2883230 (or equivalent)
- Light Bar Harness Extension Kit, PN 2883854 (or equivalent)

This Kit includes:



1	1	Light Assembly	-
2	1	Holder	-
3	3	Screw, Hex Flange - M8 X 1.25 X 20	7519936
4	1	Nut Plate	5256140
	1	Instructions	9928783



## **TOOLS REQUIRED**

- · Safety Glasses
- Deburring Tool
- Drill
- Hole Saw: 3/4 inch (19 mm)

- Push Dart (Panel Clip) Tool
- Screwdriver Set, Torx®
- · Socket Set, Metric
- Torque Wrench

## IMPORTANT

Your Beacon Light Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

- 1. Shift vehicle transmission into "PARK". Turn ignition switch to "OFF" position and remove key.
- 2. Remove roof liner (if installed).

#### **CREW VEHICLES**

#### NOTE Front liner can remain installed.

- a. Remove rear liner.
  - i. Remove optional (roof mounted) speakers and/or dome light, if installed.
  - Remove three screws (A) beneath B-pillar cross-member, four screws (B), two push darts (C) at C-pillar cross-member, and two each dome light screws (D) and washers (E) (if installed). Retain hardware.



 iii. Carefully pull LH and RH edges of liner down from between ROPS and roof seal, then remove rear edge of liner (F) from roof support channel (G). Set liner aside.



- b. Remove mid liner.
  - i. Remove optional (roof mounted) speakers and/or dome light, if installed.
  - ii. Remove five push darts (H), and two each dome light screws (1) and washers (8) (if installed).



iii. Carefully pull LH and RH edges of liner from between ROPS and roof seal. Set liner aside.

#### **NON-CREW VEHICLES**

#### NOTE Front liner can remain installed.

- a. Remove optional (roof mounted) speakers and/ or dome light, if installed.
- b. Remove seven push darts (A), two from rear edge and five from front edge. Retain push darts.



c. Remove two each screws (B) and washers (C) (if installed).



d. Carefully pull LH and RH edges of liner from between ROPS and roof seal, then remove rear edge of liner from roof support channel (D).



3. Install light assembly.

#### **VEHICLES WITH NETS**

a. Remove screw ① and nut plate M securing net anchor to upper ROPs mounting bracket. Retain hardware.



Align holder with lower ROPS mounting bracket, then tighten screws.

#### NOTE

Installation on non-crew vehicle shown. Installation on crew vehicle **C-pillar** similar; installation on crew vehicle **B-pillar** will use UPPER mounting holes on light assembly.



 c. Install holder ② to lower ROPs mounting bracket using two screws ③ and nut plate ④. Tighten screws.



#### **VEHICLES WITH DOORS**

NOTE Full doors shown; half doors similar.

a. Close and fully latch door, then remove two upper chassis-side hinge screws ① and nut plate . Retain hardware.



b. Install light assembly ① (with holder ②) to upper ROPs mounting bracket using retained screws ① and nut plate . Align holder with lower ROPS mounting bracket, then tighten screws.

#### NOTE

Installation on non-crew vehicle shown. Installation on crew vehicle **C-pillar** similar; installation on crew vehicle **B-pillar** will use UPPER mounting holes on light assembly.

Installation on vehicles equipped with doors will result in one extra screw ③. If desired, replace any existing screw ① with new screw ③.



c. Install holder (2) to lower ROPs mounting bracket using two screws (3) and nut plate (4). Tighten screws.



- d. Adjust door as required. See installation instructions included with door kit.
- 4. Torque four screws (3) to specification.

**TORQUE** 17 ft. lbs. (23 Nm) ± 10% 5. Drill 3/4 inch (19 mm) hole through plastic roof panel for grommet (N). Do NOT drill through metal ROPS structure. Debur hole.



- 6. Route beacon light connector (P) forward through hole, then join to connector (Q) on Light Bar Harness Extension Kit (sold separately).
- 7. Reinstall roof liner(s) (if removed). See Step 2.

## **FEEDBACK FORM**

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking **HERE** if viewing on a PC.

