

QUICK RELEASE STEERING HUB INSTRUCTIONS (P081Z281BL)

Note: For further information on installation instructions please visit our website www.proarmor.com



Start the Installation by removing the steering wheel center cap using a flat head screw driver.



Then remove the center nut with a 24mm socket. Most vehicles require a steering wheel puller to safely remove the steering wheel.



Fully remove the OEM steering wheel and replace it with the steering wheel hub adapter. The hubs fits several models so shaft might differ slightly from picture above.



Place the adapter on the steering wheel shaft with the thicker side first. Make sure the tires are straight and the notch on the adapter is top dead center.



Thread the nut onto the steering wheel shaft, tighten to factory torque specs.



Squeeze the Quick release hub, align the pin on the inside of the hub to the notch on the adapter and install onto the adapter.



QUICK RELEASE STEERING HUB INSTRUCTIONS (P081Z281BL)



Place the wheel in the right location and tighten the hardware from your wheel down to the wheel manufacturer's specifications.



- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- Always wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- Disclaimer please read: This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.

Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

• If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

