



WARNING

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.

Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

If you have questions about your installation or are unable to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

RZR XP & XP 4 TRAILING ARM ARMOR INSTRUCTIONS (P2214P366)



1

Slide trailing armor up and over trailing arm as shown, lining up (3) mounting holes. Tighten (3) provided, M6 Bolts. Do NOT over-tighten bolts.



2

Insert and tighten (3) M6 bolts on the inside of trailing arm and tighten, securing to vehicle. Repeat for opposite side of vehicle. Do NOT over-tighten bolts.



HARDWARE INCLUDED:

- (2) TRAILING ARMOR
- (12) M6 BOLTS