MAINTENANCE SCHEDULE

CHECK YOUR OWNER'S MANUAL FOR ADDITIONAL RECOMMENDED SERVICE ITEMS AND VEHICLE-SPECIFIC TIMING

PRF-SEASON

ENGINE OIL: FILL TO RECOMMENDED LEVEL

> GENERAL LUBRICATION: ALL FITTINGS, PIVOTS, CABLES, ETC.

CHECK FOR WEAR: TEST, CLEAN & CHECK FLUID LEVELS

SPARK PLUGS, TRACK, SLIDER, DRIVE BELT, & CARBIDES 500 MI (800 KM)

IN-SEASON

ENGINE OIL: FILL TO RECOMMENDED LEVEL

> DRIVE BELT: INSPECT & ADJUST

> > FOLLOW BREAK-IN PROCEDURE AFTER INSTALLATION

TRANSMISSION FLUID: CHANGE 5000 MI (3500 KW)

IN-SEASON

ENGINE OIL:FILL TO RECOMMENDED
LEVEL

CHECK FOR WEAR: TEST, CLEAN & CHECK FLUID LEVELS

SPARK PLUGS, TRACK, SLIDER, DRIVE BELT, & CARBIDES

DRIVE BELT: INSPECT & ADJUST

REPLACE AS NEEDED

END OF SEASON

DRIVE BELT:

REMOVE

CONSULT OWNER'S MANUAL

FUEL:

ADD FUEL STABILIZER

TRACK: INSPECT

REDUCE TENSION DURING STORAGE

BATTERY: REMOVE

CHECK OUT OUR **PARTS FINDER ON POLARIS.COM** FOR EASY PARTS LOOK-UP, PARTS IDENTIFICATION, VIEWS OF ASSEMBLIES, AND MORE!