


## HEAD TEMPERATURE SENSOR INSTALLATION GUIDE

## DIRECT-BOLT TEMPERATURE SOLUTION:



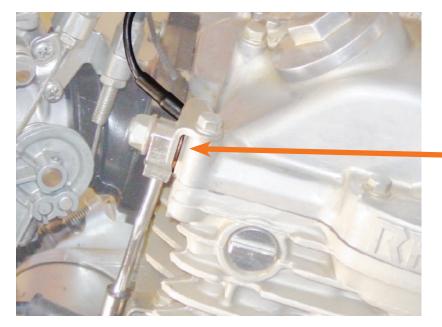

Head Temperature Sensor

## **Direct Bolt Temperature Solution:**

A Trail Tech head temperature sensor may be installed in-line with the oil line to enable temperature. Use the copper head temperature sensor to replace the washer between the oil line and head, (as shown in the photo to the left.)

IMPORTANT: Properly center the temperature sensor when tightening the bolt. Off-center installation may result in a system leak. Test the system for leaking *before* a long ride.

## 010-ELV-10

Tech Support: (844) 378-8143

technicalservice@apexproductgroup.com