

Tech Support: (844) 378-8143 technicalservice@apexproductgroup.com

## RADIATOR FIN SENSOR INSTALLATION GUIDE

Carefully insert the temperature probe between the radiator fins. (See Below photos)
Make sure that the probe is lined up parallel to the fins to avoid damage. If the probe is too
difficult to press in, use a small wood or plastic block against the back side of the sensor while
guiding the sensor straight into the radiator. (See Below photos)

TIP: To Compensate for the influence of ambient air passing across the sensor, apply thermal grease (included in kit) into the gap between the fins of the radiator where the sensor will be installed. It is important to place the grease only in the gap. Grease on the surface of the radiator will attract dirt and reduce function.

