

TTO KNOWLEDGE IS POWER.



Function: Temperature

TEMP RANGE: -40°C/°F to 300°C/575°F

Use Instructions




TEMPERATURE METER:

Press button to toggle 3 main screens:

- | | |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------|
| 1: Temperature | - Hold button to enter setup mode:
Choose between °Fahrenheit or °Celsius
Edit the High Temperature alert threshold |
| 2: Max Temp | - Hold button to reset the max temperature readout
"Hi" appears when temperature is above threshold |
| 3: Clock | - Hold button to edit current time of day |


Temperature Sensor Installations

CHT Cylinder Head Spark Plug Sensor Installation:

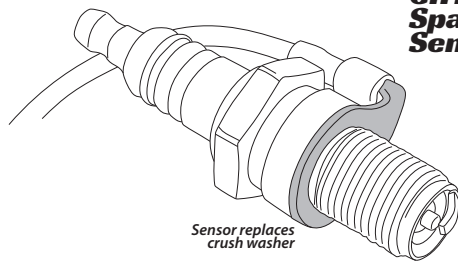


1. Remove crush washer from spark plug
2. Replace with temperature sensor
3. Re-install spark plug

Radiator Fin Sensor Installation:

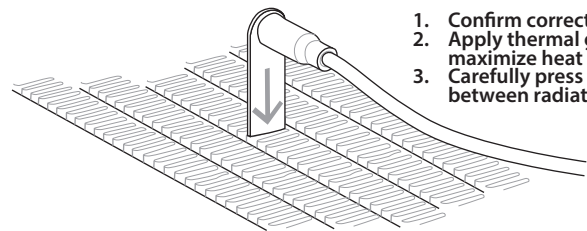


1. Confirm correct size
2. Apply thermal grease to maximize heat transfer
3. Carefully press sensor between radiator fins

Screw Sensor Installation:

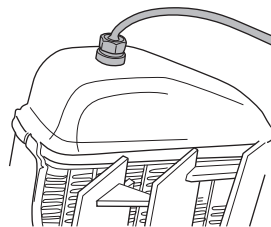

1. Remove stock bolt
2. Replace with sensor bolt
Use nylon washer to ensure seal

Radiator Hose Sensor Installation:

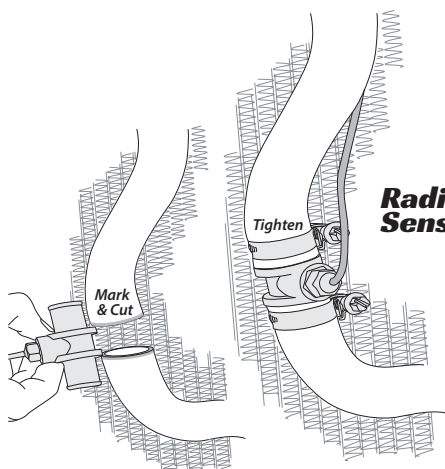

1. Measure inner diameter of hose before cutting
2. Mark hose
3. Cut hose
4. Slide on hose clamps
5. Install sensor & tighten hose clamps

CVT (Continuously Variable Transmission) Sensor Installation:

1. Drill 13/64" (5mm) hole in hard plastic CVT exhaust
2. Thread sensor into hole
The sensor threads are M6x10
3. Use high temp RTV (silicone gasket sealer) to seal case cover
Not included in kit
4. 200°F+ Warning: CVT belt wear occurs more rapidly at high temperatures
You may want to let the belt cool down to increase overall lifespan

