


HANDLEBAR HOOK KIT INSTALLATION INSTRUCTIONS

TOOLS REQUIRED

- 5mm Allen Wrench - Provided

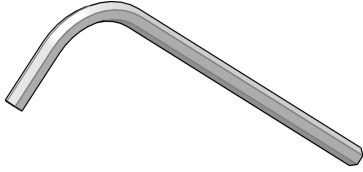

INSTALLATION VIDEO

Scan the QR code for a self-help video to help guide in kit installation.




KIT INSTALLATION PROCEDURE


1. Park the vehicle on a flat surface.
2. Push the engine stop switch to the OFF position.
3. Turn the key to the OFF position, set the parking brake, and remove the key.
4. Loosen the fastener ① to remove the hook assembly from the handlebar. Repeat for the opposite handlebar.

IMPORTANT


Do not completely remove the fastener at this step. The handlebar hook can be removed as an assembly.

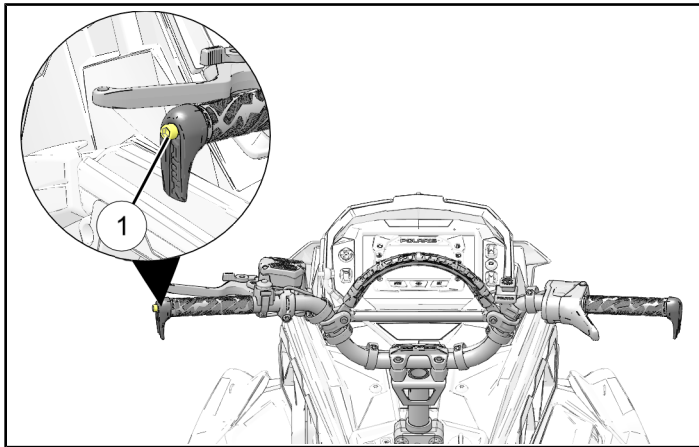

5. Remove and retain both handlebar fasteners ① and wedges ② to be reused with the *NEW* handlebar hooks. Retain OLD handlebar hooks ③ for later step.

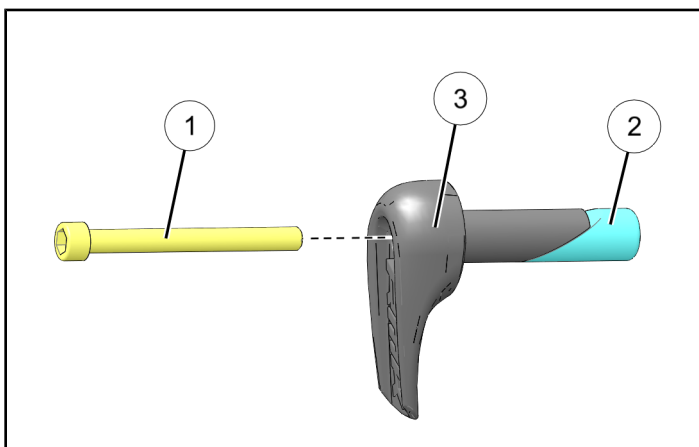


6. Pre-assemble the fasteners ① and wedges ② with the *NEW* handlebar hooks ④ provided in the kit.

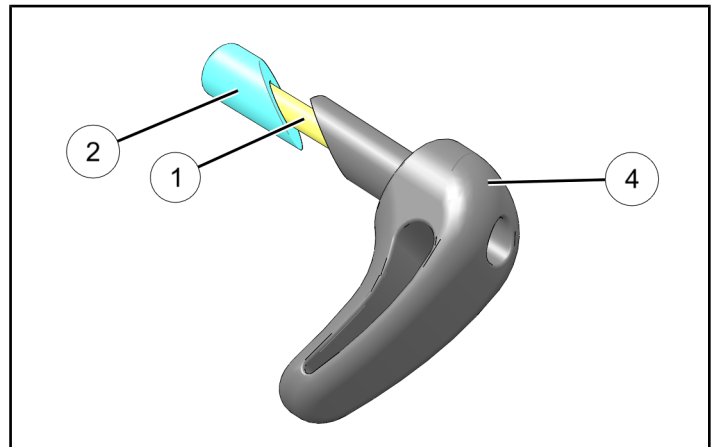

7. Install the updated handlebar hook assemblies (pre-assembled in step 6) into both ends of the handlebar.


DO NOT TORQUE FASTENERS AT THIS TIME

8. Set both hooks so that they are pointed directly at the ground.

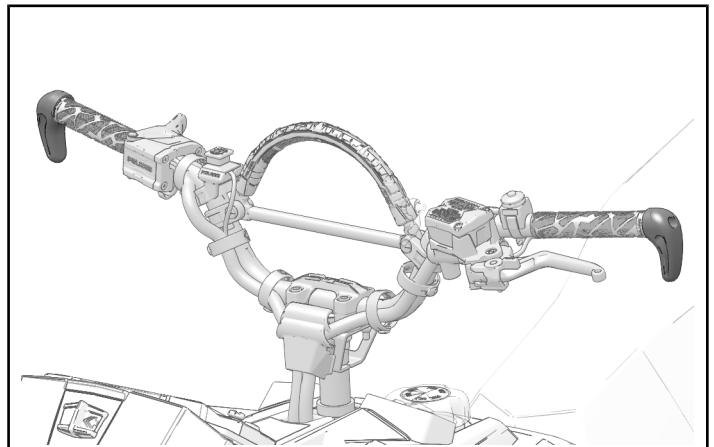

9. Torque the fasteners until both handlebar hooks cannot be spun by hand.

10. Install OLD handlebar hooks into provided shipping mailer.

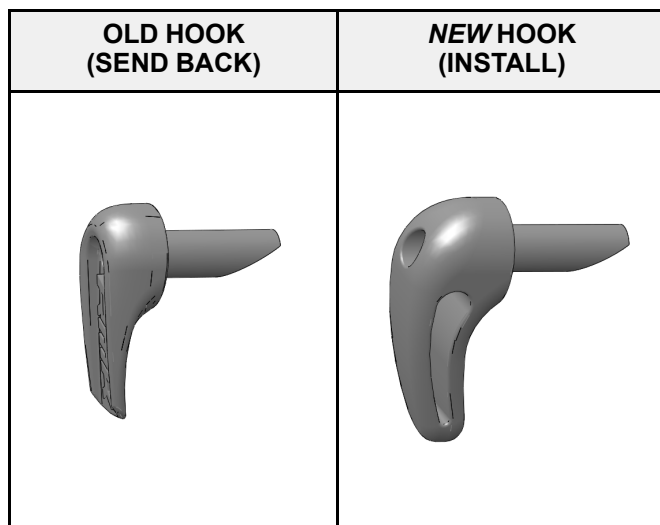

11. Seal shipping mailer and place into mailbox or local USPS (US customers) or Canada Post (Canada customers) receptacle.

If the OLD handlebar hooks are not returned to Polaris per the provided instructions, you will continue to receive communications related to this Safety Recall.

 **WARNING**

Under no circumstances shall the handlebar hooks be re-used, sold, or re-purposed for another application. By opting into the self repair option, it is your responsibility to return OLD handlebar hooks back to Polaris.