





GODFREY


2021 Monaco Seating Occupancy Charts

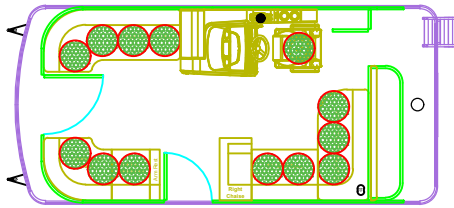


195 C3

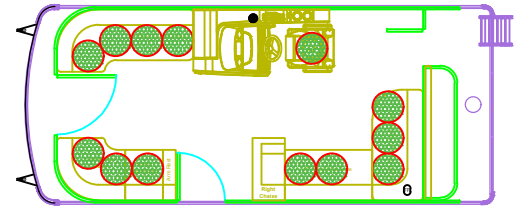


215 C3

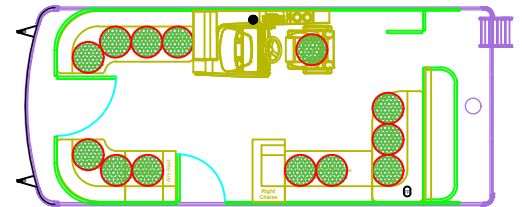


215 C4

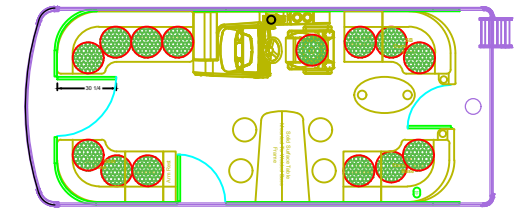


215 MT

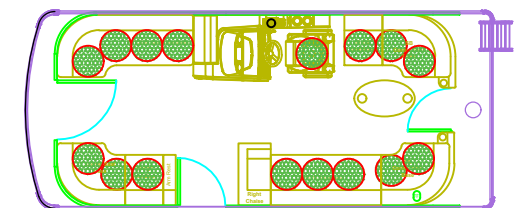


215 SB

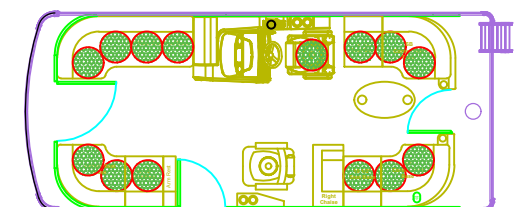


215 SBC

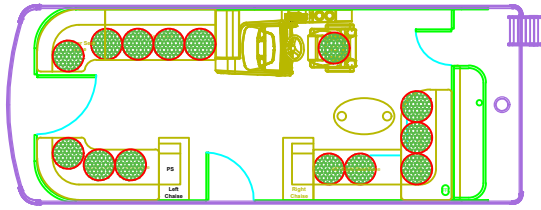


235 C3

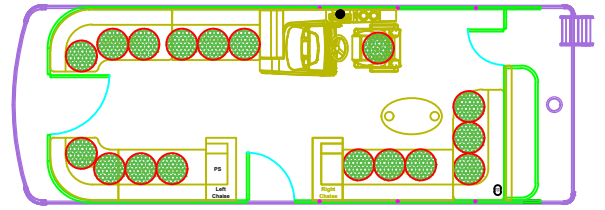


255 C3

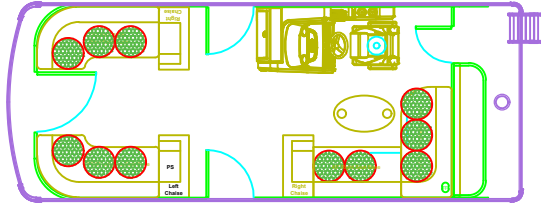


235 C4

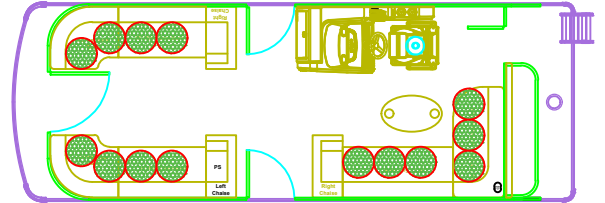


255 C4

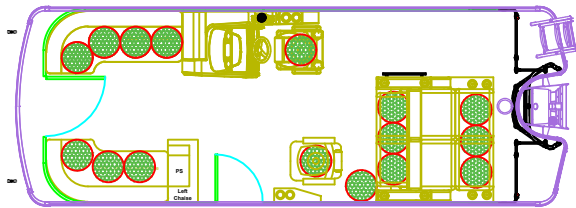


235 DFLC

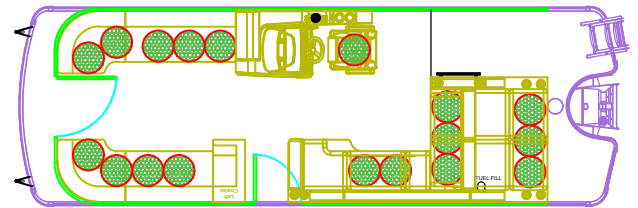


255 DFL

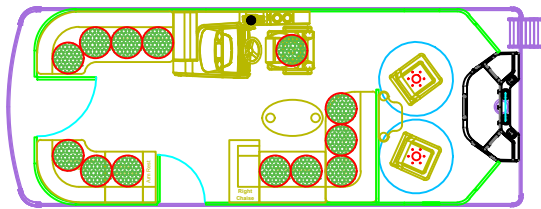


235 FS

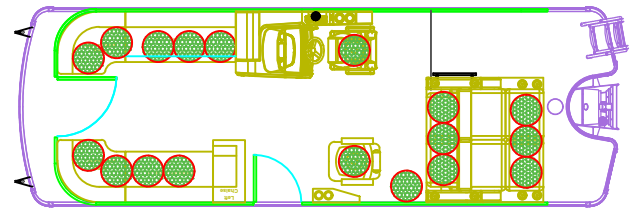


255 DFLC

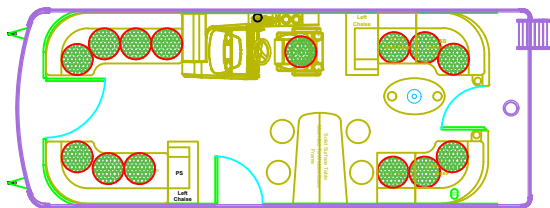


235 MT

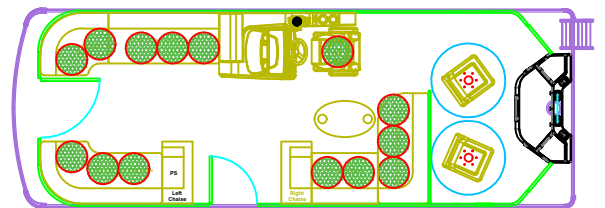


255 FS

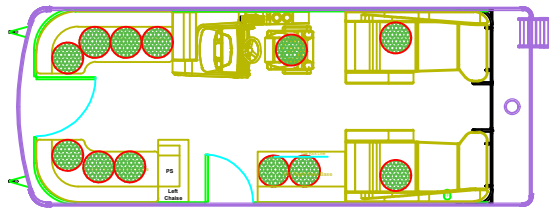


235 RL

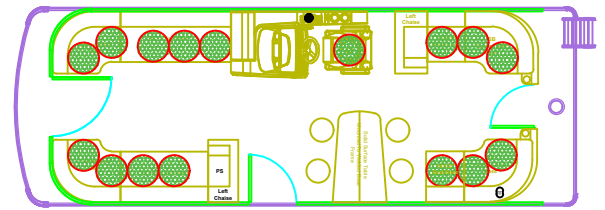


255 MT

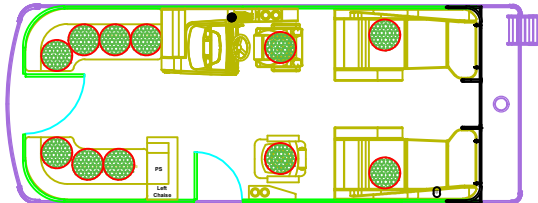


235 RLC

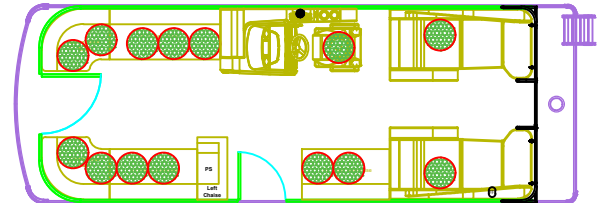


255 RL

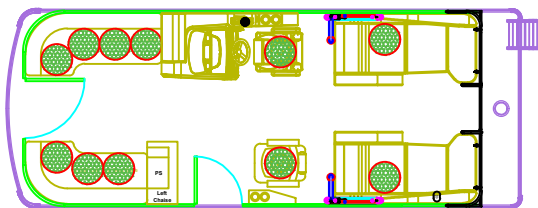


235 RLC-A-T

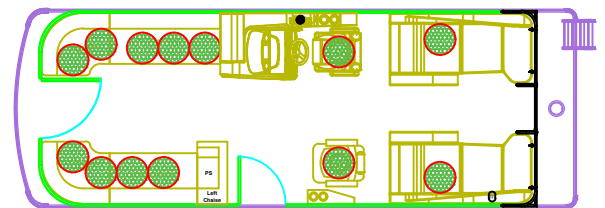


255 RLC

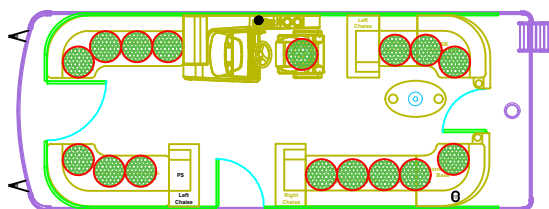


235 SB

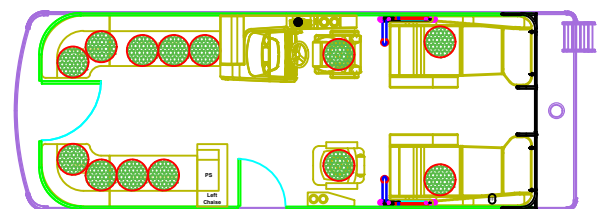


255 RLC-A-T

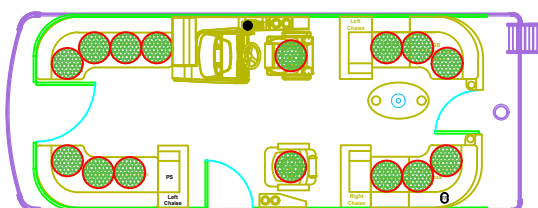


235 SBC

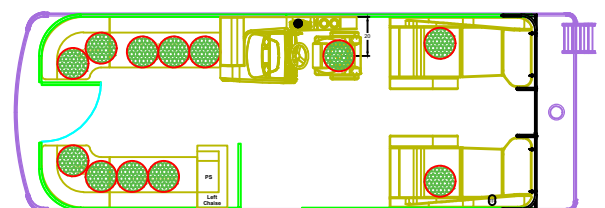


255 RLH

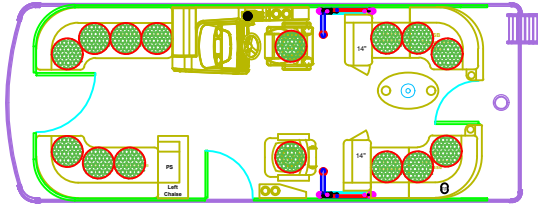


235 SBC-A-T

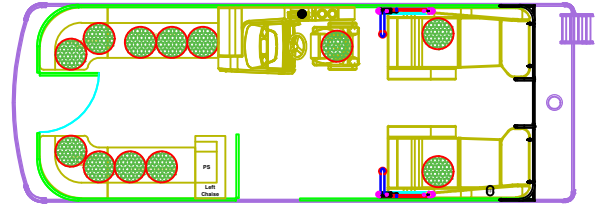


255 RLH-A-T

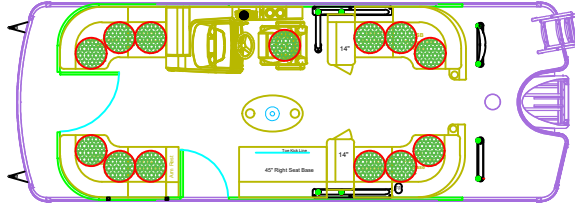


235 SD

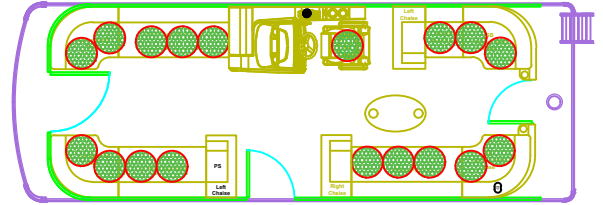


255 SB

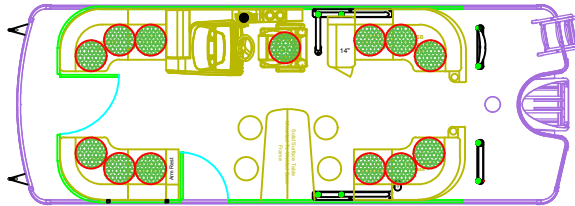


235 SDB

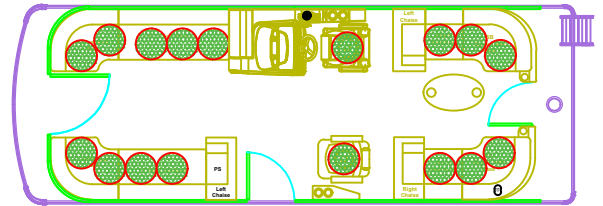


255 SBC

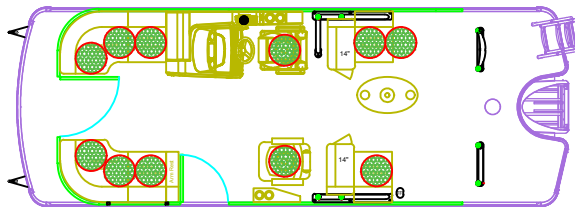


235 SDC

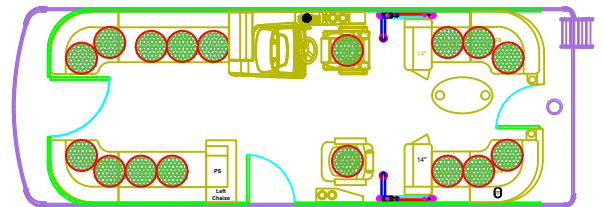


255 SBC-A-T

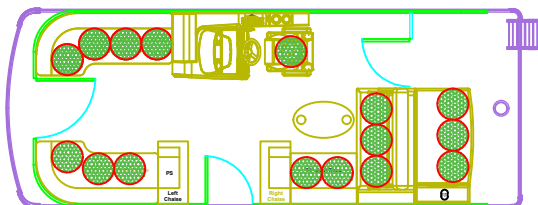


235 SFL

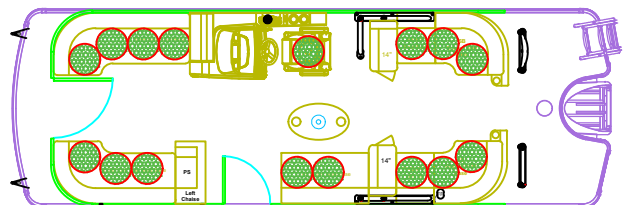


255 SD

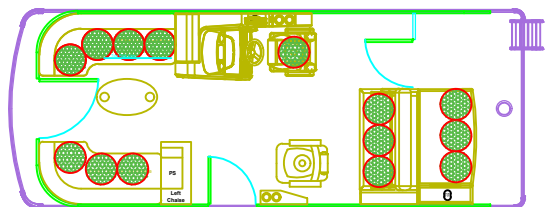


235 SFLC

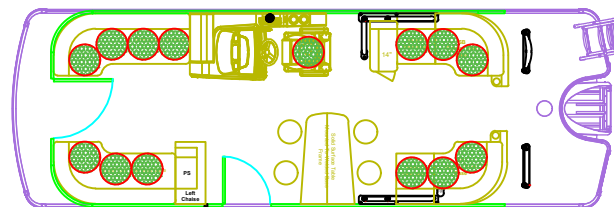


255 SDB

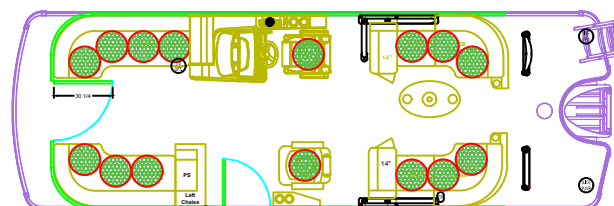

255 SDC

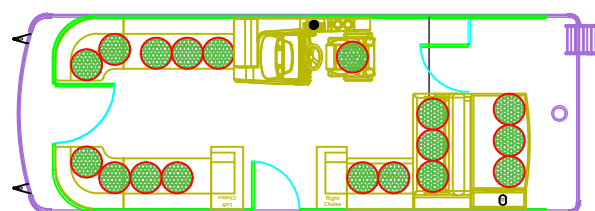

255 SFL

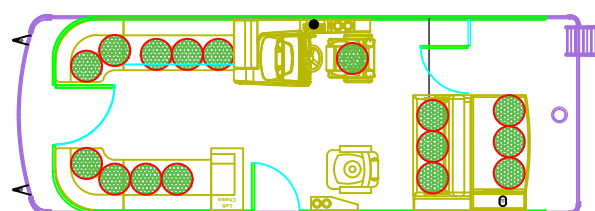

255 SFLC