


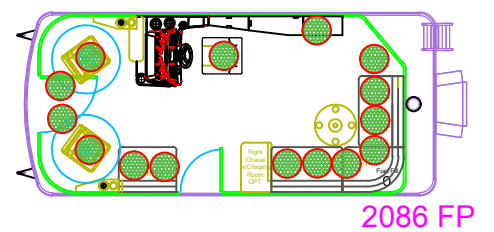
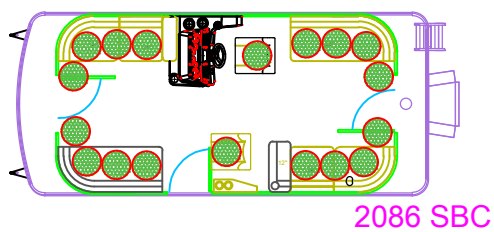
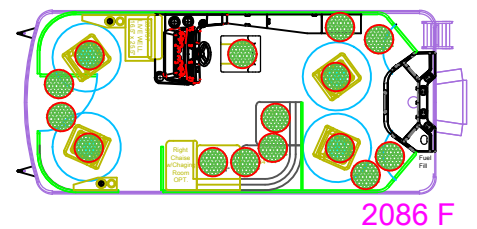
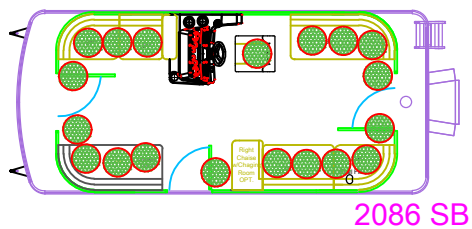
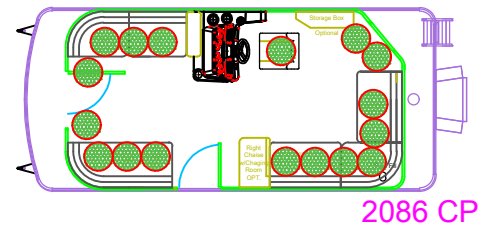
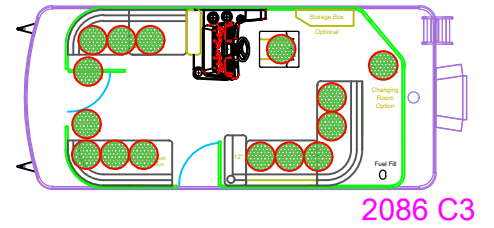


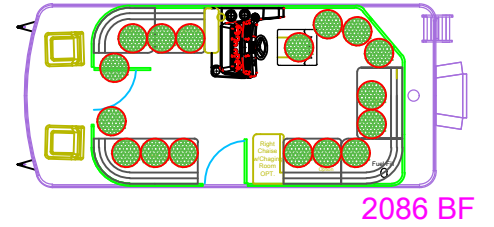


GODFREY

2021 Sweetwater Seating Occupancy Charts

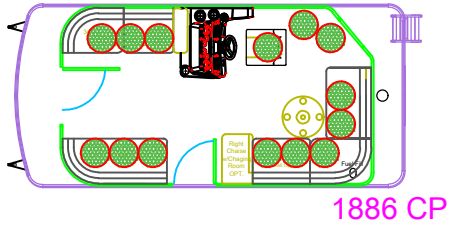


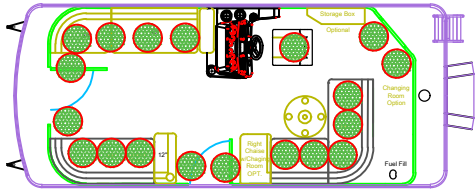


2186 C

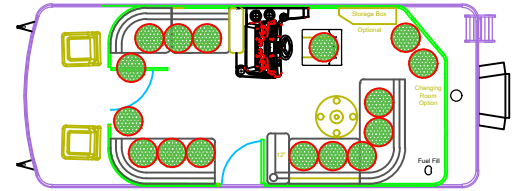


2286 BF

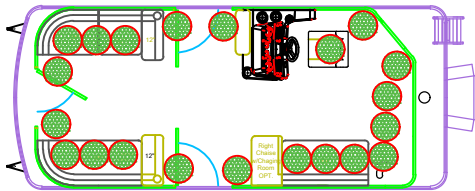


2186 C4

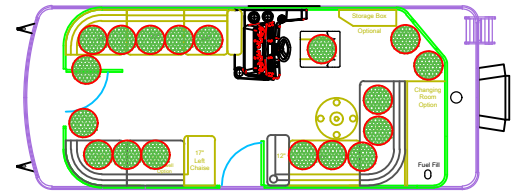


2286 C3

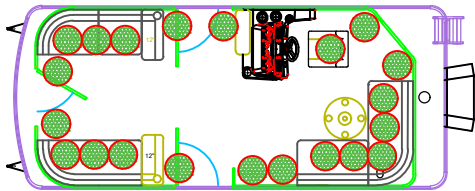


2186 C4H

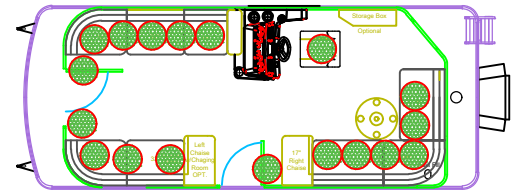


2286 CP

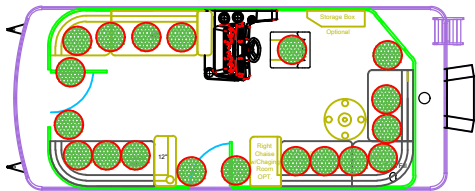


2186 CP

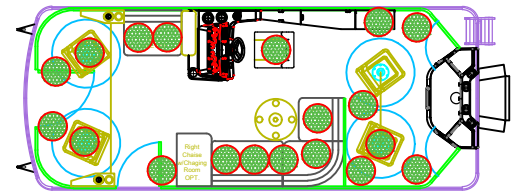


2286 F

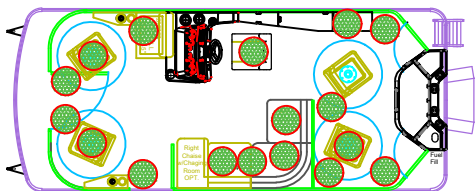


2186 F

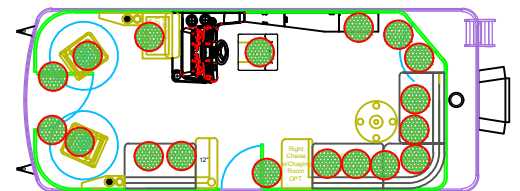


2286 FP

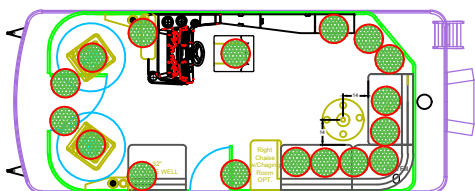


2186 FP

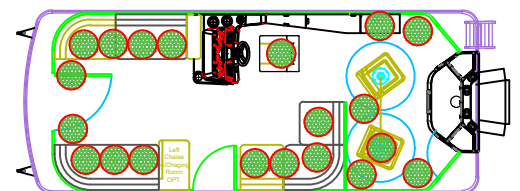


2286 FS

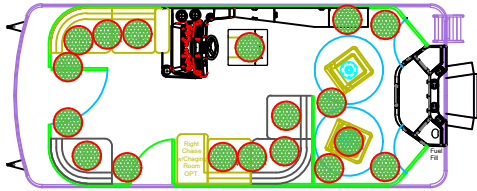


2186 FS

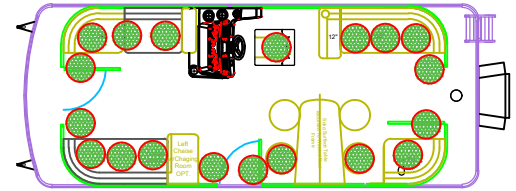


2286 MT

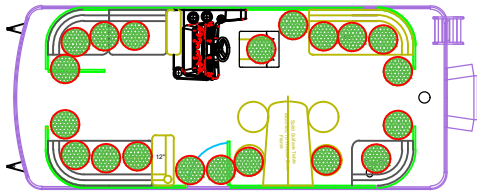


2186 MT

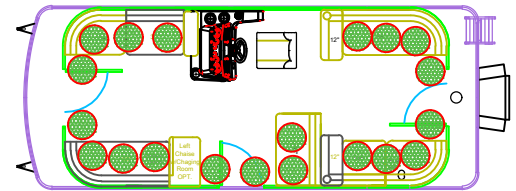


2286 SB F

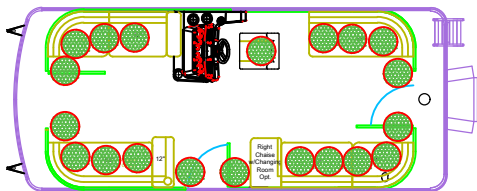


2186 SB

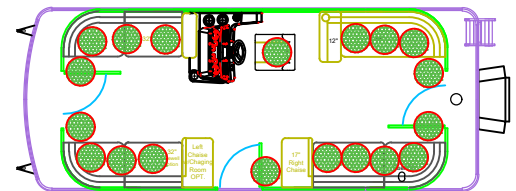


2286 SB

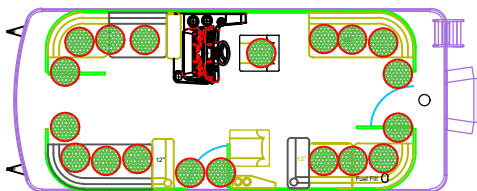


2186 SBC

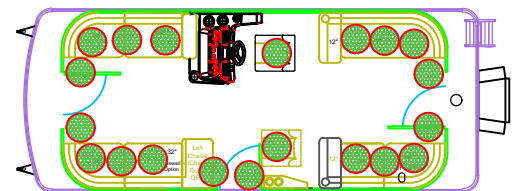













2286 SBC

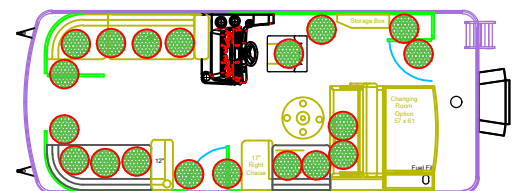


2286 SFL

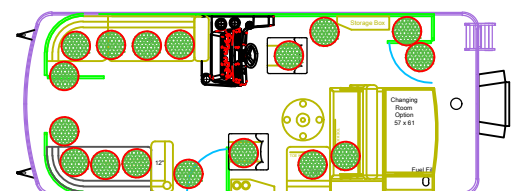


2286 SFLC

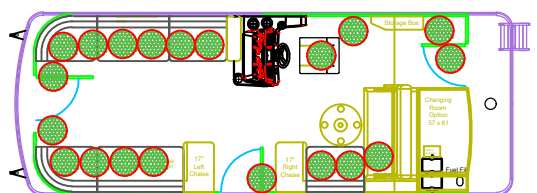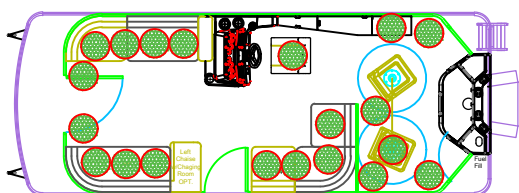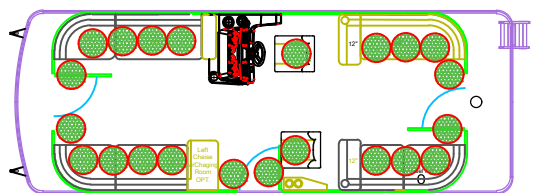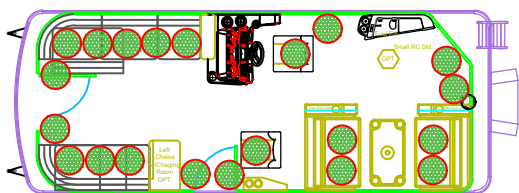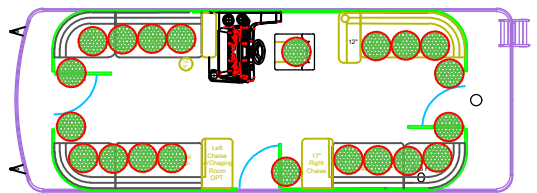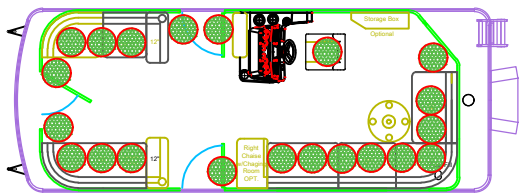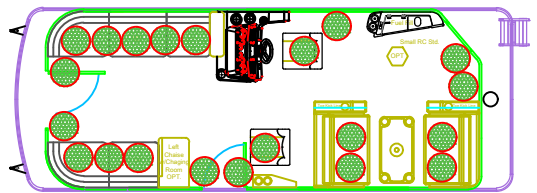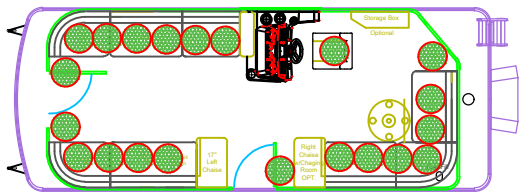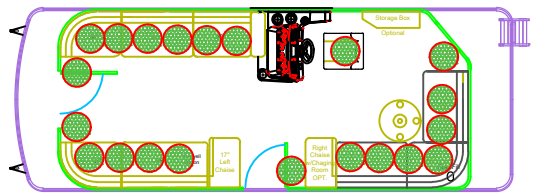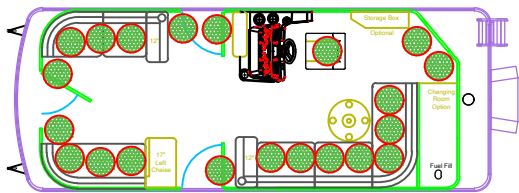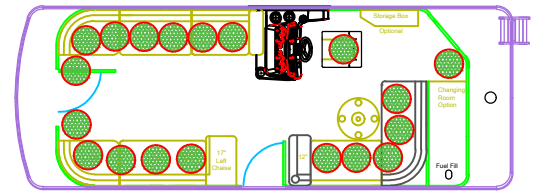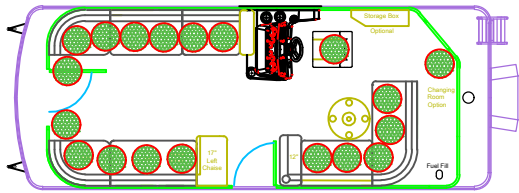


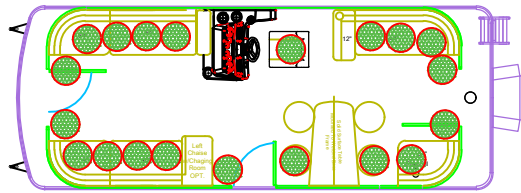


2386 MT

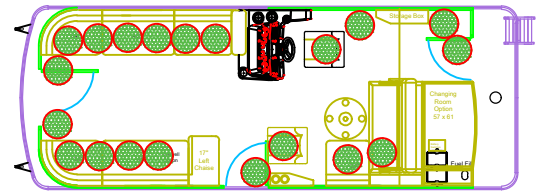


2486 SFLC

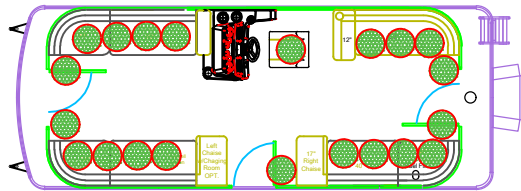

2386 SB

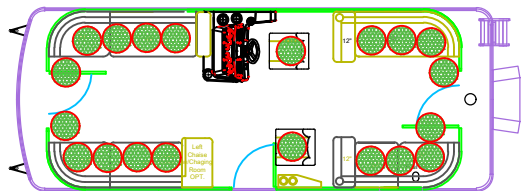


2386 SBC

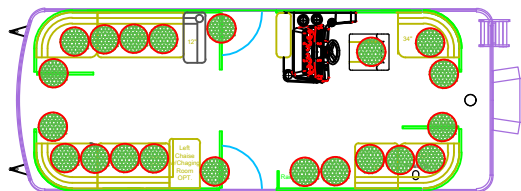


2386 SBH




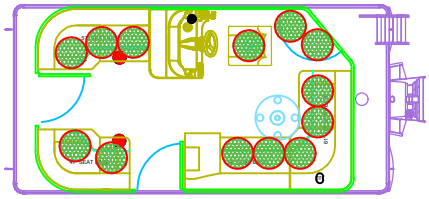


1680 CX

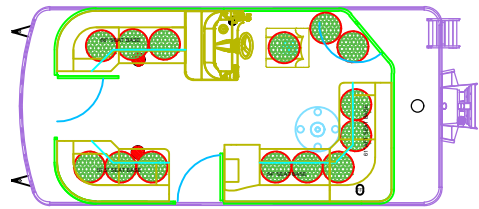


1886 CX

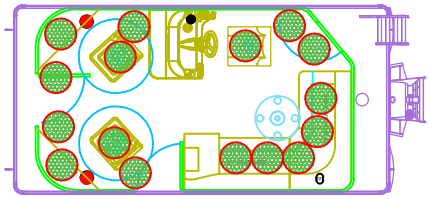


1680 FX

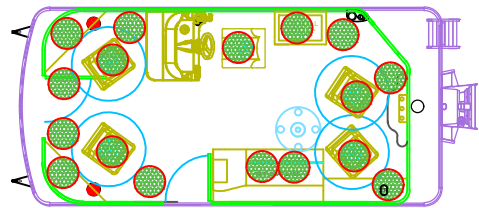


1886 FX

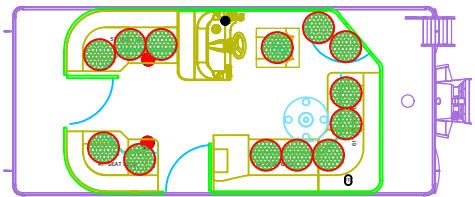


1880 CX

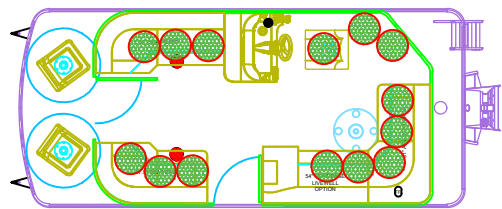


2086 BFX

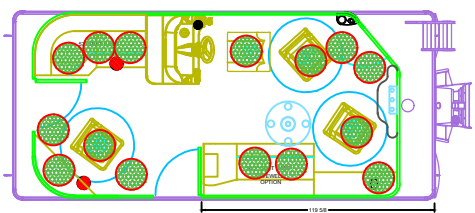


1880 FX

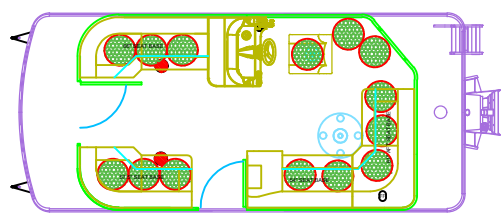


2086 CX

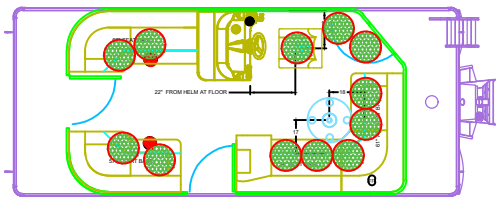


2080 CX

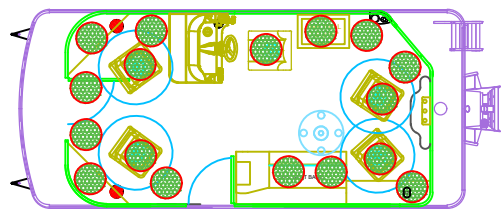


2086 FX

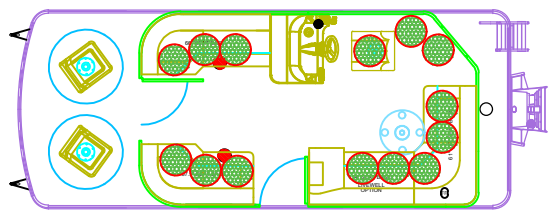

2286 BFX

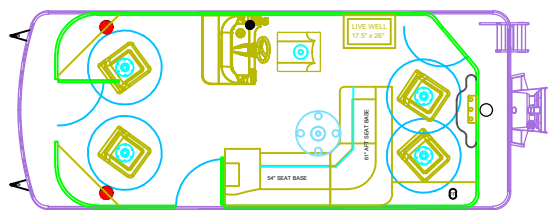

2286 FX

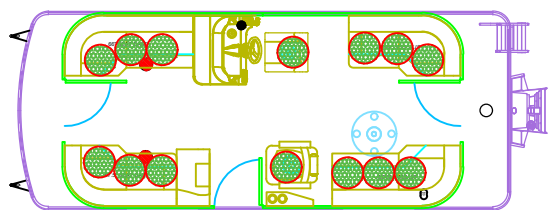

2286 SBX