

FRONT HIGHWAY BAR KIT



P/N 2884718-XXX


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

KIT CONTENTS

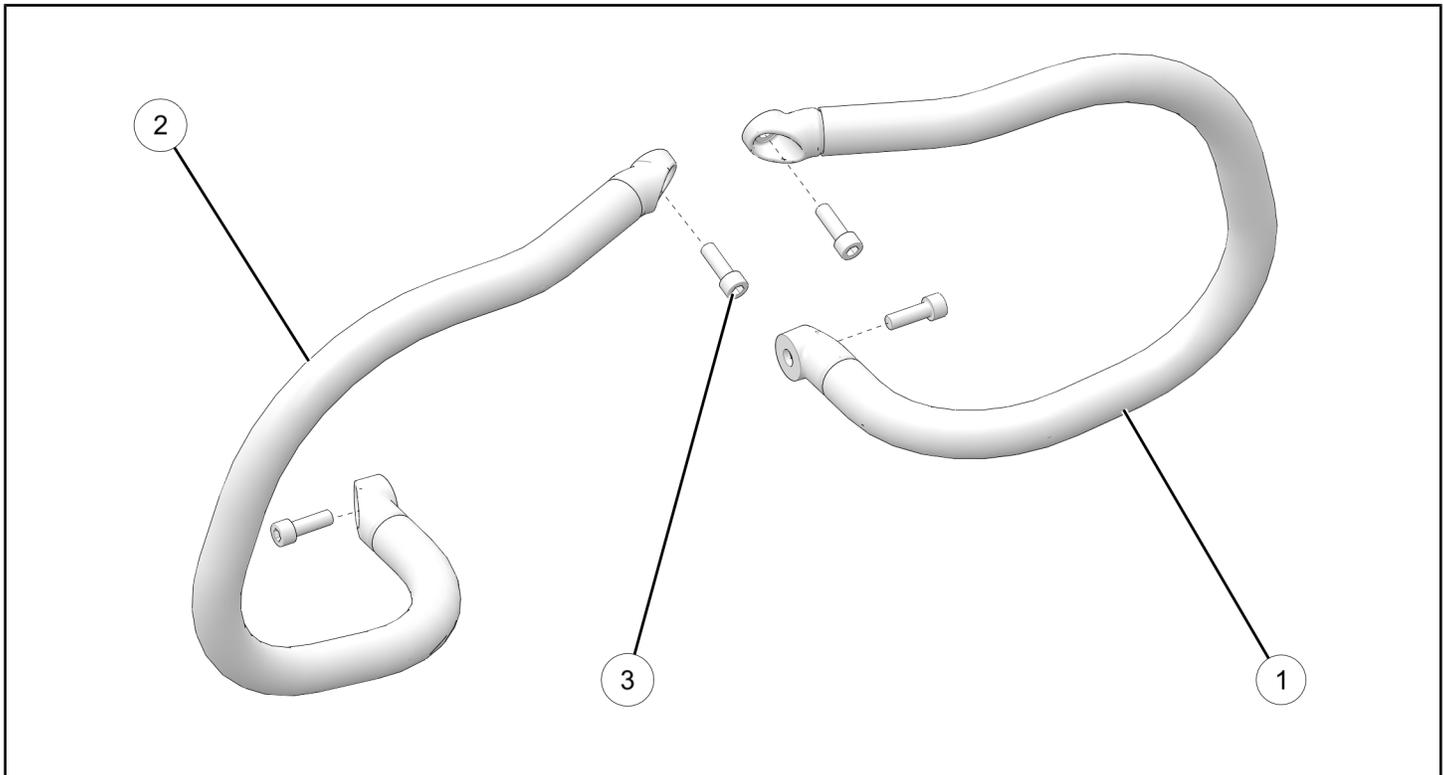

NOTICE

XXX = Indian Motorcycle® color code (For example: 266 = Black)

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Front Highway Bar, LH	N/A
2	1	Front Highway Bar, RH	N/A
3	4	Screw, Socket Head, M10 x 1.5 x 30 mm	7527931

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Hex Bit, Metric
- Torque Wrench

IMPORTANT

Your Indian Motorcycle® Front Highway Bar Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Park motorcycle on a flat surface, fully extend kickstand, and make sure vehicle is stable.
2. Turn key or ignition switch to OFF position and remove key. If equipped with keyless fob, remove fob from proximity of vehicle.

ACCESSORY INSTALLATION

⚠ WARNING

Highway bar is not designed to protect you from injury in a collision.

IMPORTANT

Protect all finished and painted surfaces during these operations.


INSTALLATION WITH MID FOOT CONTROLS

NOTICE


LH highway bar shown. RH Similar.

1. Install LH highway bar ① on frame and align mounting holes. Loosely install the upper mounting screw ③.

Do not torque screw at this time.

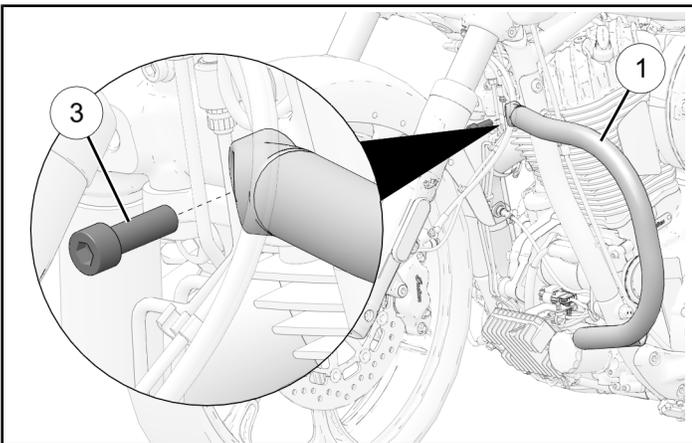

2. Loosely install the lower mounting screw ③.

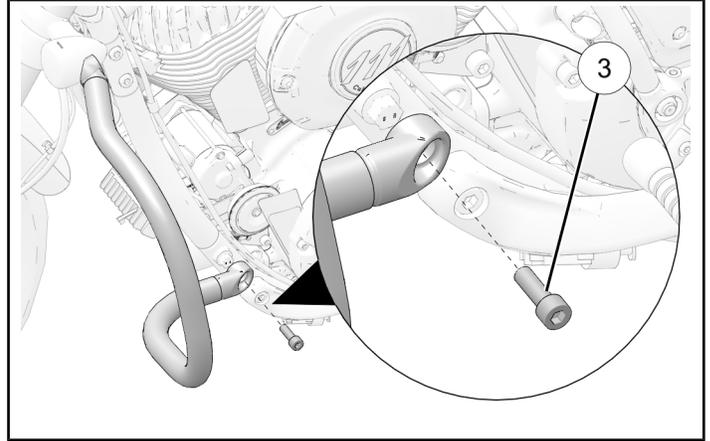

3. Torque mounting screws to specification.

Torque the upper mounting screw first.


TORQUE

Highway Bar Mounting Screws ③:
50 ft-lbs (68 N·m)


INSTALLATION WITH FORWARD FLOORBOARDS OR FORWARD PEGS

1. Install LH highway bar ① on frame and align mounting holes. Loosely install the upper mounting screw ③.

Do not torque screw at this time.

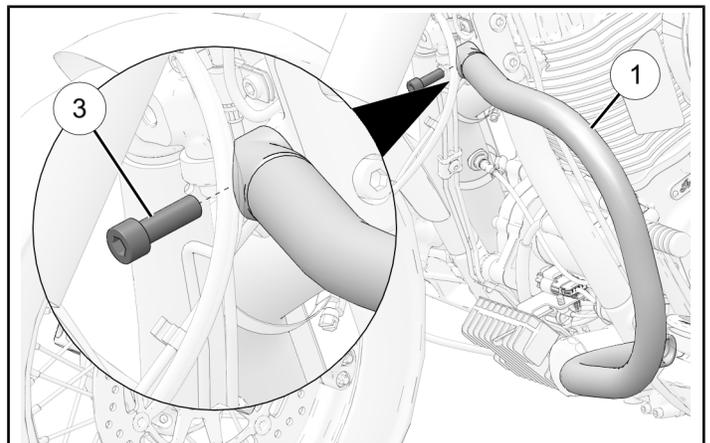

2. Loosely install the lower mounting screw ③.

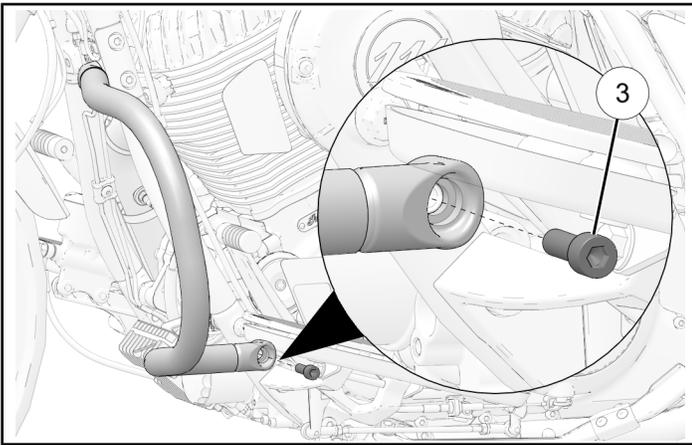

3. Torque mounting screws to specification.

Torque the upper mounting screw first.


TORQUE

Highway Bar Mounting Screws ③:
50 ft-lbs (68 N·m)

4. Remove the two screws ① securing the RH foot control and lower the control out of the way.


IMPORTANT

Make sure to support and keep the RH foot control upright as the brake line will remain connected.

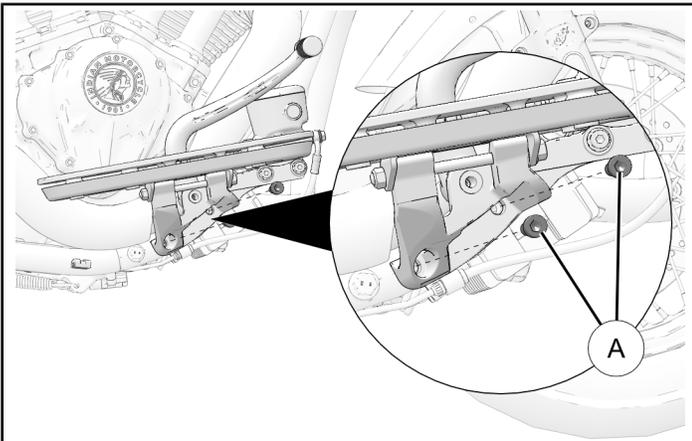


5. Install RH highway bar ② on frame and align mounting holes. Loosely install the upper mounting screw ③.

Do not torque screw at this time.

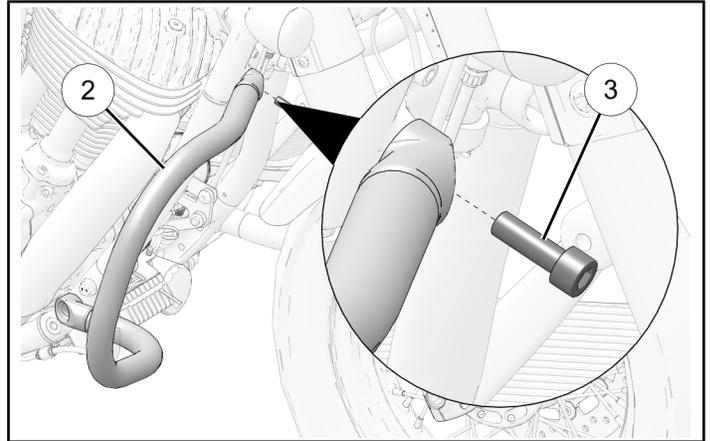

6. Loosely install the lower mounting screw ③.

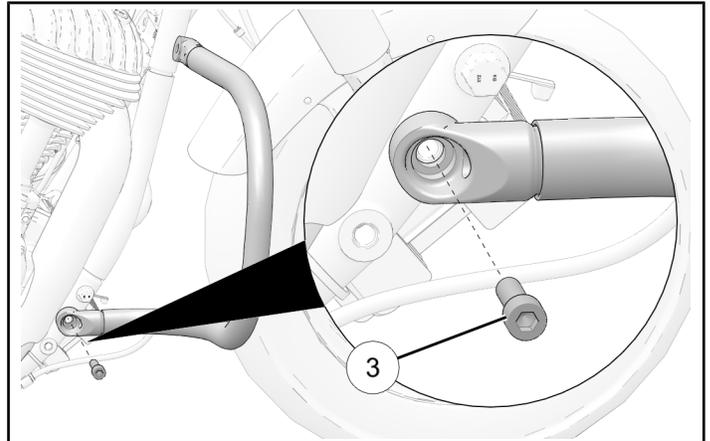

7. Torque mounting screws to specification.

Torque the upper mounting screw first.


TORQUE

Highway Bar Mounting Screws ③:
50 ft-lbs (68 N·m)

8. Install RH foot control back into place and align mounting holes. Install the two screws **A** securing the RH foot control and torque to specification.

TORQUE

Foot Control Mounting Screws **A**:
35 ft-lbs (48 N·m)

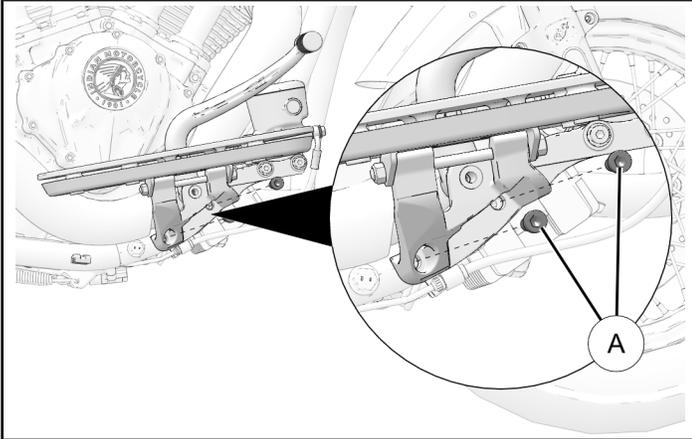

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

