

EXHAUST TIP KIT



P/N 2884721-XXX; 2884722-XXX

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

REQUIRED SOLD SEPARATELY

Only parts for installation of the Indian Motorcycle® Exhaust Tip Kit are included. Prior installation of the following additional kits are also required (sold separately):


- Slip-On Exhaust Kit, P/N 2884720-XXX

NOTICE

XXX = Indian Motorcycle® color code (For example: 266 = Black)

KIT CONTENTS


EXHAUST TIP, SLASH CUT KIT P/N 2884721-XXX

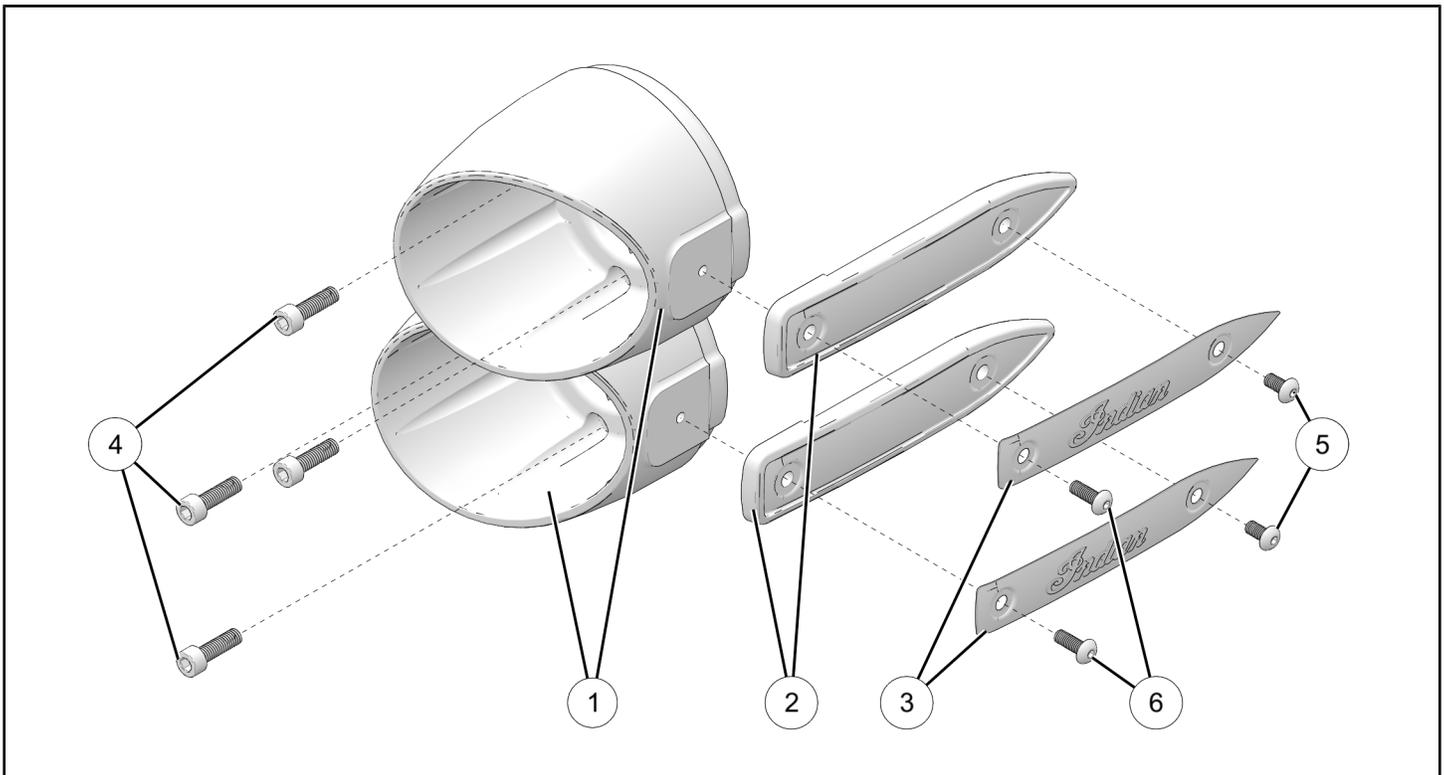

| REF | QTY | PART DESCRIPTION | P/N AVAILABLE SEPARATELY |
|-----|-----|----------------------------|--------------------------|
| 1 | 2 | Exhaust Tip, Slash Cut | N/A |
| 2 | 2 | Exhaust Tip Tab, Slash Cut | N/A |
| 3 | 2 | Rear Exhaust Badge | N/A |

| REF | QTY | PART DESCRIPTION | P/N AVAILABLE SEPARATELY |
|-----|-----|--------------------------------|--------------------------|
| 4 | 4 | Screw, Socket Head, M6 x 20 mm | N/A |
| 5 | 2 | Screw, Button Head, M5 x 10 mm | N/A |
| 6 | 2 | Screw, Button Head, M5 x 14 mm | N/A |

EXHAUST TIP, FISH TAIL KIT P/N 2884722-XXX

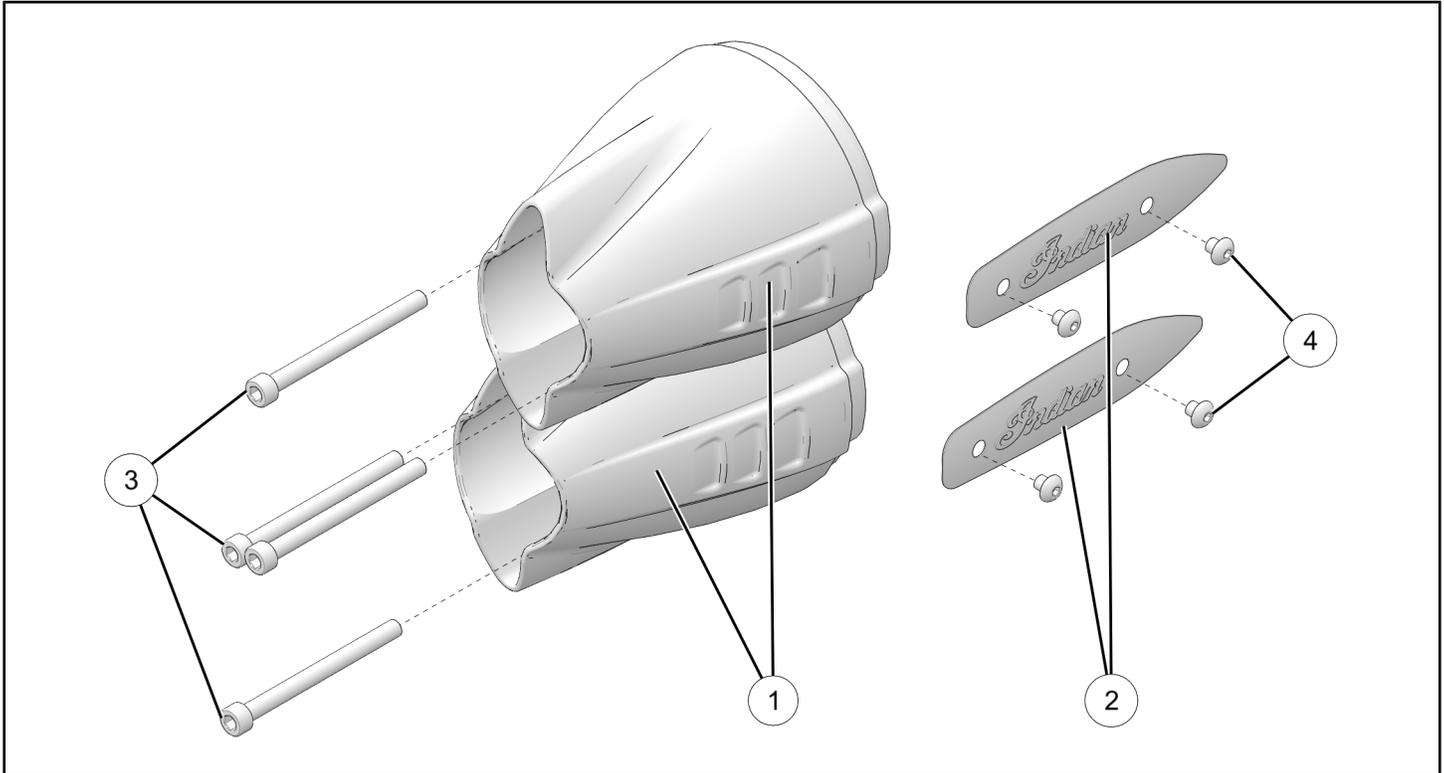

| REF | QTY | PART DESCRIPTION | P/N AVAILABLE SEPARATELY |
|-----|-----|--------------------------------|--------------------------|
| 1 | 2 | Exhaust Tip, Fish Tail | N/A |
| 2 | 2 | Rear Exhaust Badge | N/A |
| 3 | 4 | Screw, Socket Head, M6 x 70 mm | N/A |
| 4 | 4 | Screw, Button Head, M5 x 5 mm | N/A |

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Hex Bit, Metric
- Torque Wrench

IMPORTANT

Your Indian Motorcycle® Exhaust Tip Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

⚠ WARNING

Engine and exhaust components get hot and remain hot for a period of time after the engine is stopped. Wear insulated protective clothing or wait for components to cool sufficiently before working on the vehicle.

1. Park motorcycle on a flat surface, fully extend kickstand, and make sure vehicle is stable.
2. Turn key or ignition switch to OFF position and remove key. If equipped with keyless fob, remove fob from proximity of vehicle.

ACCESSORY INSTALLATION

SLASH CUT EXHAUST TIPS


1. Install the exhaust tips ① into muffler and attach with two screws ④ for each exhaust tip. Torque screws to specification.

NOTICE

Make sure the exhaust tip is fully seated into the muffler body before installing the screws.


TORQUE

Exhaust Tip Screws ④:
80 in-lbs (9 N·m)

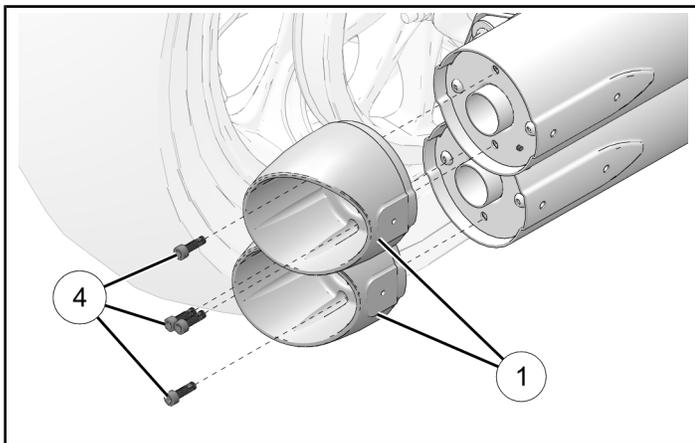

2. Remove the protective film from the outside of the exhaust badge ③ and adhesive film from the inside.


3. Install each exhaust badge ③ onto each exhaust tip tab ②.

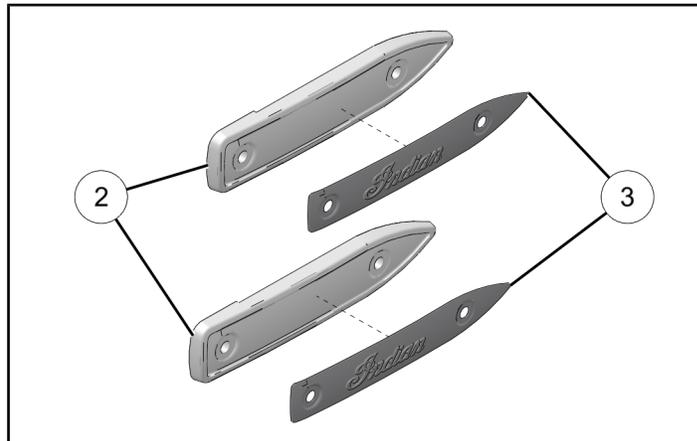

4. Put the exhaust tip tabs ② on the mufflers. Install the long screws ⑥ in the rear hole of each exhaust tip tab, and install the short screws ⑤ in the front hole of each exhaust tip tab. Torque screws to specification.

TORQUE

Exhaust Tip Tab/Badge Screws ⑤ & ⑥:
35 in-lbs (4 N·m)

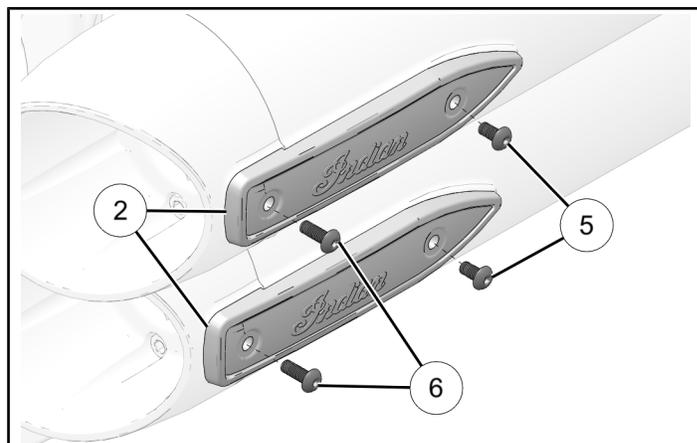

FISH TAIL EXHAUST TIPS


1. Install exhaust tips ① into muffler and attach with two screws ③ for each exhaust tip. Torque screws to specification.

NOTICE

Make sure the exhaust tip is fully seated into the muffler body before installing the screws.

TORQUE


Exhaust Tip Screws ③:
80 in-lbs (9 N·m)

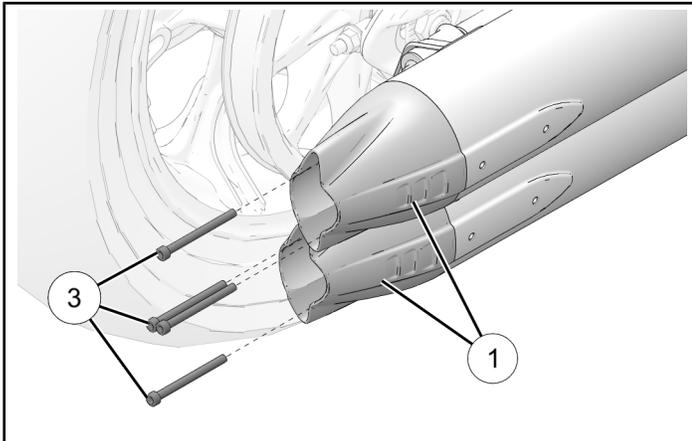

2. Remove the protective film from the outside of the exhaust badge ②.
3. Put each exhaust badge ② onto the mufflers and install two screws ④ for each exhaust badge. Torque screws to specification.

TORQUE

Exhaust Badge Screws ④:
35 in-lbs (4 N·m)

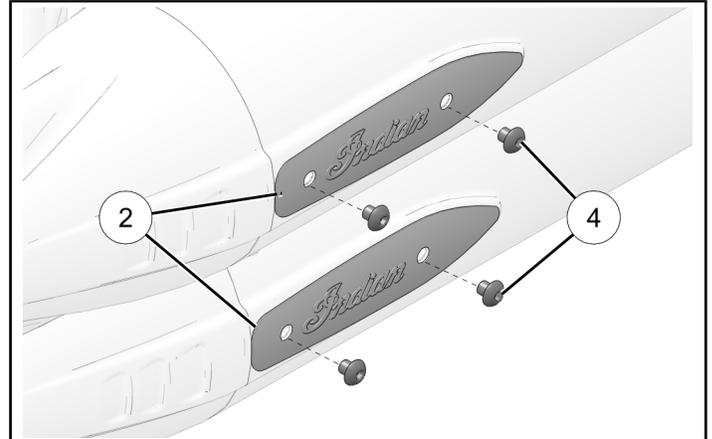

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

