

Rhino Grip XL - Double

Product Instructions | Part No: 21515




Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these instructions for future reference and part ordering information. Note: If any hardware is missing, do not return to the store. Call us to help, toll free at 877-956-5746.

No.	Description	QTY.	Spare P/N	No.	Description	QTY.	Spare P/N
1	Plastic Mounting Base	2	71541	8	Kwik Clip - Large	2	71540
2	Doubler Plate	2	71503A	9	Rubber Strap	4	87010
3	Connector	2	71516	10	¼" – 20 x 1.50" Truss Bolt	8	
4	Metal Backer Plate	4	71513	11	¼" – 20 Nylon Nut	8	
5	Rhino Grip	4	71511	12	Kolpin Logo	6	
6	Adjustment Knob	4	71501	13	M6 – Black Nylon Nut	2	
7	Kwik Clip - Small	4	71509	14	M6 Flat Head Machine Screw	2	

These grips are designed to quickly & easily mount to the rear rack of an ATV.


Note: Hardware provided is based on the biggest tube diameter. You may want to cut the excess threads from the grip for safety & to prevent damage to your machine.

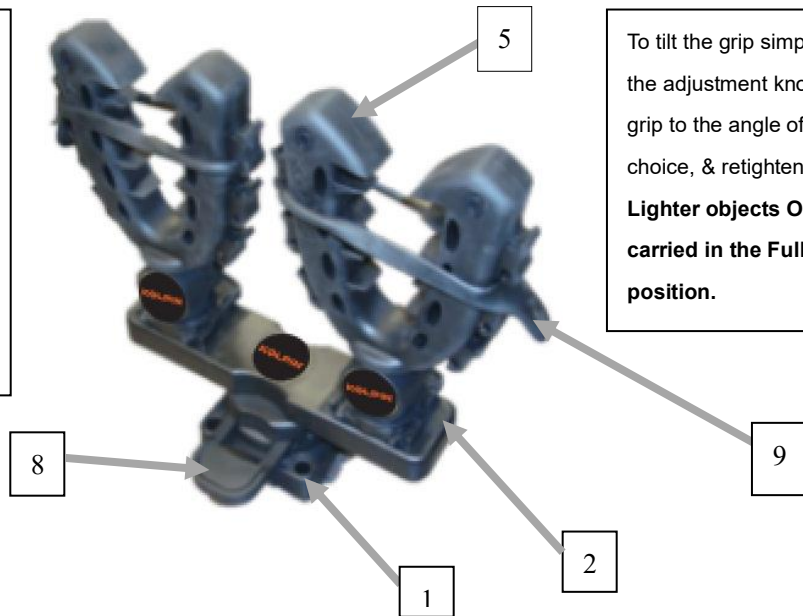

To tilt the grip simply loosen the adjustment knob, tilt the grip to the angle of your choice, & retighten. **NOTE: Lighter objects ONLY can be carried in the Full-Tilt position.**

Mounting Instructions -

1. Position the Rhino Grip mounting bases with a metal backer plate on the rack of the ATV where desired.
2. Run the ¼" truss head bolts provided through the main base/metal backer on the rear rack. Place a second metal backer plate under the rack tube and secure with nylon nuts.
3. Tighten the (4) truss head bolts evenly. Note: Be sure not to over tighten the bolts, as too much torque can over stress the base and cause the grip to fail.
4. Place the connector into the doubler plate.
5. Place the M6 black nylon locking nut into the bottom of the connector, so that the nylon part of the nut is facing out towards you.

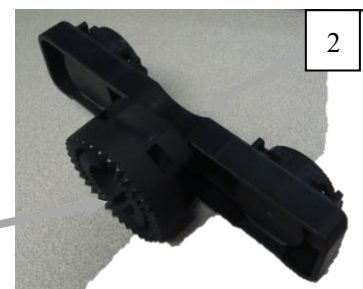

6. Take the flat head machine screw and tipping the doubler plate so that the connector is facing upwards; start twisting the machine screw until it engages the nut in the connector. Tighten securely. (Image shown to the right)
7. Place the 2 supplied Kolpin emblems over the flat head screw.
8. Insert the doubler plate assembly into the mounting base, already attached to ATV, and position as desired.
9. Secure the double plate assembly to the mounting base using the Kwik clip provided. (Image shown to the right)
10. Insert the Rhino Grips in the desired position on the doubler plate and secure using the Kwik Clips provided. NOTE: Grip can rotate 360° to accommodate any angle, and the grip can tilt 0° to 180° at 45° increments.



NOTE: The Rhino Grip XL Double can be used for many light-duty applications. DO NOT force objects into the grip as over stressing component parts can cause damage that is not immediately noticed. For a custom fit, the grips can be trimmed with a sharp knife. Balancing the weight in each grip is also important for safe operation. For the Ultimate protection in transporting firearms, we recommend using our Ratcheting Rhino Grips or any of our Patented Kolpin Gun Boots and brackets.

For additional assistance, please contact Kolpin Customer service department at 877-956-5746 or 763-478-5800 or email customerservice@kolpin.com

One Year Limited Warranty

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be done by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 877-956-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.