

Honda Talon - Full Vented Windshield

Product Instructions | Part No: 2794

Application: Verify accessory fitment at Kolpin.com.


Before You Begin: Read these instructions and check to be sure all parts are accounted for. If any items are missing, do not return to the store. Call us at 1-877-956-5746 for assistance. Please retain these instructions for future reference and parts ordering information.

Dealers: Provide Instruction Manual to customer at time of purchase.

Tools Required: 4mm Hex Wrench (or Socket), 10mm Wrench (or Socket), and Torque Wrench

Product Contents:

Item	Description	Qty	Part Number
1	Windshield Panel	1	
2	Shield	2	K100442 (Qty 2)
3	Vent Sub-Assembly	2	
4	Tapping Screw	18	
5	Clamp Assembly - 2.00"	4	
6	Button Head Screw - M6 x 18mm	12	K100121 (Qty 2)
7	Lock Washer - M6	12	
8	Domed Shoulder Washer - M6	8	
9	Button Head Screw - M6 x 26mm	2	K100179 (Qty 1)
10	Lock Washer - M6	2	
11	Domed Shoulder Washer - M6	2	
12	Flange Lock Nut - M6	2	
-	Shoulder Washer - **Extra Part	2	
-	Spacer - **Extra Part	2	
13	Co-Extruded Bulb Seal - 60"	1	PUR3322

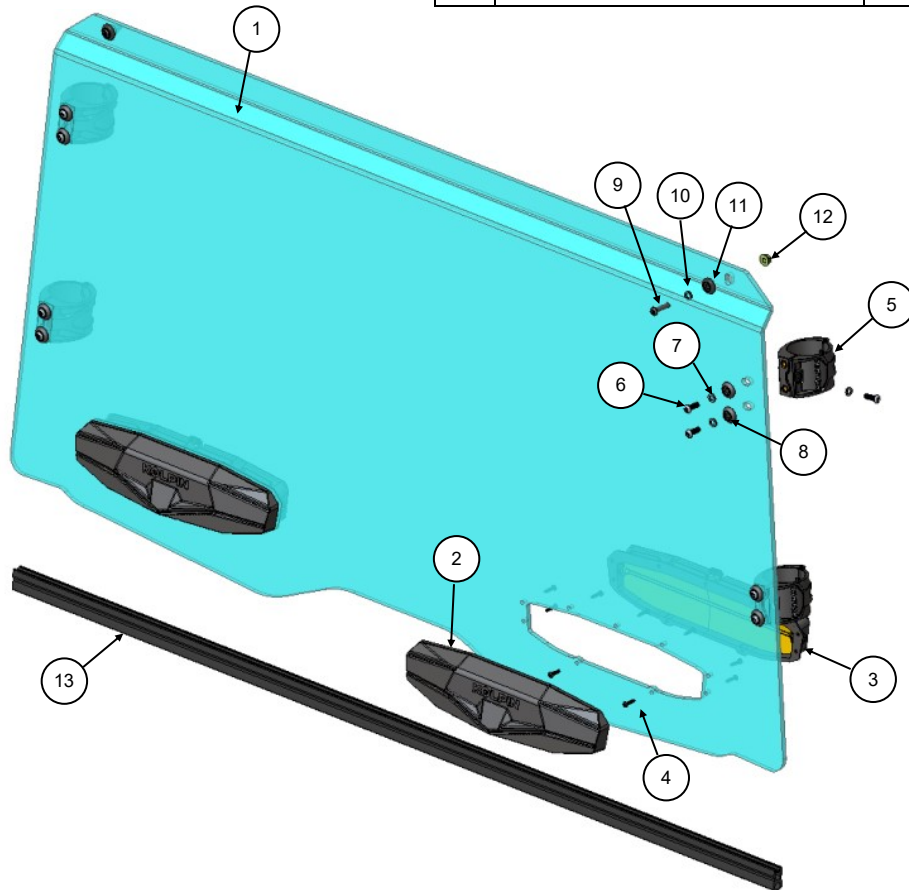

Kolpin Outdoors, Inc. | 9955 59th Ave N | Plymouth, MN 55442


(877) 956-5746 or (763) 478-5800 | www.kolpin.com | customerservice@kolpin.com

Assembly Time: Approximately 15 minutes





Important: This product is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

Installation Instructions:

1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.
2. Carefully remove the Windshield Panel from the box and place on a clean flat surface that won't scratch the Windshield. We recommend leaving the protective film on both sides of the Windshield Panel during assembly and only partially peeling it back in locations where mounting components are attached.
3. On the bottom edge of the Windshield Panel, peel away the protective film on both sides and install the 1/4" Edge Seal (item 13) onto the bottom edge. Firmly press against the Edge Seal during installation to ensure that it is fully seated against the bottom edge. See Illustration 1-1.
4. Peel away the protective film around the vent mounting areas and install the windshield vents (item 2,3, and 4). Please refer to the Poly Windshield Vent Kit installation manual for installation instructions. See Illustration 1-2.
5. Before you begin: If your vehicle is equipped with a roof, we recommend removing it. Remove and discard the protective film from both sides of the Windshield Panel and position the Windshield onto the front cab opening. Align the two top holes on the Windshield Panel to the middle holes of the upper corner frame gusset and loosely fasten items 9, 10, 11, and 12. See Illustration 1-3.
6. Install the four clamps, item 5, onto the cab frame and position them with the Kolpin logo facing outwards. Align the threaded holes on the clamps to the holes on the Windshield Panel and loosely fasten items 6, 7, and 8. Loosely fasten items 6 and 10 to the side holes on the clamps. See Illustration 1-4.
7. Ensure that the Windshield Panel is centered into position with the bottom edge seal compressed against the vehicle's body work. Tighten all fasteners to the torque specification below. See illustration 1-5.


SPECIFIED FASTENER TORQUE:
7 ft. lbs. (84 in-lb) (9.5 Nm)

8. Re-inspect hardware before and after riding or trailering.

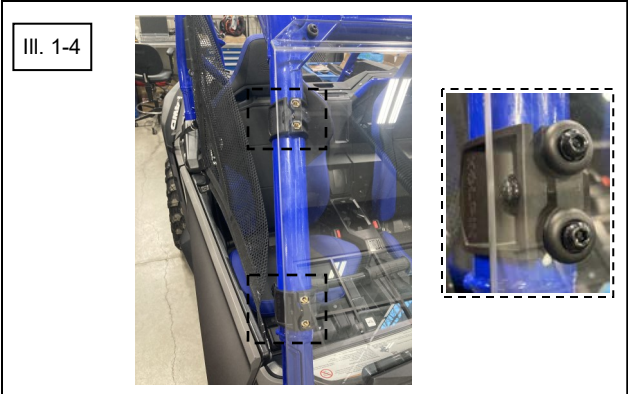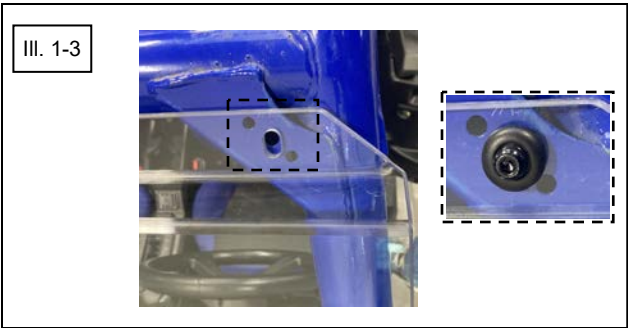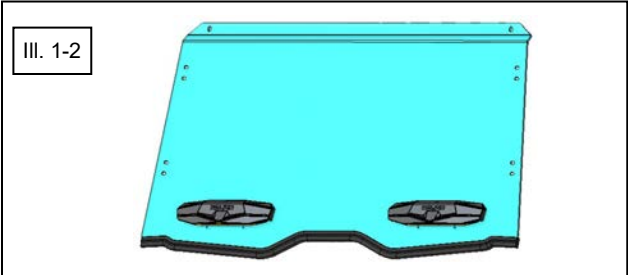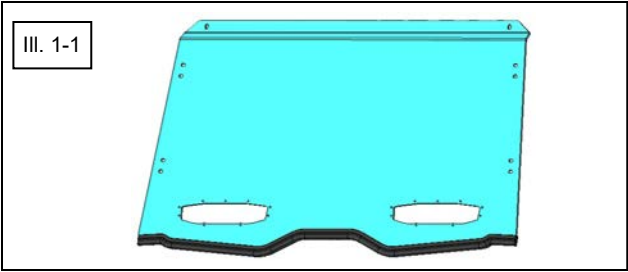



DANGER



TO AVOID SERIOUS INJURY OR DEATH:

1. DO NOT TRAILER VEHICLE FACING REARWARD WITH WINDSHIELD INSTALLED. AIRFLOW MAY CAUSE WINDSHIELD TO SEPARATE FROM VEHICLE, RESULTING IN AN ACCIDENT AND SEVERE INJURY OR DEATH. REMOVE WINDSHIELD OR TRANSPORT VEHICLE IN ENCLOSED TRAILER.
2. UTVs ARE TO ONLY BE DRIVEN WITH CLEAN WINDSHIELDS FOR DRIVING VISIBILITY. IF DIRT OR DEBRIS ACCUMULATES ON THE WINDSHIELD WHEN RIDING, STOP THE UTV AT THE NEXT SAFE LOCATION ON THE TRAIL TO CLEAR OFF THE WINDSHIELD BEFORE YOU RESUME RIDING.
3. ONLY INSTALL WINDSHIELDS THAT ARE DESIGNED FOR THE MAKE AND MODEL OF THE UTV. INSTALLATION OF A WINDSHIELD THAT WAS NOT DESIGNED FOR THE UTV MAKE AND MODEL CAN IMPACT WINDSHIELD DURABILITY AND PERFORMANCE.
4. READ AND UNDERSTAND WINDSHIELD INSTRUCTION SHEETS AND UTV OWNER MANUAL BEFORE WINDSHIELD INSTALLATION OR OPERATING THE VEHICLE.
5. PERIODICALLY CHECK FOR WEAR AND TIGHTNESS OF ALL FASTENERS. ALWAYS INSPECT BEFORE AND AFTER RIDING OR TRAILERING. REPLACE OR RE-TORQUE FASTENERS AS NECESSARY.

Windshield Cleaning Information:

- Remove all dirt, mud, dust and debris from Windshield with water before cleaning.
- Use a mild soap or dishwashing detergent along with a soft sponge or soft cotton cloth to clean Windshield surface. Do not apply in direct sunlight. Rinse with water immediately and dry with a soft cotton cloth or chamois.
- Always test cleaning agents in a small inconspicuous area prior to cleaning entire panel.
- Never use Windshield cleaning fluids (409, Windex, etc.), gasoline, high alkaline cleaners, or solvents.
- Never use abrasives, brushes, razor blades, scrapers, squeegees, gloves or dirty cloths.

For additional assistance, please contact Kolpin customer service department at (877) 956-5746 or (763) 478-5800 or email customerservice@kolpin.com.

One Year Limited Warranty

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be borne by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 1-877-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper maintenance, normal wear, or other causes beyond the manufacturer's control. In order to protect you and your ATV, certain parts of the accessory system and/or hardware are designed to fail when the equipment is over-stressed. Parts that are lost due to loosening and improper maintenance are not covered under warranty. This warranty does not cover removal or reinstallation labor fees of the plow system and related components.

Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Most hardware is general in nature and is easily obtained locally. Be sure to replace with minimum metric class 8.8 specification.