

# Polaris Ranger XD 1500 Bed Box Mounting Kit



## Product Instructions | Part No: 53507


Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these instructions for future reference and part ordering information. Note: If any hardware is missing, do not return to the store. Call us to help, toll free at 1-877-956-5746.

This Kit includes:

Item	Qty	Part Description
1	2	Side Mount Plate
2	4	L&R Anchor Kit
3	4	M8 Washer
4	4	M8 Locknut



### Tools Required:

- 13mm Wrench or Socket
- Torque Wrench

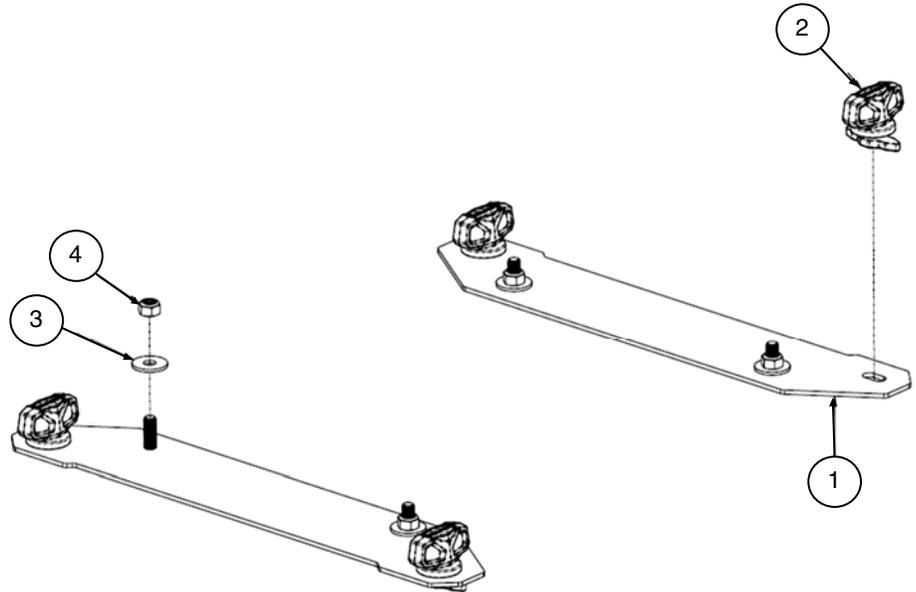

### Mounting Instructions:

1. Attach the L&R Anchors (item #2) to the side mounting plates (item #1) as shown. (See illustration 1-1).
2. Assemble the side mount plates (item #1) to the bed rails by inserting the L&R MAX Anchors (item #2) into the L&R bed rail as shown. Align the t-bolt into the opening holes in the bed rail. (See illustration 1-2).

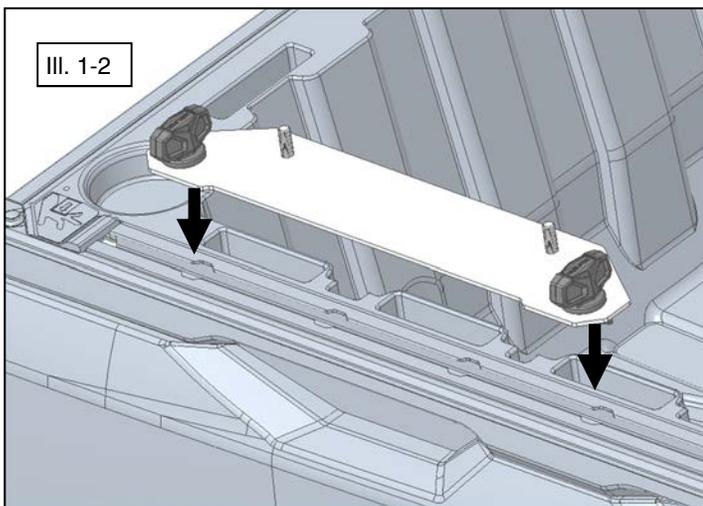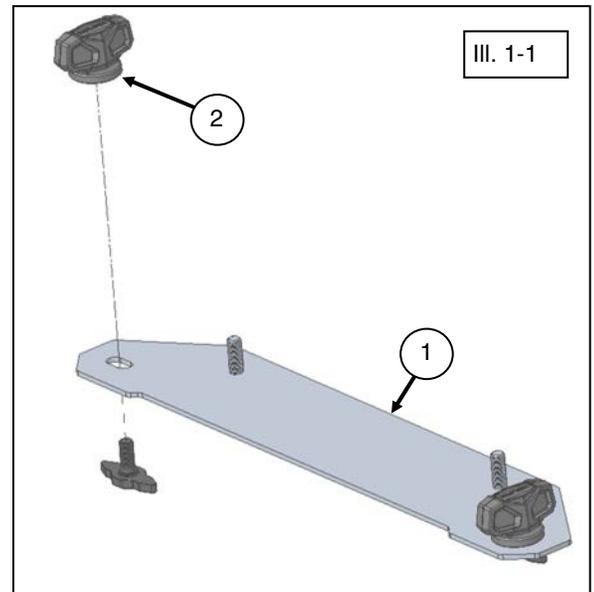


Kolpin Outdoors, Inc. | 9955 59th Ave N | Plymouth, MN 55442

(877) 956-5746 or (763) 478-5800 | [www.kolpin.com](http://www.kolpin.com) | [customerservice@kolpin.com](mailto:customerservice@kolpin.com)

### Mounting Instructions (continued):


3. Remove the plastic thread caps from the threads on the side mount plates.
4. Carefully place the 53470 Aluminum Bed Box (sold separately) onto male threads of the side mount plates. Use the mounting holes in Aluminum Bed Box as shown. (See illustration 1-3).
5. Assemble the four M8 washers (item #3) and four M8 locknuts (item #4) onto the male threads of the side mount plates. (See illustrations 1-3 and 1-4).
6. Align and center Aluminum Bed Box to the Ranger XD's cargo bed.
7. While holding the side mount plates firmly against the Ranger XD bed rails, tighten the four turn knobs.
8. Tighten M8 locknuts to specification.

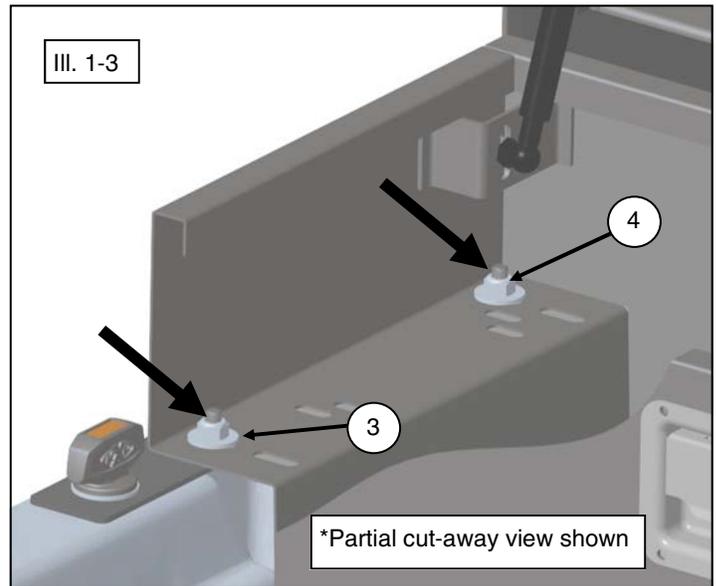

 = T
<b>8MM FASTENER TORQUE:</b> 17 ft. lbs. (23 Nm)

### Use and Care Information:

- Check the accessory mounts frequently and retighten hardware if necessary.
- Replace this accessory with a new one if it is damaged.
- Never use petroleum solvents such as gasoline, thinner, benzene, acid or alkaline cleaners.

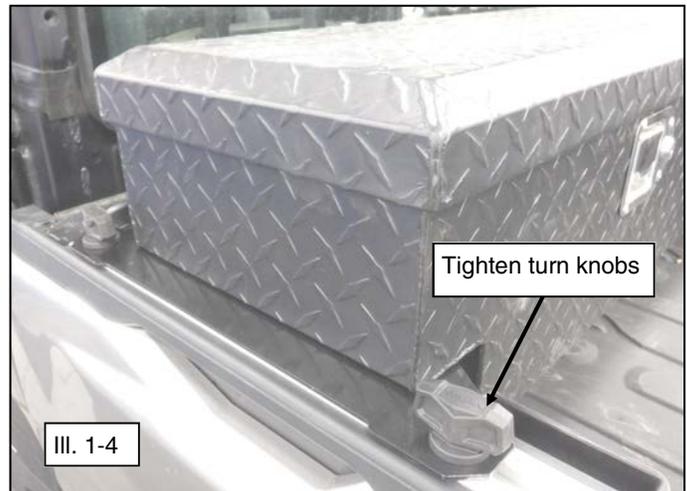

For additional assistance, please contact Kolpin customer service department at  
(877) 956-5746 or (763) 478-5800 or email [customerservice@kolpin.com](mailto:customerservice@kolpin.com)

### One Year Limited Warranty

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be borne by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 1-877-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper maintenance, normal wear, or other causes beyond the manufacturer's control. In order to protect you and your ATV, certain parts of the accessory system and/or hardware are designed to fail when the equipment is over-stressed. Parts that are lost due to loosening and improper maintenance are not covered under warranty. This warranty does not cover removal or reinstallation labor fees of the plow system and related components.

Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Most hardware is general in nature and is easily obtained locally. Be sure to replace with minimum metric class 8.8 specification.