

WINDSHIELD BAG KIT


KIT P/N 2879577



Application

All MY14 Cruiser

NOTE: Before you begin, read these instructions and check to be sure all parts and tools are accounted for in package. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown below.

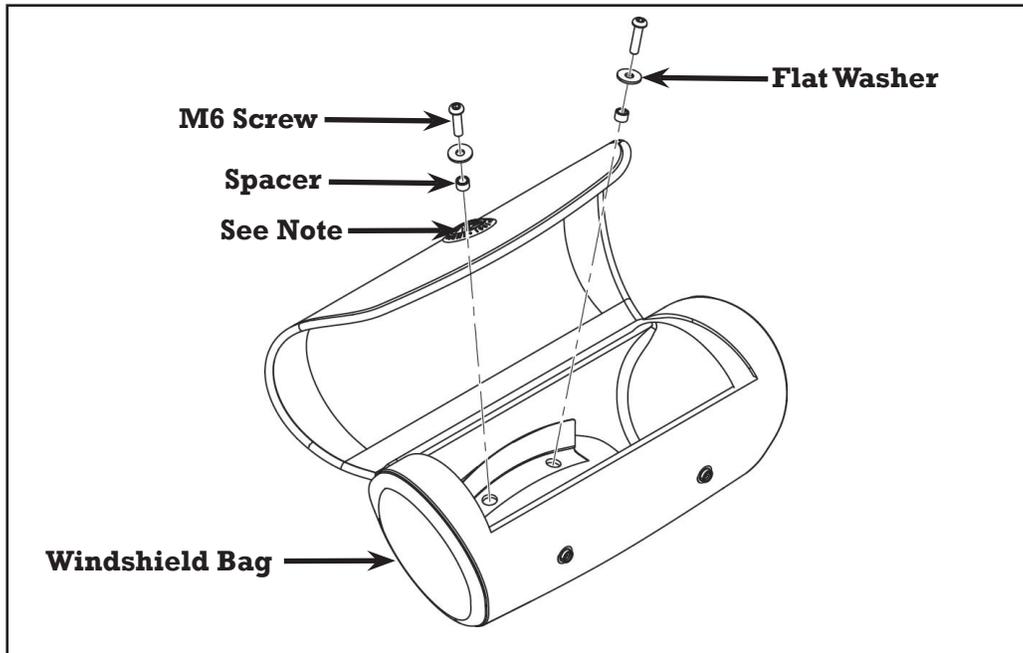

NOTE: Concho not included in windshield bag kit. See dealer for available concho options.

Kit Contents:

Quantity	Part Description	Part Number
1	Windshield Bag	2685734
2	Screw- M6 x 30 long	7517885
2	Flat Washer	7555872
2	Spacer	5139209
1	Instructions	9924355

You will need to supply:

4 mm Hex Key Socket

Torque Wrench

APPROXIMATE ASSEMBLY TIME: 20 minutes

INSTALLATION INSTRUCTIONS

Removal (If necessary)

1. Remove two screws from headlight nacelle and discard, will not be used in windshield bag installation. See Figure 1.
2. Place bag on top of nacelle and align holes in bag with holes in nacelle.
3. Insert spacers, screws and flat washers, thread into headlight nacelle. Torque to 36 in.lb (4.07 Nm).

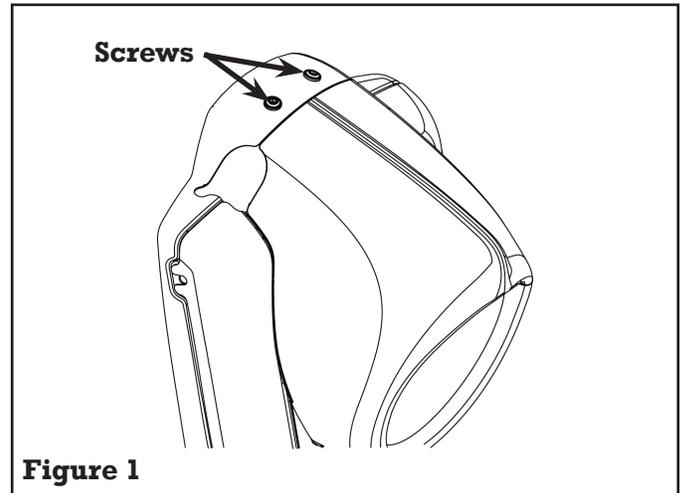


Figure 1

Clean the bag with warm water, mild soap and soft cloth. Let air dry.

NOTE: Leather will lose oils and condition with time and exposure to the elements. Leather Dressing will add back many of the oils that are lost from exposure to the weather. Apply dressing with a clean dry cloth. Use generously and allow to soak in. Allow to dry overnight. Wipe off excess. Under normal conditions annual application is sufficient.