

EXTERIOR PAINTED KIT



SLINGSHOT

P/N 2881829

APPLICATION


Slingshot

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

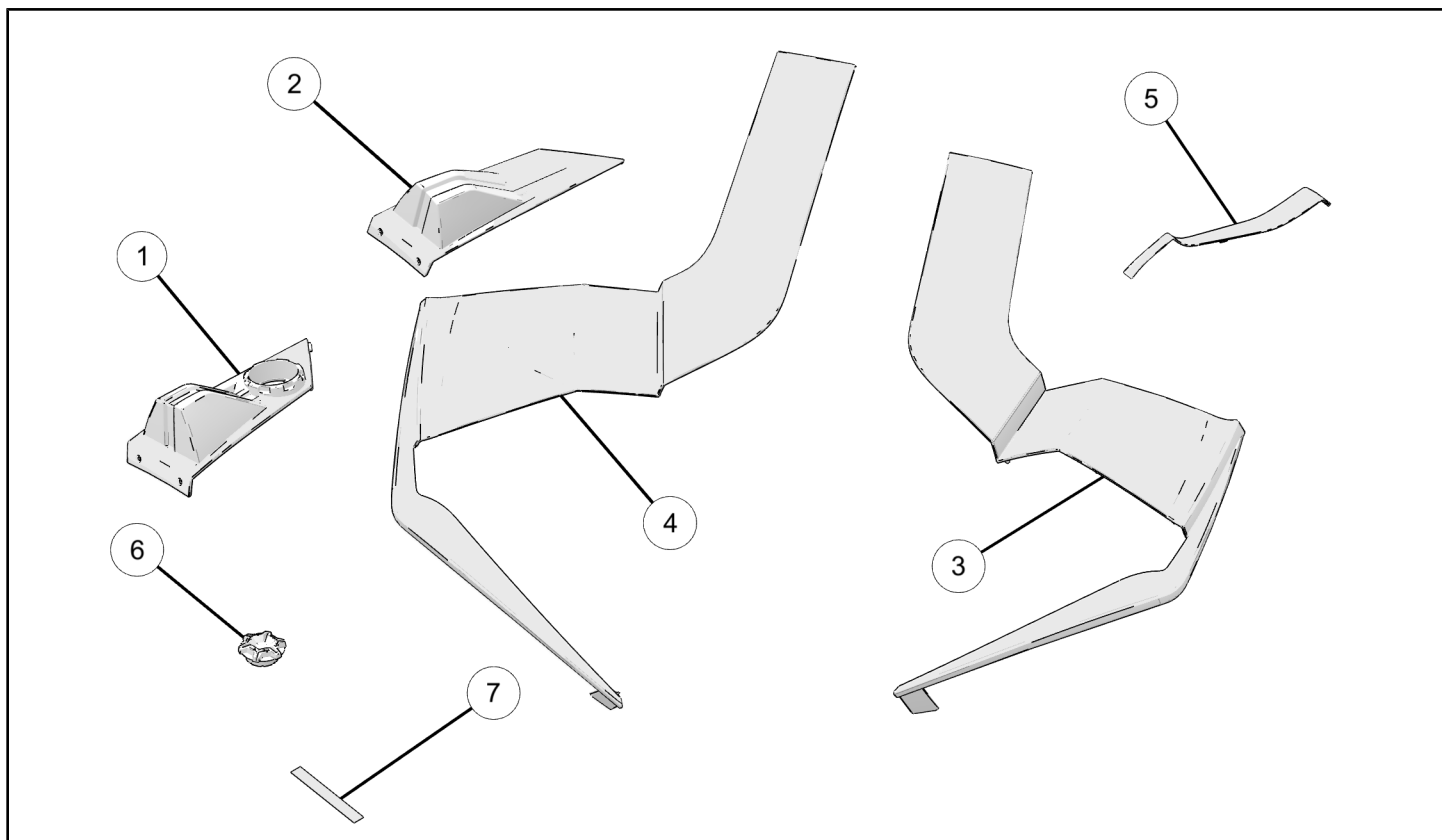

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Rear Deck Hump, LH	5453411
2	1	Rear Deck Hump, RH	5453412
3	1	Hood Accent, LH	5453302
4	1	Hood Accent, RH	5453303
5	1	Upper Trim Channel	5450047
6	1	Gas Cap	2521278
7	10	Tape, 3M	8360141
	1	Instructions	9927583

TOOLS REQUIRED

- Safety Glasses
- T25 Torx® Wrench
- M4 Allen Wrench
- Channel Lock
- Flat Head Screw Driver
- Heat Gun

IMPORTANT

Your EXTERIOR PAINTED KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


ASSEMBLY TIME

Approximately 120 minutes


INSTALLATION INSTRUCTIONS

REMOVAL OF REAR DECK HUMP PANEL


1. Put the transmission in “NEUTRAL” and turn the key to the “OFF” position. Remove the key from vehicle. Apply the parking brake.
2. Start with the right rear deck hump panel. Remove two screws (A) located on the front of the panel (B) by using an M4 Allen Wrench. Retain screws for later use.

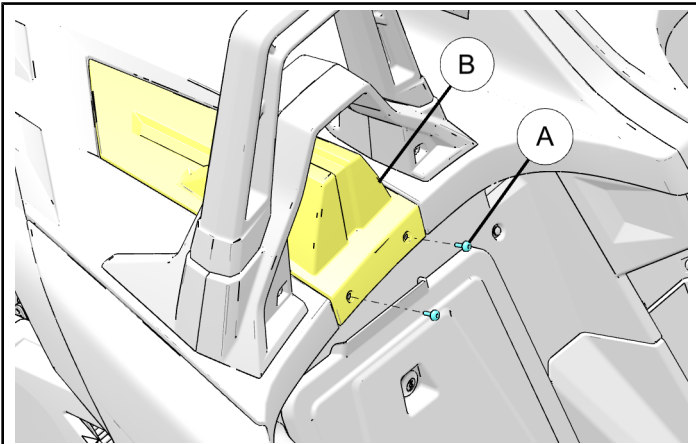

3. Carefully pull the RH panel (B) up, starting from the front and working back until the entire panel is removed.

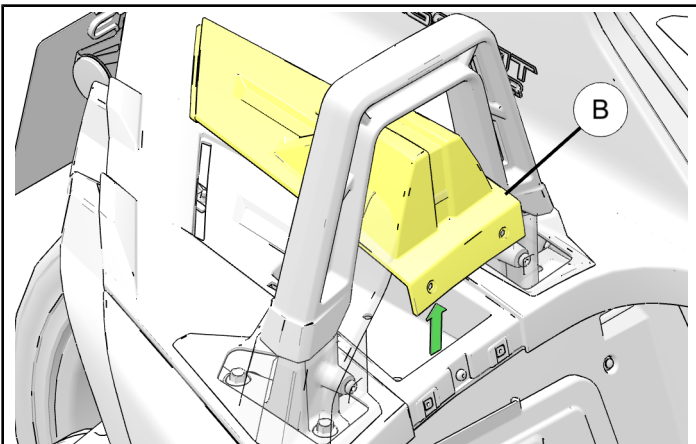


4. Repeat Step 2 on the left side rear deck hump panel, by removing the gas cap first.
5. Using the channel lock, remove the large nut (C) surrounding the gas filler neck (D).

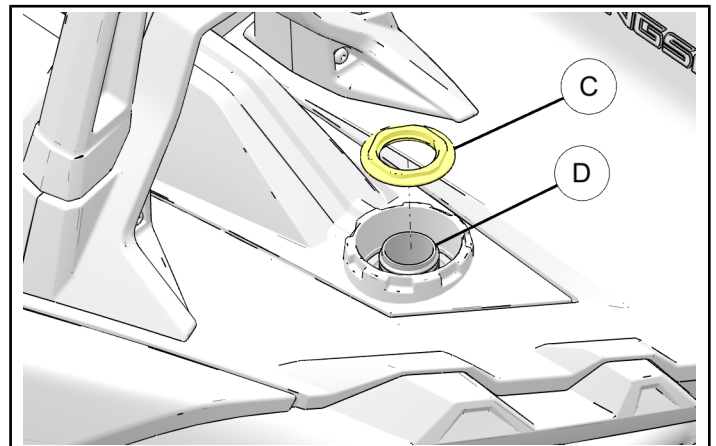

6. Now repeat Step 3, removing the left panel.


REMOVAL OF UPPER TRIM ACCENT

1. Carefully pull the center upper trim accent panel (E) starting from the front. Work all the way back until the panel is completely removed.

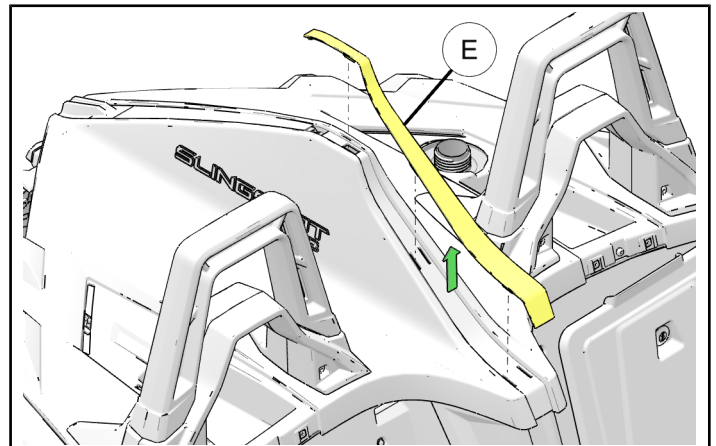

REMOVAL OF HOOD ACCENT



1. Ensure the parking brake is engaged and open the hood.
2. Start with the right side. Using a T25 Torx® wrench remove the twelve screws (F) from the underside of the hood that attach to the hood accent panel (G). Retain screws for later use.

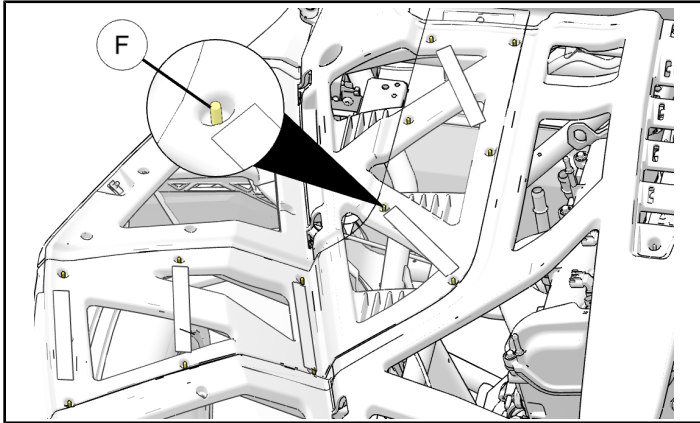


3. Remove one screw (F) from the front tip of the panel (G) by using a T25 Torx® wrench. Retain the screw for later use.

NOTE


Loosening the two screws (K) located at the front underside of the hood that attach the sub-structure to the hood can aid in the removal of the hood accents.

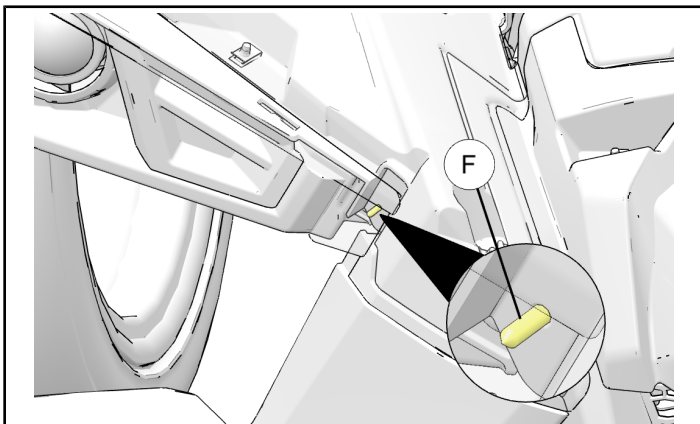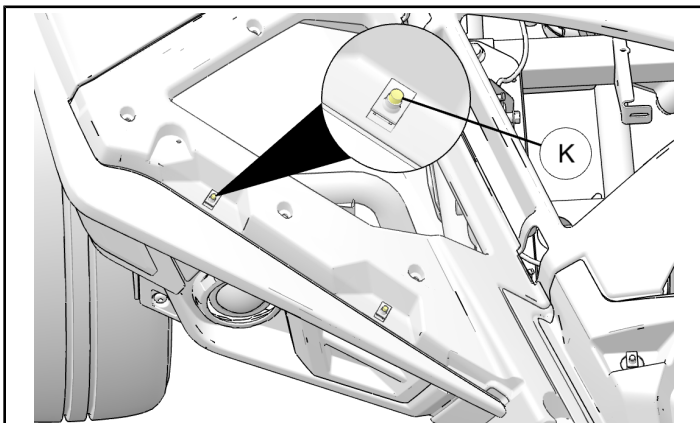

4. Carefully start pulling the panel (G) starting at the vehicle dash.
5. When a tape patch (H) is reached use a heat gun and flat head screw driver to assist in prying the panel up. Be careful to not over heat the paint or scratch hood with the screw driver.

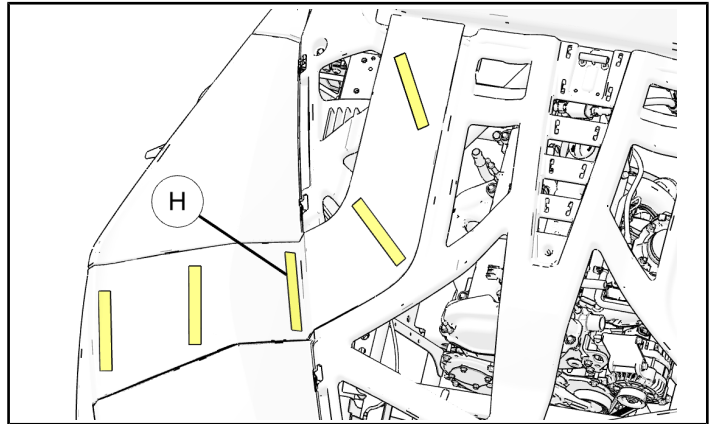

6. Finish removing the panel (G) by carefully pulling the component from its front tip working backward towards the rear. There are three molded tabs (J) that must be dis-engaged above the front light.

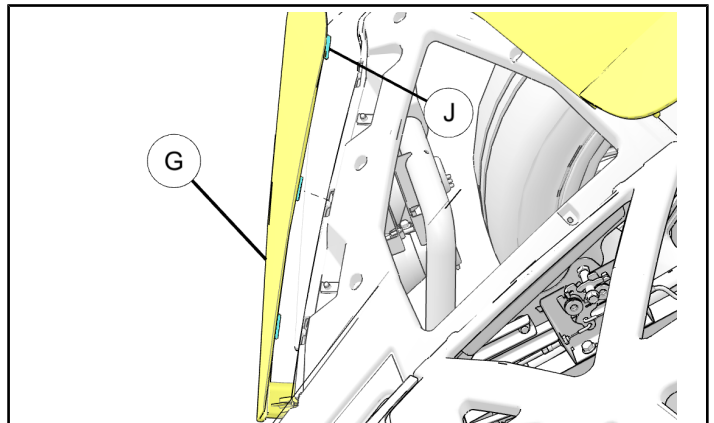


7. Repeat Steps 2-6 for the left side.

HOOD ACCENT INSTALLATION


1. Remove any extra glue left by the tape patches ⑦.
2. Starting with the right side, install five tape patches ⑦ onto the surface of the hood. Using the heat gun, slightly warm the hood surface before applying the tape patch.



3. Install the hood.
4. Starting with the front of the right hood accent panel ④ align the panel tabs with the slots in the vehicle and firmly press until the tabs engage.

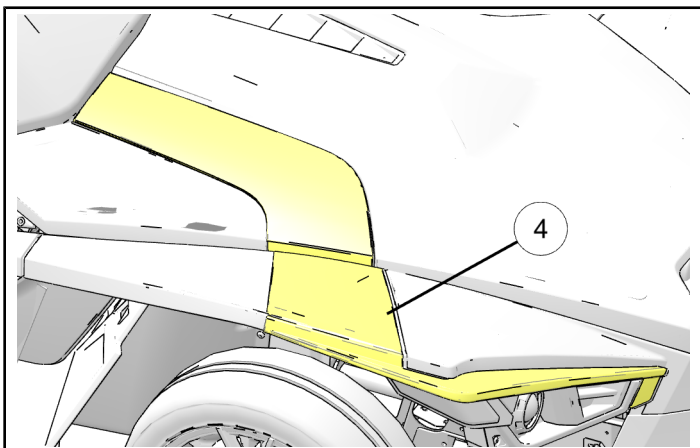


5. Using a T25 Torx® wrench install the screw (F) located in the front tip of the panel adjacent to the light.

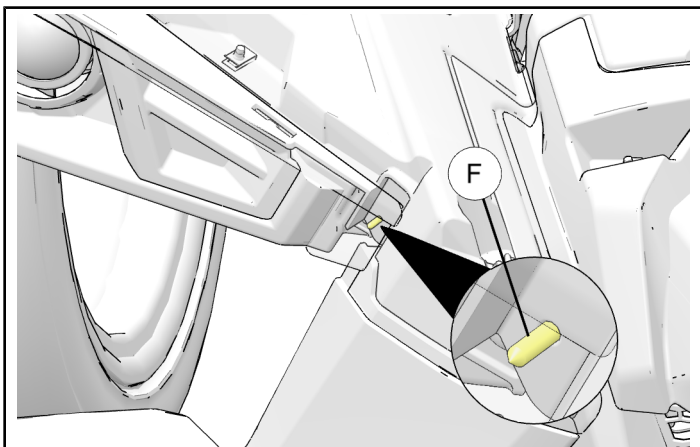

6. Working from front to back lay the panel ④ down. Use a heat gun to slightly warm the panel surface before firmly pressing it on to each tape patch.
7. Re-install the screws (F) from the bottom of the hood by using a T25 Torx® wrench. Removed in Step 2 (Section - Removal of Hood Accent).
8. Repeat Steps 2-6 for the left hood accent panel ③.

INSTALLATION OF UPPER TRIM ACCENT


1. Starting with the back of the upper trim accent panel ⑤, insert the accent tab into the slot located on the vehicle.

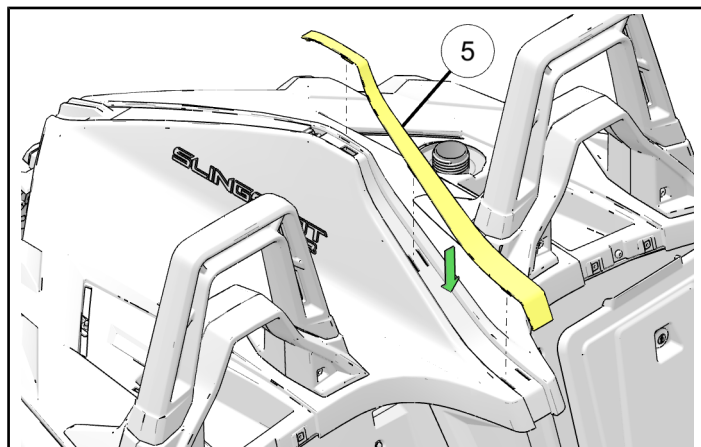


2. Work from the back towards the front of the vehicle, firmly press on the trim ⑤. Ensure the tabs engage.

INSTALLATION OF REAR DECK HUMP PANEL

1. Start with the right rear deck hump panel. Work from the back forward to engage all the tabs to install the panel ②.

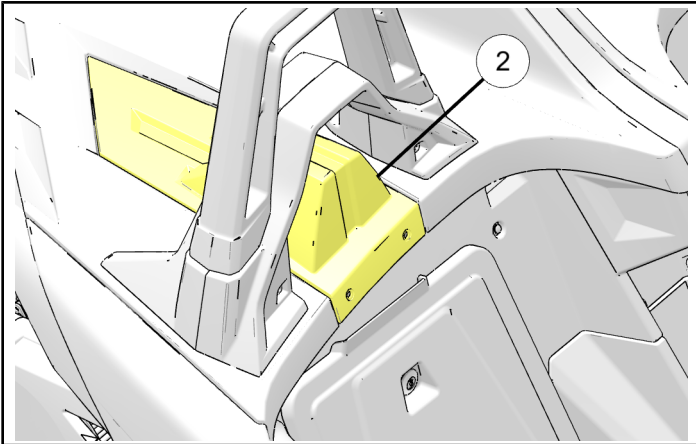

2. Use an M4 Allen Wrench to re-install the bolts (A) at the front of the panel ②. Removed in Step 2 (Section - Removal of Rear Deck Hump Panel).

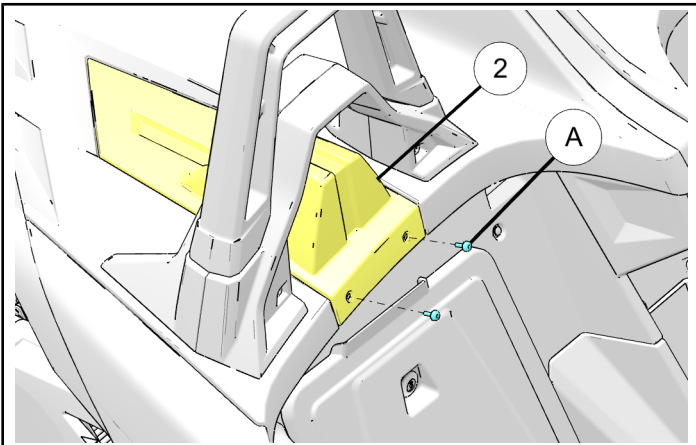

3. Repeat Steps 1-2 to install the left rear deck hump panel ①.
4. Use a channel lock to re-install the nut (C) around the gas filler neck (D). Removed in Step 5 (Section - Removal of Rear Deck Hump Panel).
5. Install the Gas Cap ⑥.

