

DOOR BAG KIT



P/N 2880455


APPLICATION

SPORTSMAN ACE

NOTE: This accessory requires the use of the Sportsman Ace Door kit (PN 2879697) and the Lower Door Extension Kit (PN 2880272).

BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

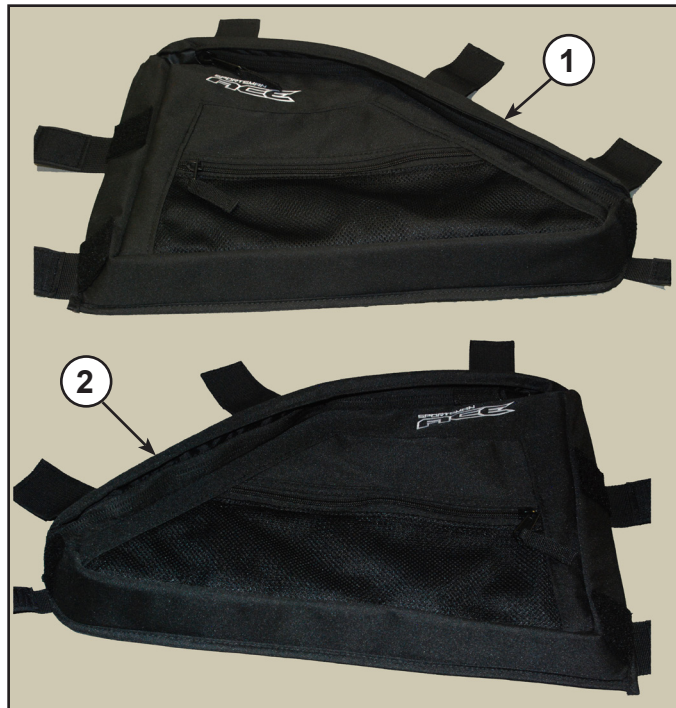

KIT CONTENTS

| Ref | Qty | Part Description | Part Number |
|-----|-----|------------------|-------------|
| 1 | 1 | Door Bag, RH | - |
| 2 | 1 | Door Bag, LH | - |
| | 1 | Instructions | 9925689 |

APPROXIMATE ASSEMBLY TIME

5 min

IMPORTANT

Your Polaris DOOR BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

NOTE: Do not carry any sharp or pointed objects in the bag. Maximum carrying capacity is 3-5 lbs. (13.3-22.2 N).

INSTALLATION INSTRUCTIONS

1. Place the vehicle in “**PARK**” and turn the key to “**OFF**” position. Remove the key from the vehicle.
2. Place and adjust RH side storage bag (1) in the door frame. Wrap and tie the Velcro (A and B) to the door frame bar as shown in figure.

NOTE: It is important that you secure strap A and B first because you will need to lift the bottom edge up to provide access to secure the straps to the back side of the bag.



3. Wrap straps C and D around the tube frame and secure the Velcro straps to the back side of the bag as indicated in the figure.



4. Wrap straps E and F around the front tube of the door frame structure and secure the Velcro strap to the front side of the bag as shown in the figure.
5. Repeat Steps 2-4 to install the LH side door bag (2).

