

OUTLAW® 70 REAR BUMPER KIT



P/N 2884778


APPLICATION

Verify accessory fitment at www.polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

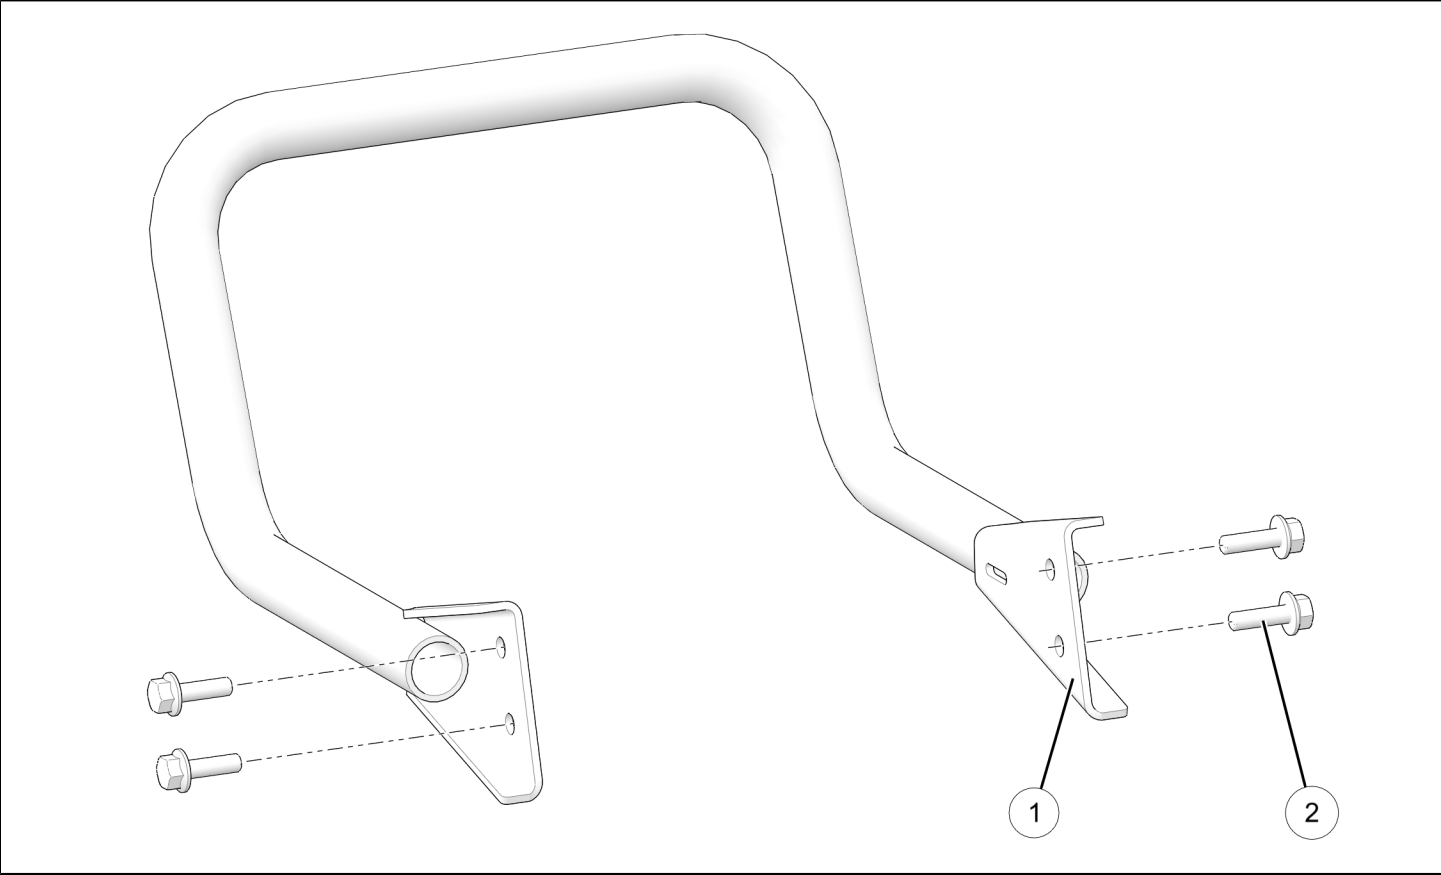

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Rear Bumper	-	-
2	4	Screw	-	2208506

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Torque Wrench

CONSUMABLES REQUIRED


- None

IMPORTANT


Your Outlaw® 70 Rear Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

1. Remove two mounting screws from each side of rear rack support tube.

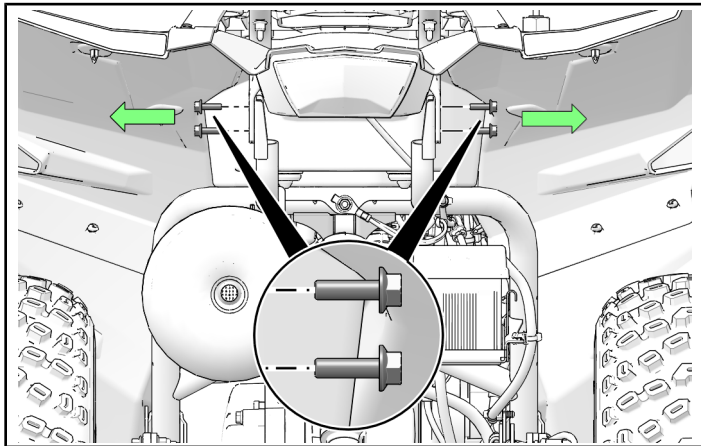

2. Place bumper into position and install all four screws.

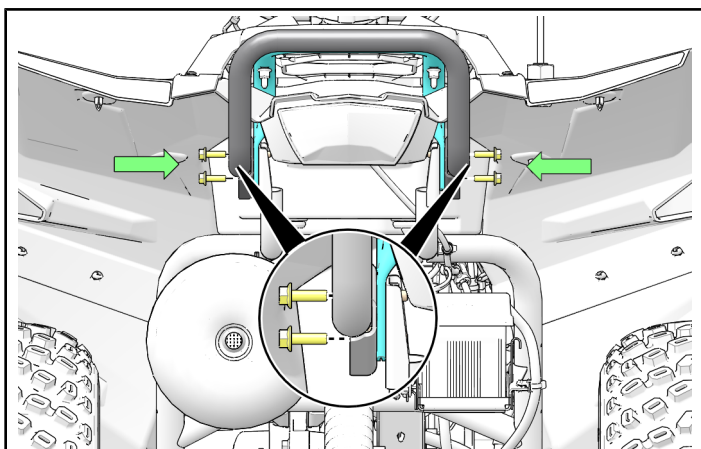

3. Torque all four mounting screws to specification.

NOTE

7 ft-lbs (9.5 N·m)

4. Verify all steps have been completed and all tools are accounted for.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

