

FRONT AUDIO MOUNT BAR KIT



P/N 2881461


APPLICATION

Sportsman 850, Sportsman XP 1000 and Sportsman XP 1000 High Lifter Edition Models

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

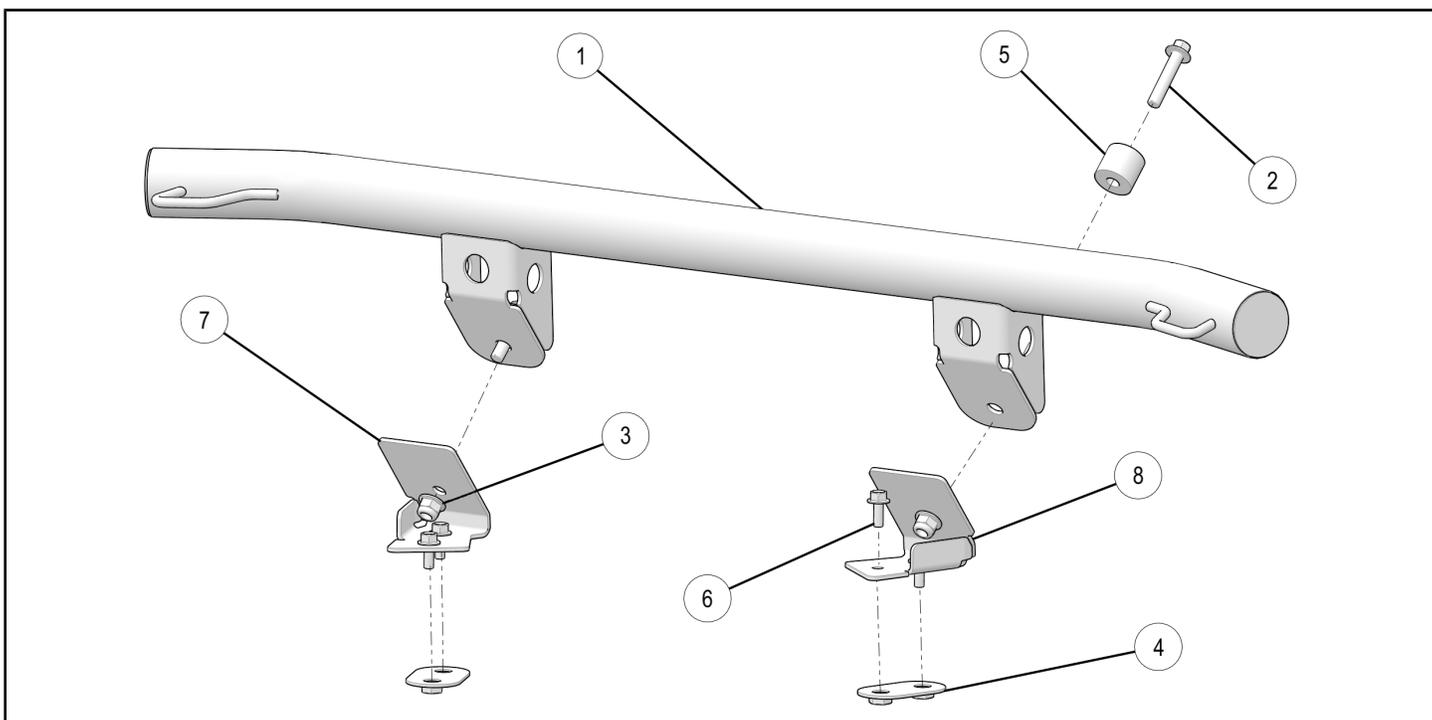

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Front Audio Mount Bar	-
2*	2	Screw M8 X 1.25 X 40, HXFL	7517881
3*	2	Nut M8 X 1.25, HXFLG	7547317
4	2	Bracket Plate, Audio, LH (For Standard Models)	-
5*	2	Spacer	-
6*	2	Screw M6 X 1.0 X 16, HXFL (For Standard Models)	7517770
7	2	Bracket Weld Mount, LH (For Standard Models)	-
8	2	Bracket Weld Mount, RH (For Standard Models)	-
	1	Instructions	9926349

Items marked (*) are included in Hardware Kit PN 2206073.

TOOLS REQUIRED

- 13 mm Socket/Wrench (Quantity 2)

- 10 mm Wrench

ASSEMBLY TIME

Approximately 15 minutes

IMPORTANT

Your FRONT AUDIO MOUNT BAR KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTALLATION INSTRUCTIONS

High Lifter Edition Models

1. Put vehicle transmission into "PARK" and turn the key to "OFF" position. Remove key from vehicle.
2. Install front audio mount bar ① onto front bumper of vehicle using two M8 screws ②, spacer ⑤ and nuts ③.

TORQUE

12 ft. lbs. (16.27 Nm)

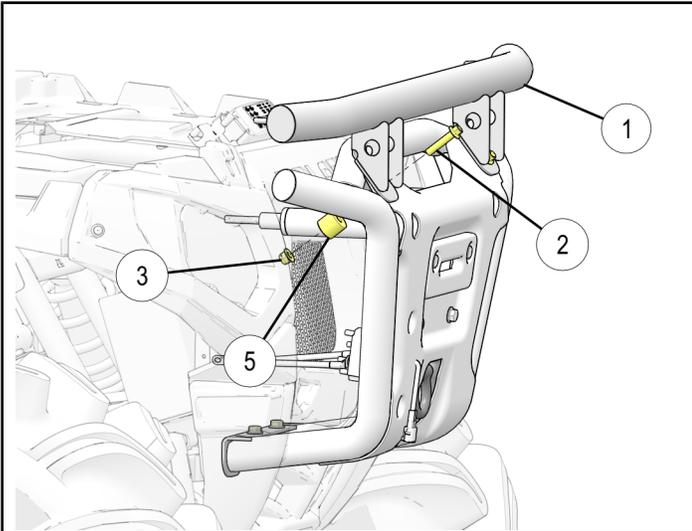

3. Attach audio mount kit to bar following audio installation instructions.

NOTE


Do not install more than four speakers onto mount bar.

NOTE


For Installation on High Lifter Edition Models you will not use items 4,6,7 or 8.

Standard Models


1. Unlock the lock and ride (A) to lift up front rack (B).

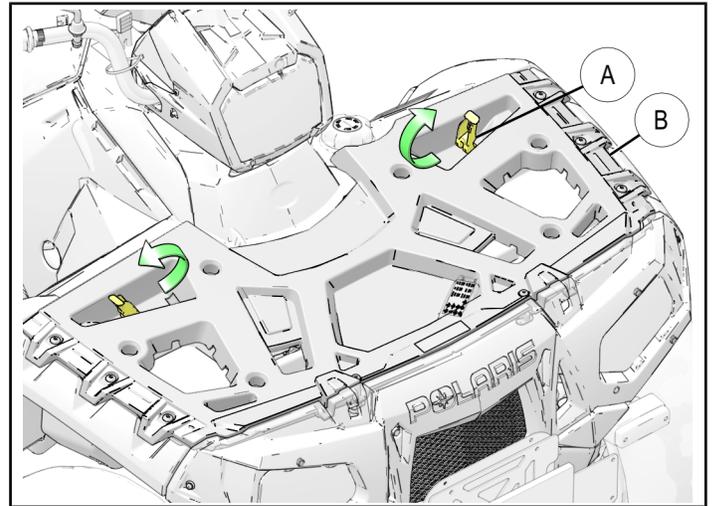


2. Line up upper brackets as shown and use the brackets as a template to mark the holes in the rack. Lift up the rack to avoid drilling into the storage compartment underneath the rack. Drill holes with an 8mm or 5/16" drill.

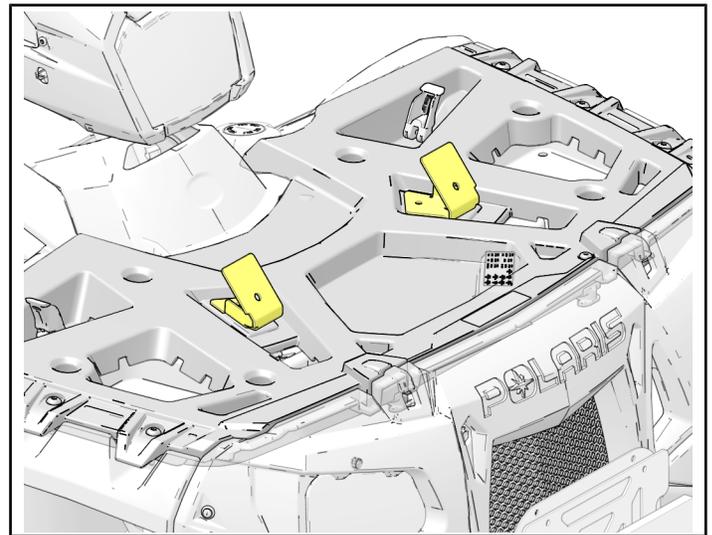

- Lift front rack. Place weld bracket mount (LH ⑦ and RH ⑧) onto front rack (B), then install bracket plate ④ from bottom side using two M6 screws ⑥ through weld bracket.

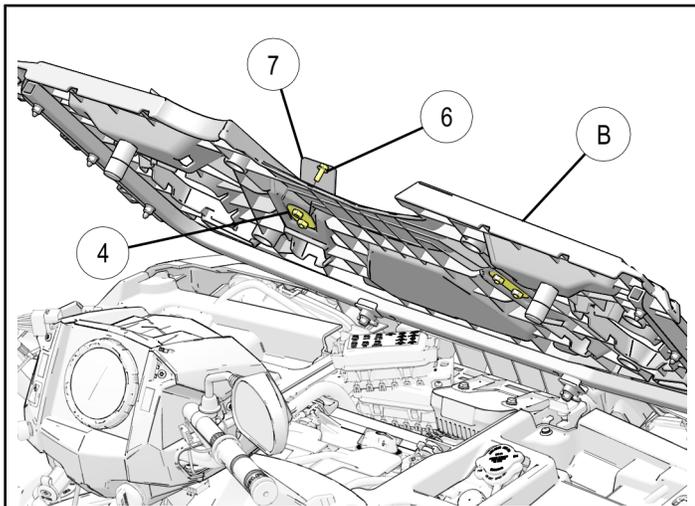


- Place front rack onto its original position and lock the lock and ride anchor.

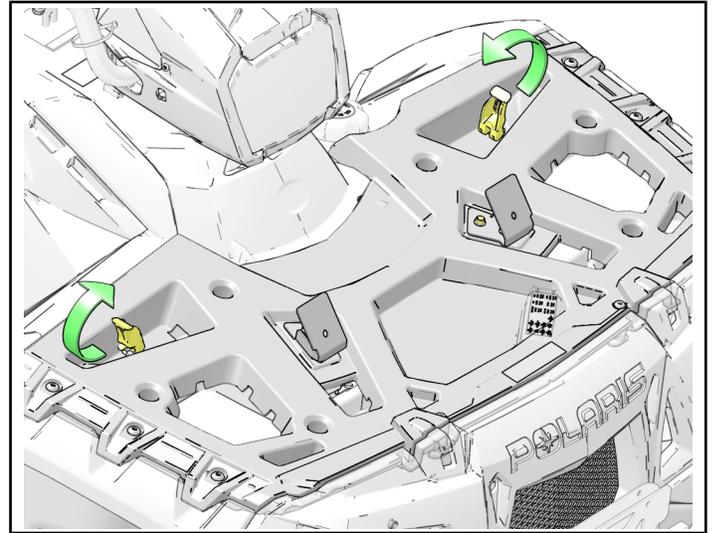

- Install front audio mount bar ① onto weld bracket mount by using two M8 screws ②, spacer ⑤ and nuts ③.

TORQUE

12 ft. lbs. (16.27 Nm)

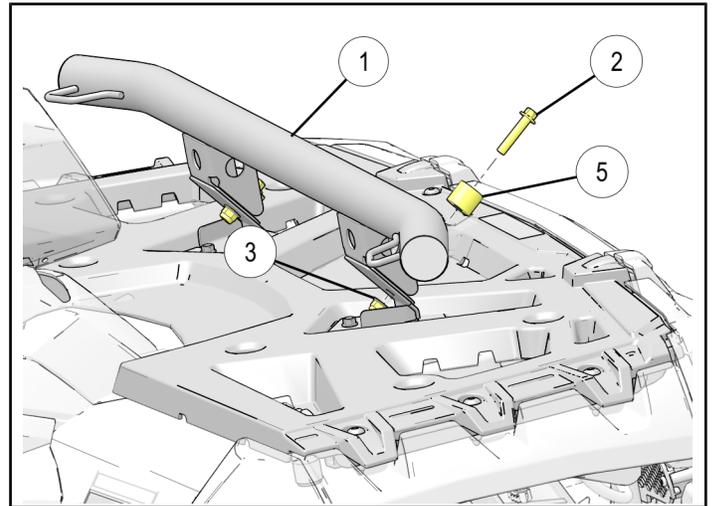

COMPATIBILITY

This front audio mount bar kit is compatible with the below accessories.

- Winch.
- Plow Mount.
- Audio Kit (PN 2881518)