

SPORTSMAN® TRAILERABLE COVER KIT



P/N 2884188

APPLICATION

Verify accessory fitment at [Polaris.com](https://www.polaris.com).

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:



REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Cover	2884188
	1	Instructions	9929979

TOOLS REQUIRED

- None

CONSUMABLES REQUIRED

- None

IMPORTANT

Your Sportsman® Trailerable Cover Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 6 minutes

INSTALLATION INSTRUCTIONS

CAUTION

BEFORE STARTING INSTALLATION, always ensure vehicle is properly secured on a flat stable surface to avoid accidental tipping, unwanted movement and to prevent personal injury and/or damage to equipment. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.


⚠ WARNING

Always allow adequate time for all vehicle components to cool after riding and **BEFORE** installing cover. Failure to comply may result in a thermal event and/or damage to cover and vehicle.

1. Place cover ① over vehicle in the correct orientation as shown.





2. Secure the lower front portion of the cover by connecting the male and female side release buckles ① as shown.

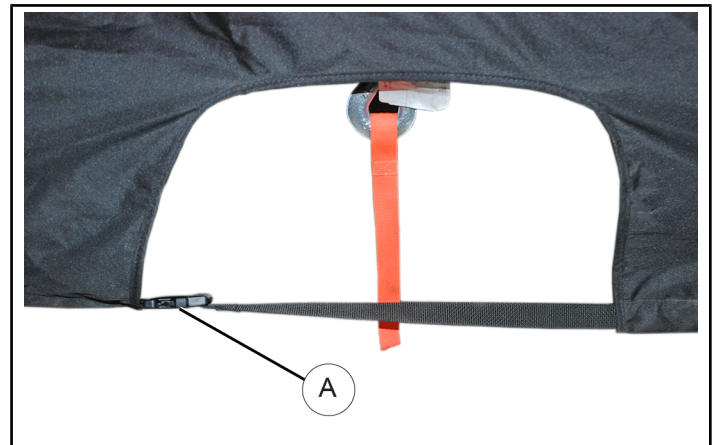

3. Next, move to the rear of the vehicle and connect the male and female side release buckles ③ as shown being sure that the rear strap is run through the tensioning loop ④.

IMPORTANT

Rear strap **MUST** be routed through tensioning loop ④ to properly secure cover.

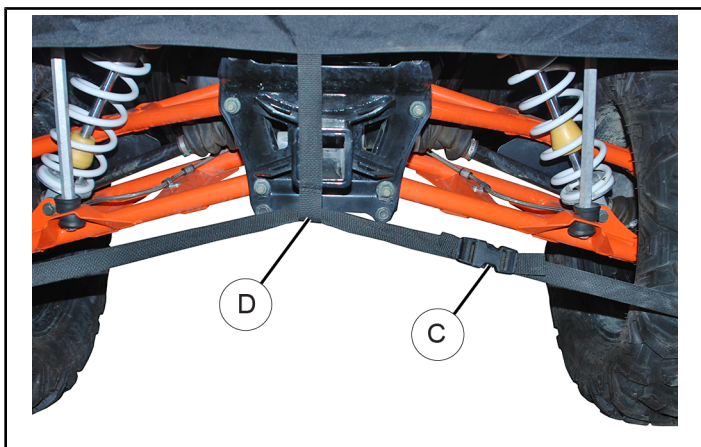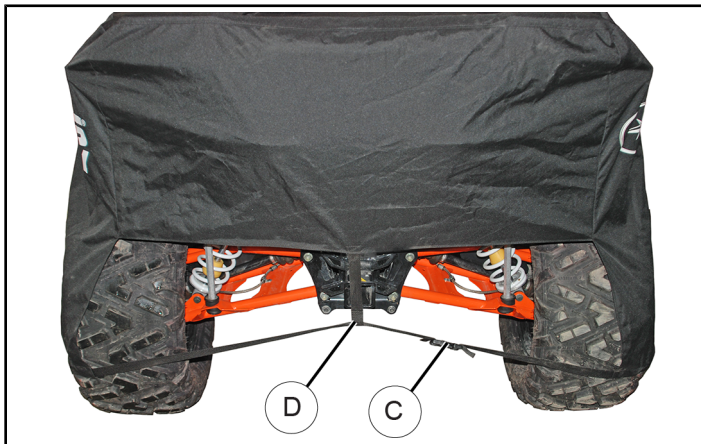


4. Secure the center portion of the cover using the two side release buckles ⑤ (one per side) located on the lower center portion of the cover as shown.



5. Make any necessary adjustments and tighten all straps to ensure the cover is fully secured.

NOTE

The center portion of the cover has two extra tensioning locks ⑥ to provide a secure fit. Be sure to properly tension before transporting vehicle.

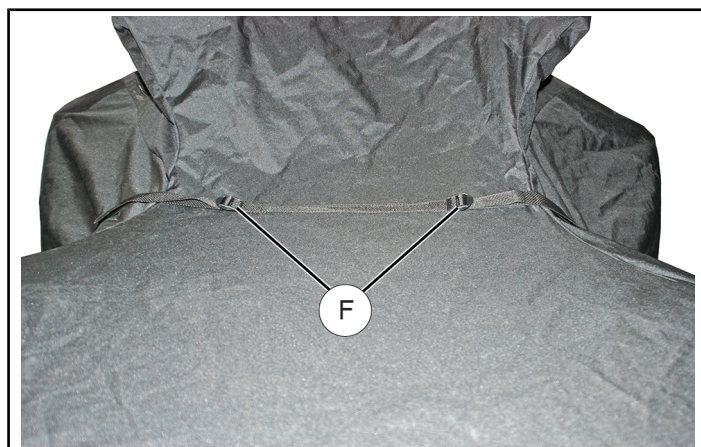

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

