

# REAR UTILITY RACK KIT



P/N 2884843


## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).

## KIT CONTENTS

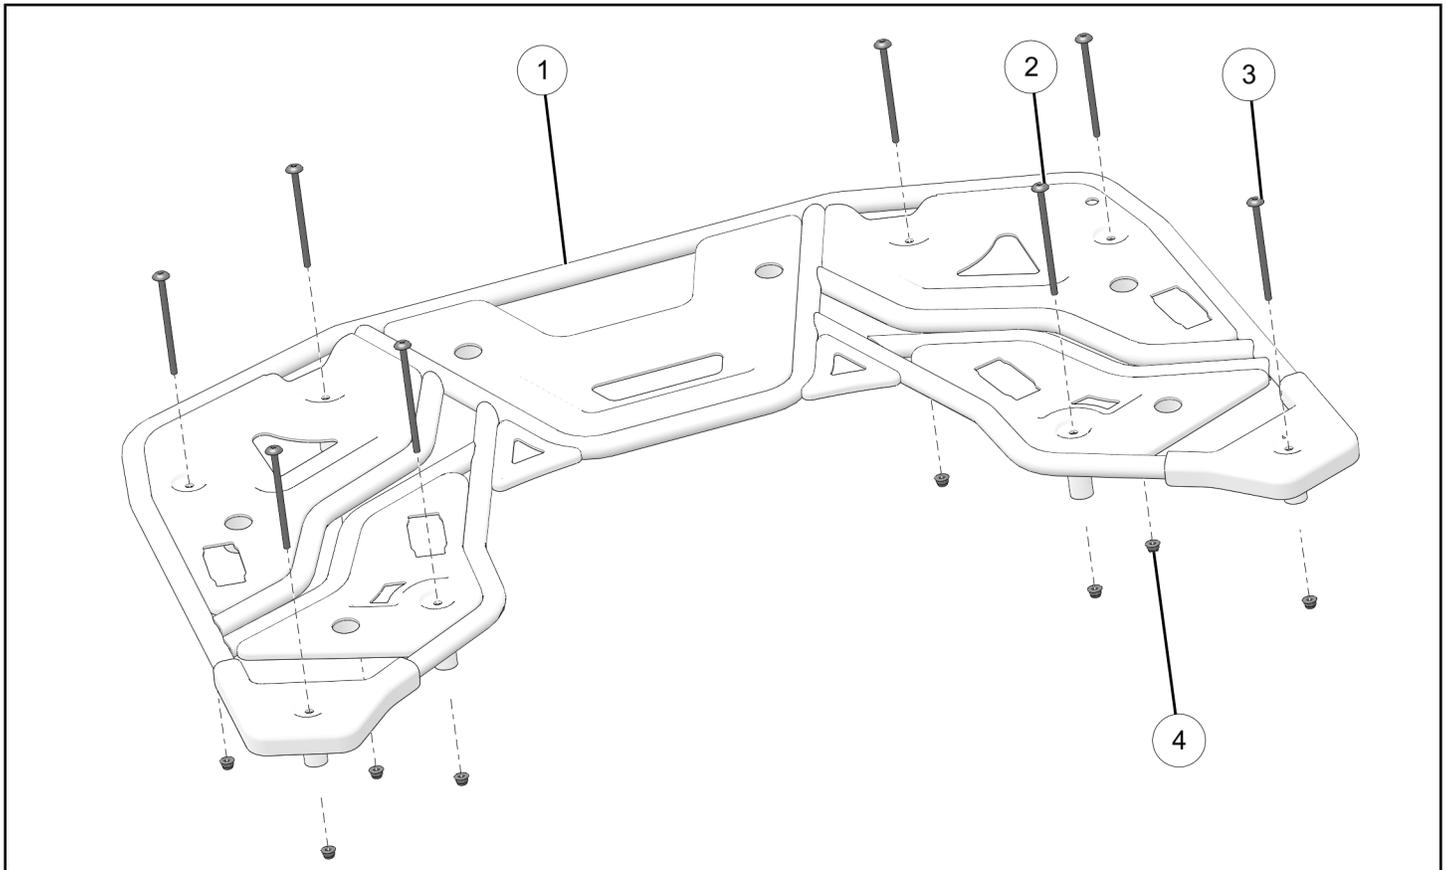

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Utility Rack, Rear	1026196	n/a
2	2	Screw – Torx® Black, M6 x 1 x 115 mm	n/a	2208764
3	6	Screw – Torx® Black, M6 x 1 x 105 mm	n/a	2208764
4	8	Nut – Hex Flange, M6 x 1 mm	n/a	2208764

## TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Socket Set, Torx® Bit
- Torque Wrench
- Wrench Set, Metric

## IMPORTANT

Your Rear Utility Rack Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS


### VEHICLE PREPARATION

#### GENERAL

1. Park vehicle on a flat surface.
2. Push engine stop switch to the OFF position.
3. Turn key to the OFF position and remove key.

### ACCESSORY INSTALLATION


1. Remove and discard eight screws and nuts from the vehicle's plastic rear rack. Remove plastic rear rack.

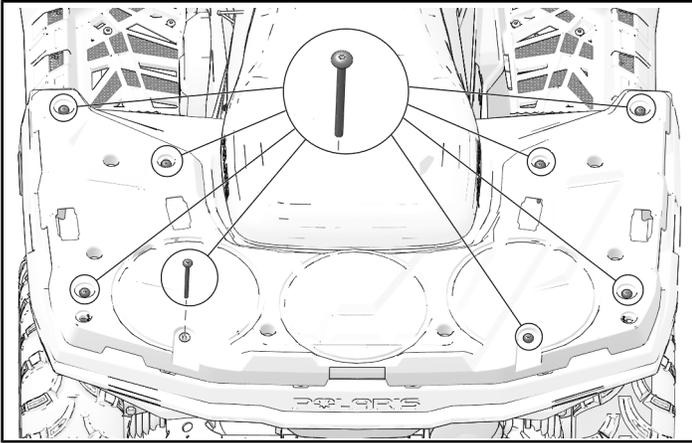

2. Align rear utility rack. Install all eight screws and nuts.

#### NOTICE

Bottom of vehicle hidden for clarity of image.

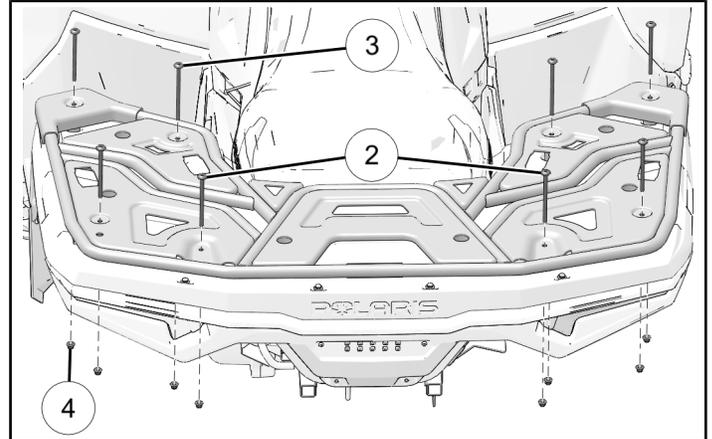

3. Counter-hold nuts and torque all screws to specification.

#### TORQUE

Rear Utility Rack Screws ② ③:  
84 in-lbs (9 N·m)

## INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

