



**Front Composite Rack Extender
2876598**

**APPLICATION:
2009 Sportsman XP Models**

This kit includes:

Qty	Part Description
1	Composite Rack Extender
6	M6-1.0 x 50mm carriage bolt
6	M6-1.0 nylock nut

IMPORTANT: Your Polaris accessory is designed exclusively for your vehicle. Please read the instructions thoroughly before beginning. Installation of any item is easier if the vehicle is clean and free of debris.


TOOLS REQUIRED:

T25 Torx
10mm wrench or socket
Drill with ¼" bit


APPROXIMATE INSTALLATION TIME: 15 minutes

INSTALLATION INSTRUCTIONS:


1. Remove front rack by releasing the Lock & Ride™ anchors.
2. Remove the four torx head bolts that hold the rack to the aluminum rack support shown below.

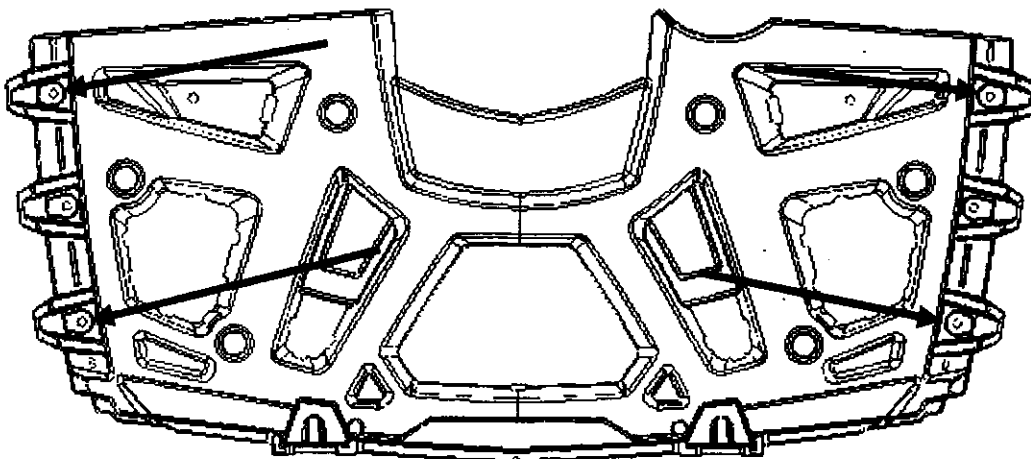

3. Drill out the front holes for the rack extender bolts shown below. Drill from the bottom side. There should already be holes through the aluminum tubing, use them as a pilot.

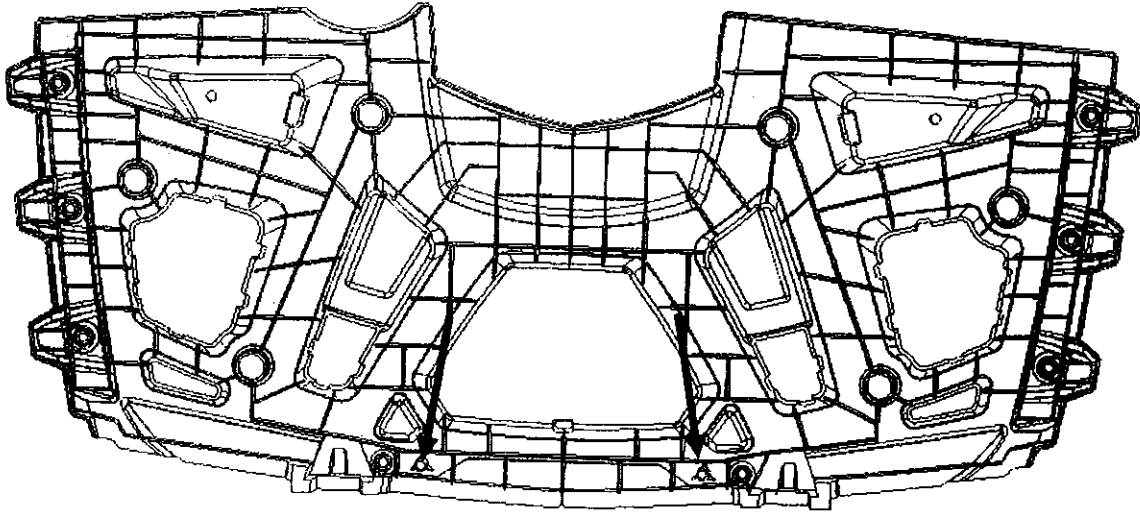

4. Place extender on rack.

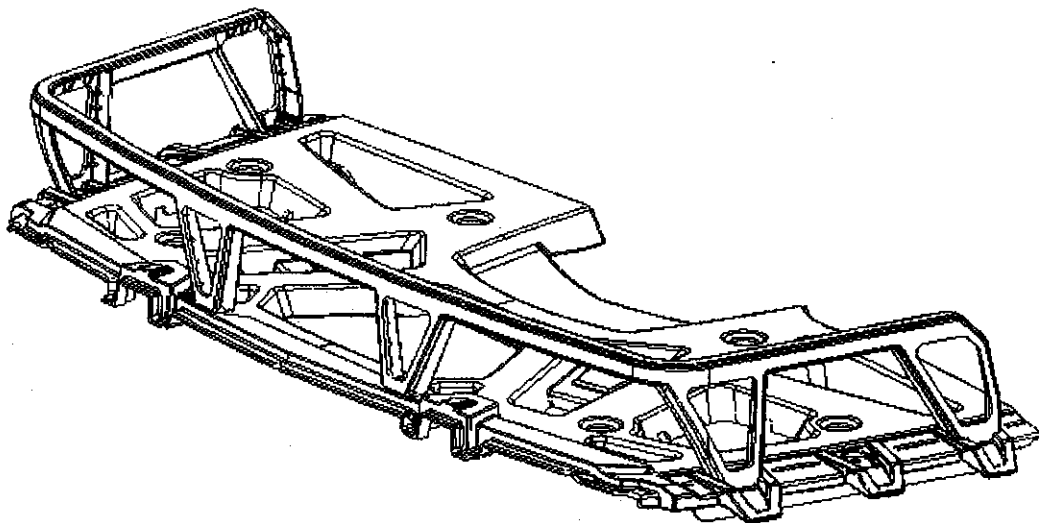

5. Install the six (6) M6 carriage bolts through the rack extender, rack & rack support.
6. Install the M6 nylock nuts onto the carriage bolts.
7. Torque nylock nuts to 5 ft-lbs.