

FRONT RACK KIT


P/N 2879716



Application

ALL SPORTSMAN MY14 AND UP

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. The following instructions contain details required to install the contents of this kit.

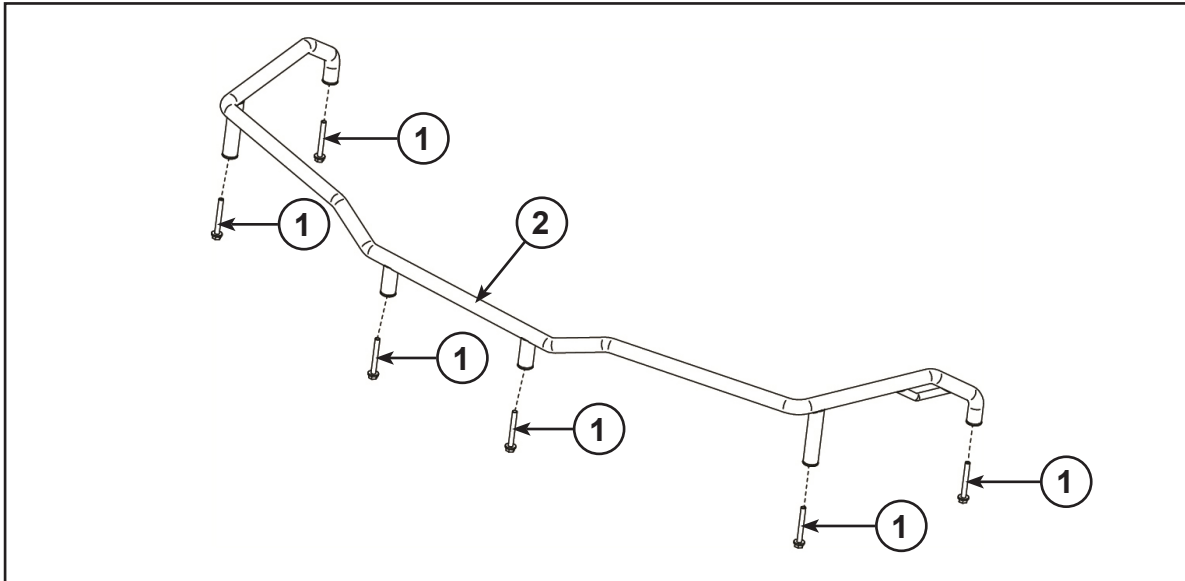

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	6	M6 x 50 mm Hex Flange Screw	-
2	2	Welded Front Rack Extender	-
	1	Instructions	9925003

Tools Required:

10 mm (3/8") Drill and Drill Bit
Torx 30 Socket



Metric Wrenches or Sockets

APPROXIMATE ASSEMBLY TIME: 15 minutes

IMPORTANT: Your Polaris accessory is exclusively designed for your vehicle. Before beginning, please read these instructions and make sure that all parts and tools are at your disposal. Keep these instructions for future reference or for any information requests. To facilitate installation, make sure that your vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS:

1. Open the front plastic rack. Remove and discard the four original machine screws and nuts holding the tubes to the rack. Figure 1.
2. Locate the marks inside the front plastic rack, and drill through the plastic using the drill bit. Figure 1.

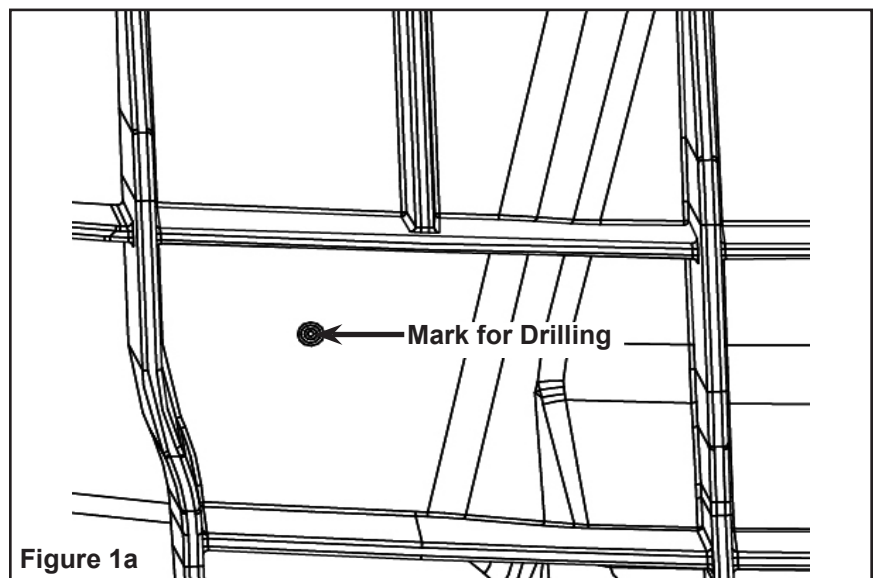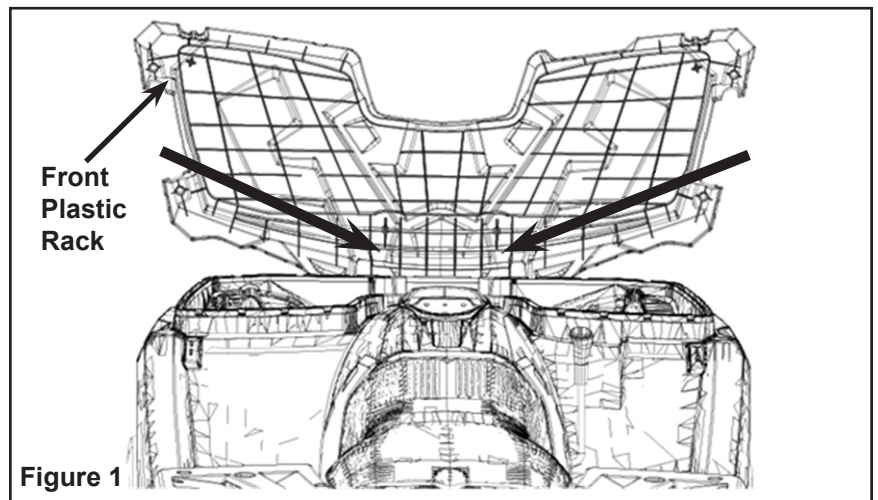

3. Place the rack extender with the six M6 x 50 mm hex flange screws included in the kit (screw the first threads only). Figure 2.
4. Tighten all screws.
5. Close the plastic rack.

