# **FLOOR MAT KIT**



# P/N 2881866, 2881867, 2881868

# **APPLICATION**


E2 / eL XD (PN 2881866), E4 (PN 2881867), E6 (PN 2881868)

## **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.


# **KIT CONTENTS**

Kit PN 2881866 includes:

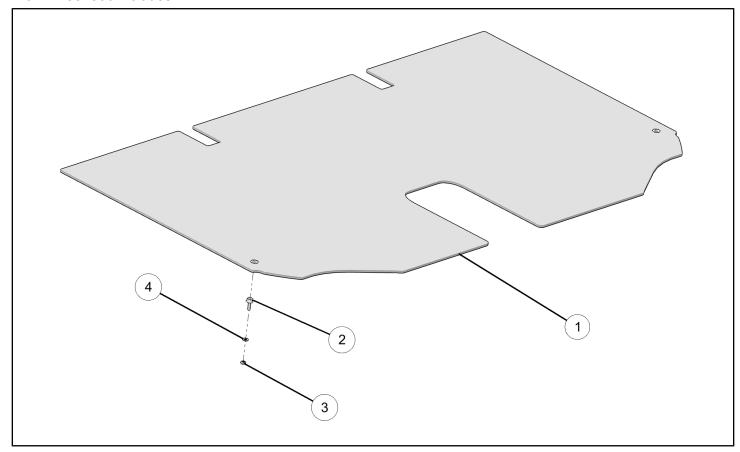


REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Front Floor Mat	2687403
2	2	Snap Stud, 8 - 32	7520402
3	2	Nut, 8 - 32	7541915
4	2	Washer 11/64 X 3/8 X 1/32	7555727
	1	Instructions	9926977

# Kit PN 2881867 includes:

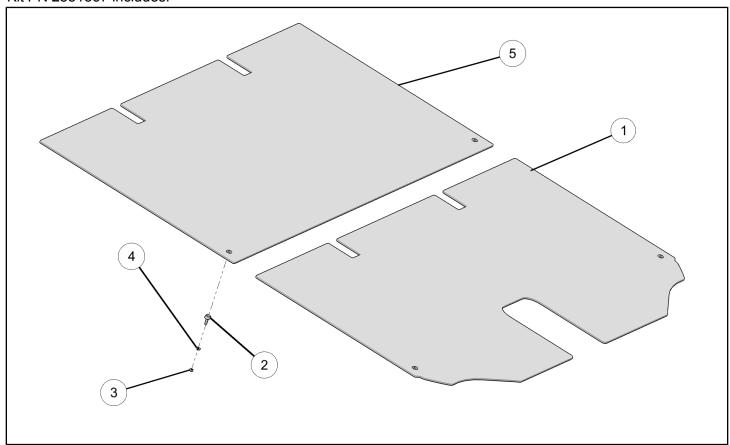

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Front Floor Mat	2687403
2	4	Snap Stud, 8 - 32	7520402
3	4	Nut, 8 - 32	7541915
4	4	Washer 11/64 X 3/8 X 1/32	7555727
5	1	Rear Floor Mat	2687404
	1	Instructions	9926977

#### Kit PN 2881868 includes:

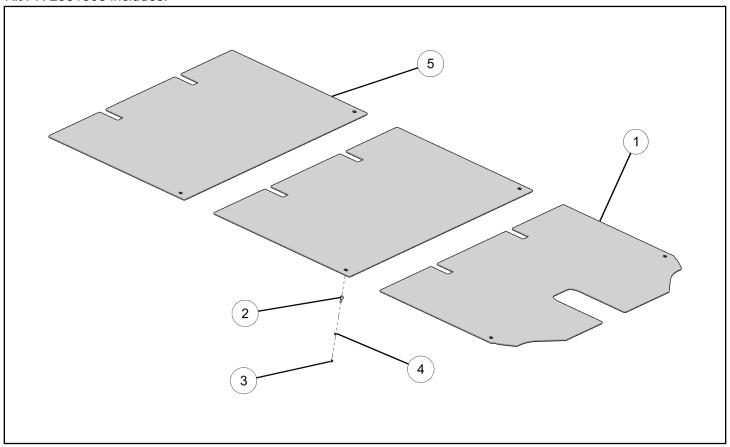

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Front Floor Mat	2687403
2	6	Snap Stud, 8 - 32	7520402
3	6	Nut, 8 - 32	7541915
4	6	Washer 11/64 X 3/8 X 1/32	7555727
5	2	Rear Floor Mat	2687404
	1	Instructions	9926977

## **TOOLS REQUIRED**

- Philips Screw Driver
- 8/32" Socket

## **IMPORTANT**

Your FLOOR MAT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


Ratchet

# **ASSEMBLY TIME**

Approximately 15 minutes

### **INSTALLATION INSTRUCTIONS**

- 1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle.
- Locate small holes (B) in floor (A) for mat installation. Holes in floor may be easier to find by looking underneath the vehicle. Below image shows four hole locations for mat installation in E4 models. E2 /eL XD will have two holes and E6 will have six holes in the floor.

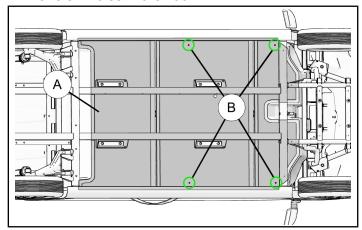


 Install snap stud ②, washer ④, and nut ③ into the floor. Tighten nut using Phillips screw driver and socket and ratchet. Torque nut to below specification.



2 lb-ft (2.7 Nm)

### **IMPORTANT**

Do not overtighten nut as this may cause the washer to embed in the floor material.

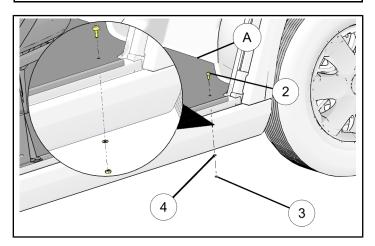

4. Install floor mats ① and ③ on floor (A) and secure by engaging the snaps studs installed in Step 3.

