

Lock n' Ride Cab Rear Panel

KIT PN 2879950 & 2879951



Application Polaris Torino (2 Passenger and 4 Passenger)

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Kit Components:

<u>QTY.</u>	<u>Part Description</u>
1	Rear Panel
5	Full Snap Clamp
1	Half Snap Clamp
11	Torx Screw
1	Spacer

Tools Needed:
T25 Torx Driver

IMPORTANT: Your Polaris accessory kit is exclusively designed for your Polaris vehicle. Please read the installation instructions and operator's manual thoroughly before beginning. Installation of any item is easier if the vehicle is clean and free of debris. **Approximate Installation Time:** 30 Minutes

INSTALLATION INSTRUCTIONS

1. Refer to the cab door instruction sheet to install door brackets, if applicable.
2. Refer to Fig. 1. Use (10) torx screws to fasten the (5) full snap clamps to the inside of the rear panel.
3. Align the half snap clamp in the middle of the rear panel as shown in Fig. 1. Place a spacer between the rear panel and the snap clamp, then fasten using a torx screw.
4. Align the assembled rear panel with the rear cab frame. Make sure all six snap clamps are aligned with the frame bars.
5. Press onto the snap clamps from the rear until they fully lock in place.
6. Tighten all hardware.

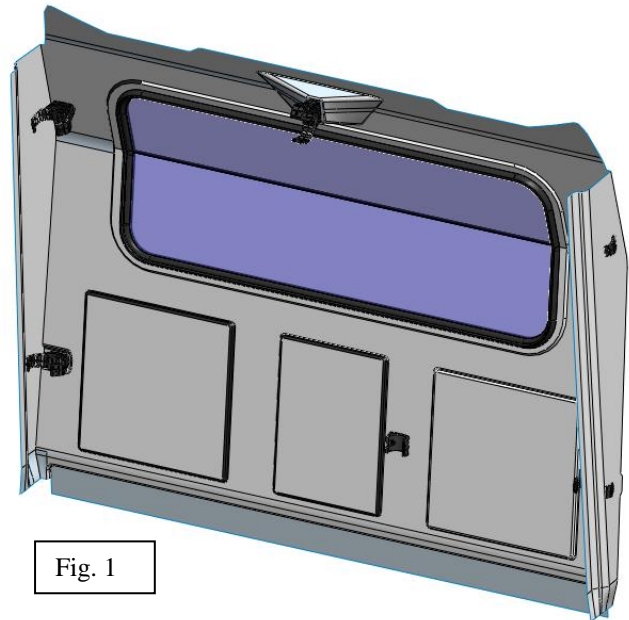


Fig. 1

IMPORTANT: Do not use glass cleaners and solvents such as ammonia, alcohol, and petroleum distillates.

Maintenance: Periodically check all fasteners for tightness and re-torque as required.

Cleaning:

1. Use an indirect high pressure water supply to rinse the large dirt particles from the rear panel.
2. Once the majority of dirt is removed, use warm soapy water and a cotton terry cloth to wash all rear panel components.
3. Rinse thoroughly and allow to air dry.
4. Use a quality polish such as Plexus® or Novus II® to clean and remove fine scratches from the rear panel.



Fig. 2