DIFFERENTIAL LOCK KIT

P/N 2880914




APPLICATION

POLARIS M1400

BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

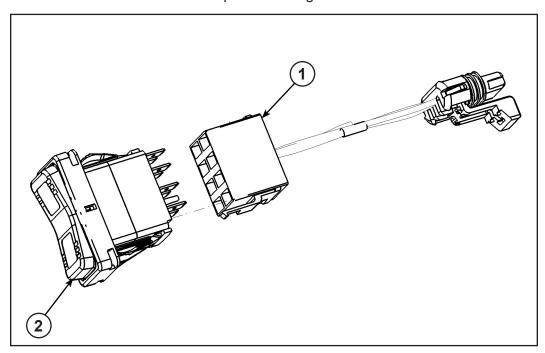

KIT CONTENTS:

Ref	Qty	Part Description	Part Number
1	1	Differential Adapter Lock	4015212
2	1	Differential Switch Lock	4011191
	1	Instructions	9925888

APPROXIMATE ASSEMBLY TIME

5 mins

IMPORTANT

Your Polaris DIFFERENTIAL LOCK KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

- 1. Lift the hood and remove jumper located under dash.
- 2. Install switch (2) in dash as shown in figure.



3. Install adapter (1) as shown in figure.

