

FLOOR MATS KIT



P/N 2881934

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

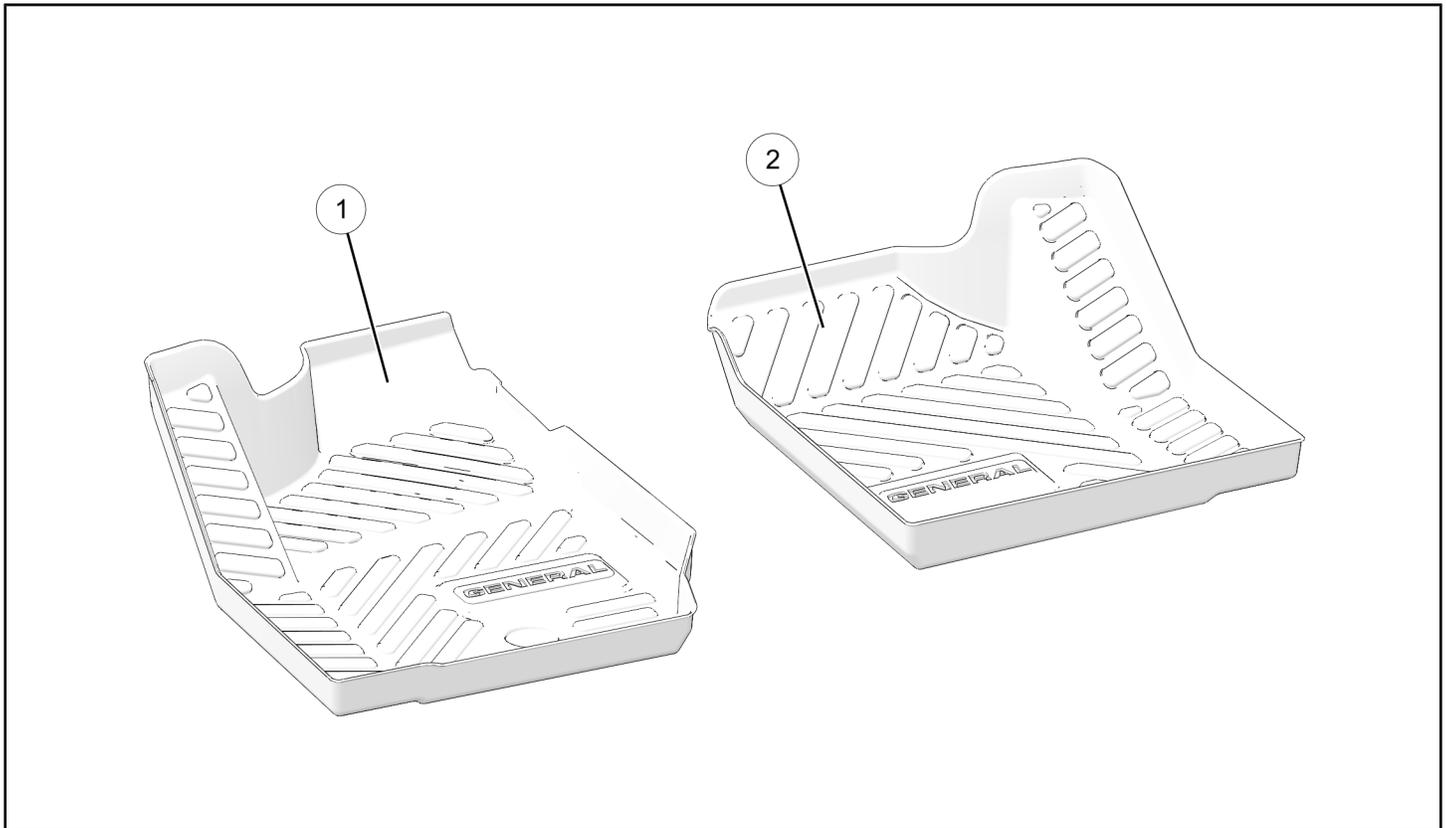

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Floor Mat, LH	5415891
2	1	Floor Mat, RH	5415892
		Instructions	9927047

TOOLS REQUIRED

- Safety Glasses
- Utility Knife/Cutting Tool

IMPORTANT

Your Floor Mats Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 5 minutes

INSTALLATION INSTRUCTIONS


1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove all objects, dirt, and debris from driver and passenger footwells.
3. Your floor mat may be installed in one of two ways:

- **WITH FLOOR DRAIN PLUGS:**

Cut circular hole (A) in each mat as shown to accommodate drain plug.

NOTE

Driver's side shown; passenger side similar.

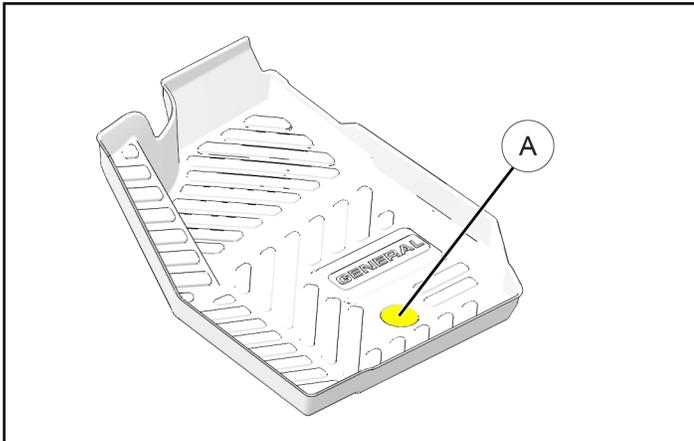


- **WITHOUT FLOOR DRAIN PLUGS:**

Remove drain plug (B) as shown to accommodate floor mat profile. Plug is not used.

NOTE

Driver's side shown; passenger side similar.

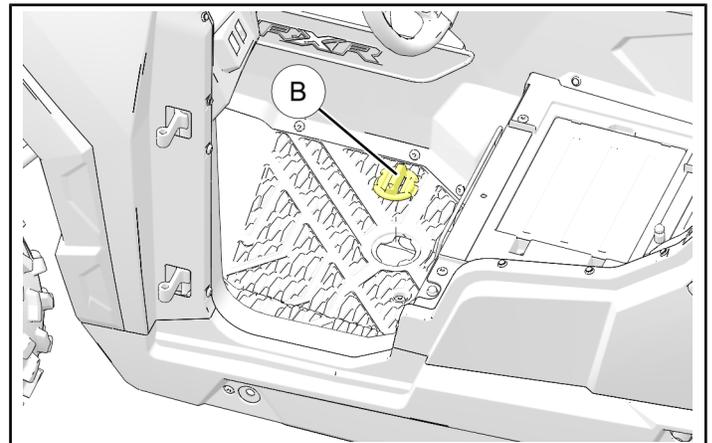

WARNING

Ensure installation of floor mat does NOT interfere with pedal operation. Interference may lead to an accident, resulting in severe injury or death.

4. Place mat into foot well, ensuring mat is fully seated at each corner.