

# GLACIER PRO POLY PLOW (66") KIT




P/N 2880269

## APPLICATION

GLACIER PRO ATV PLOW FRAME (PN 2879630)  
GLACIER PRO MIDSIZE PLOW FRAME (PN 2880260)

## BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

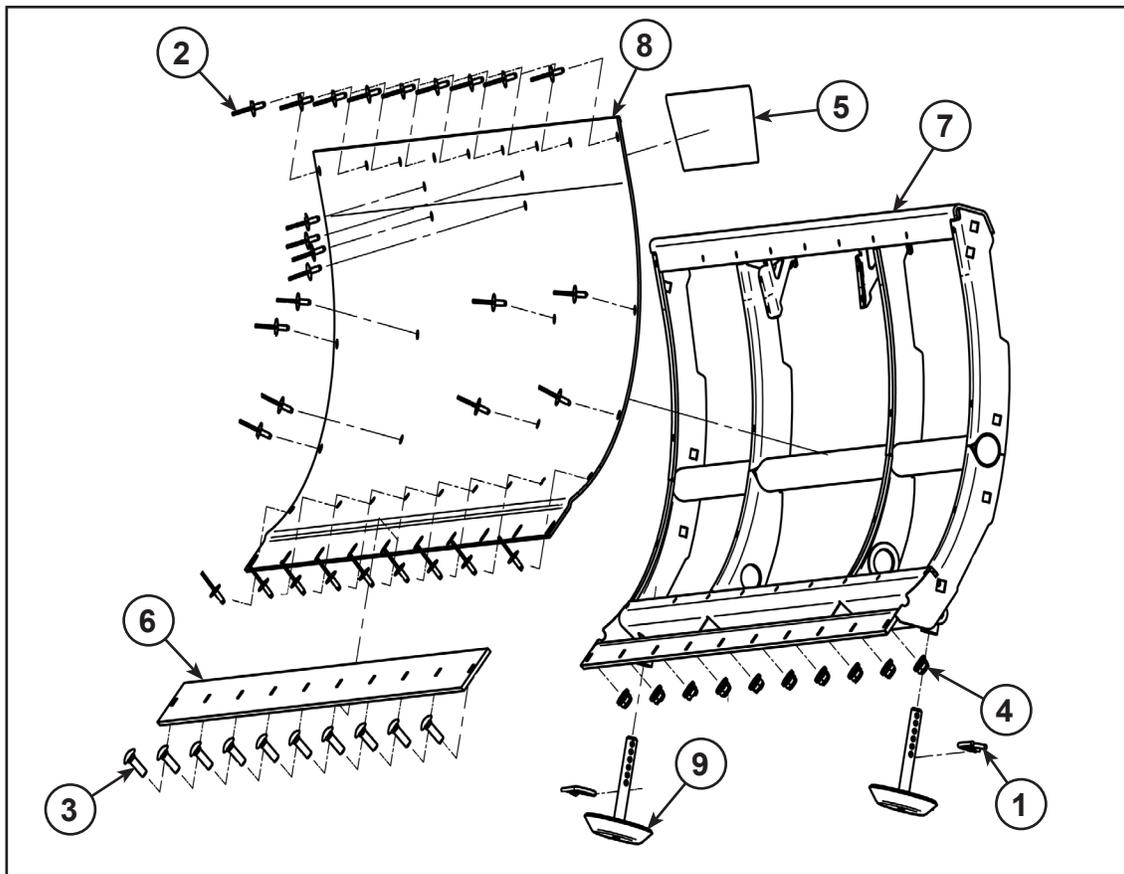

## Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	2	R-pin	2205070
2	30	Rivet	-
3	10	M8x1.25x25 mm Carriage Bolt	-
4	10	M8x1.25 Self Locking Hexagonal Nut	-
5	1	Warning Decal	-
6	1	Cutting Edge/ Wear Bar	2879867
7	1	Welded Plow/Blade Framing (66")	-
8	1	Plastic Moldboard/Polyethylene Blade (66")	2205069
9	2	Skid Shoe	2205071
	1	Instructions	9925222

**Tools Required:**

19 mm Socket and Wrench

**APPROXIMATE ASSEMBLY TIME:** 30 minutes

**IMPORTANT:** Your Polaris GLACIER PRO POLY PLOW (66") KIT is exclusively designed for your vehicle. Before beginning, please read these instructions and make sure that all parts and tools are at your disposal. Keep these instructions for future reference or part ordering information. To facilitate installation, make sure that your plow system is clean and free of debris.

**PLOW SYSTEM:**

1. Assemble as illustrated in page 1.

SPARE KITS		Wear Bar Kit (PN 2879867)	Skid Shoe Kit (PN 2205071)	R-Pin Kit (PN 2205070)	66" Skin Kit (PN 2205069)
REF.	DESCRIPTION				
1	Blade Framing (66")				
2	Wear Bar (66")	1x			
3	Plow Shoe		2x		
4	Carriage Bolt CL8.8 Zinc Plated M8-1.25 x 25mm (DIN 603)	10x			
5	Nylon Flange Nut Hexagonal Zinc Plated M8-1.25 (DIN 6926)	10x			
6	Hairpin Cotter Pin Zinc Plated 82mm Long - 4mm Wire Dia		2x	2x	
7	Polyethylene Moldboard (66")				1x
8	Blind Rivet Round Head Type Steel Black Zinc Plated Ø4.8mm X 13mm x 16mm Head				30x

**Other Accessory Kits Available For Purchase:**

1. Plow Marker Kit (PN 2872726)
2. Curb Finder Kit (PN 2879872)
3. 66" Hardened Wear Bar Kit (PN 2879868)
4. 66" Rubber Deflector Flap Kit (2879866)