

# PLOW MOUNT KIT



**P/N 2881762**

## APPLICATION


Verify accessory fitment at [Polaris.com](http://Polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

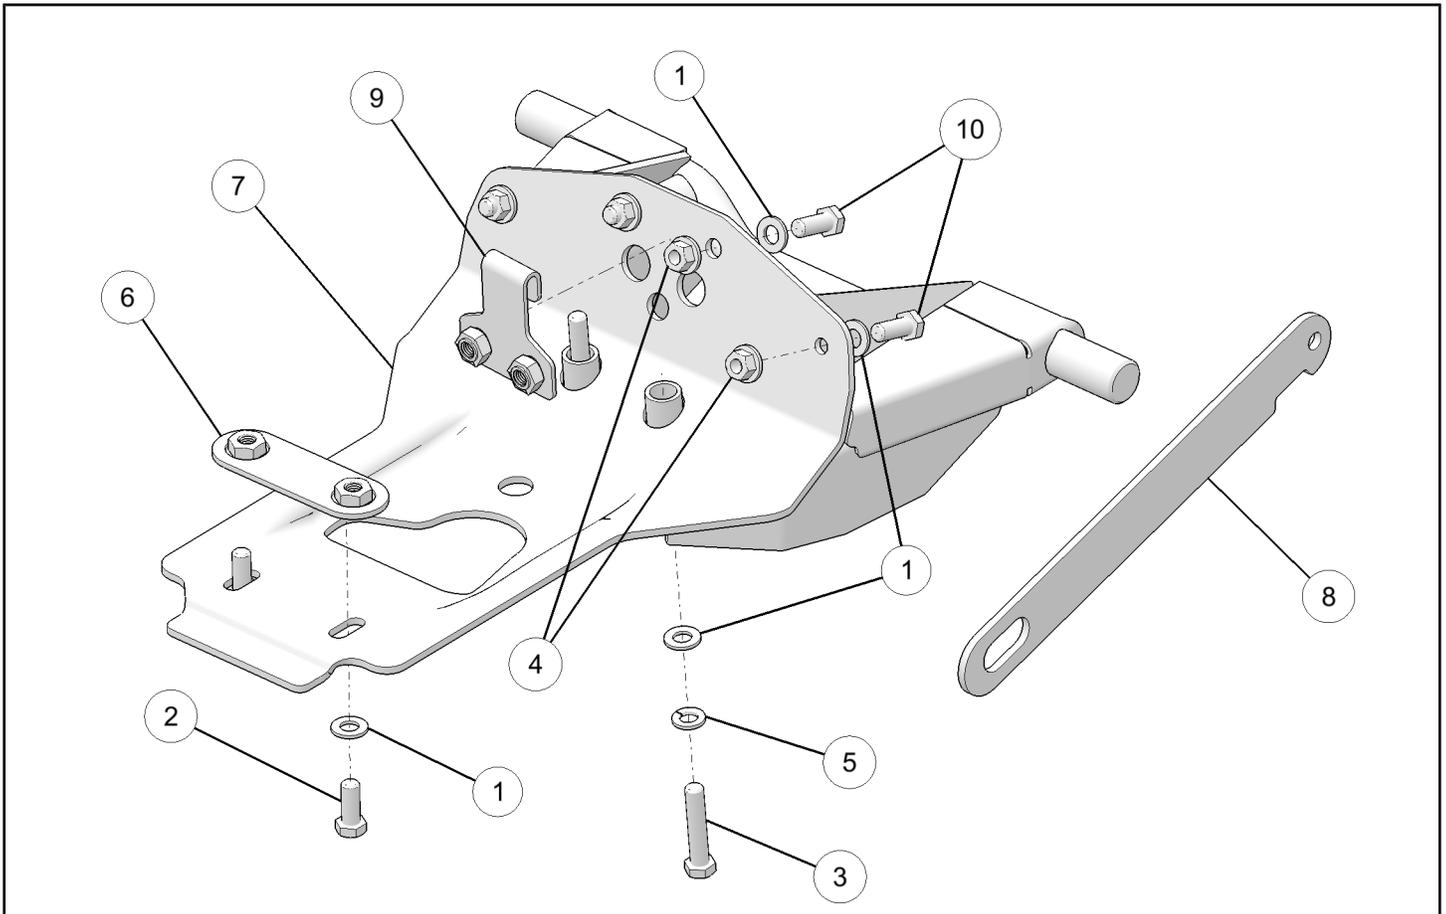

REF	QTY	PART DESCRIPTION	PART NUMBER
1*	8	Flat Washer, M10, Zinc Plated	-
2*	2	Hex Bolt, M10 X 1.5 X 25, Zinc Plated	-
3*	2	Hex Bolt, M10 X 1.5 X 50, Zinc Plated	-
4*	4	Hex Flange Nut, M8X1.25, Zinc Plated	-
5*	2	Lock Washer, M10, Zinc Plated	-
6	1	Tightening Plate Assembly	-
7	1	Welded Mount Plate	-

REF	QTY	PART DESCRIPTION	PART NUMBER
8	1	Winch Link	-
9	1	Backer Bracket	-
10*	4	Hex Bolt, M8 X 1.25 X 25, Zinc Plated	-
	1	Instructions	9926859

Items marked (\*) are included in Hardware Kit PN 2206295.

## TOOLS REQUIRED

Wrench and Socket Set

## IMPORTANT


Your PLOW MOUNT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME


Approximately 40 minutes

## INSTALLATION INSTRUCTIONS


1. Install winch kit (PN 2881098, 2881099, 2881255) on your vehicle referring winch installation instructions.
2. If you have a bumper kit (PN 2881094) installed, you will need to remove it at this time. Also remove backer plate (A) from vehicle chassis. This plate will be replaced with new plate ⑨ supplied in the plow kit.

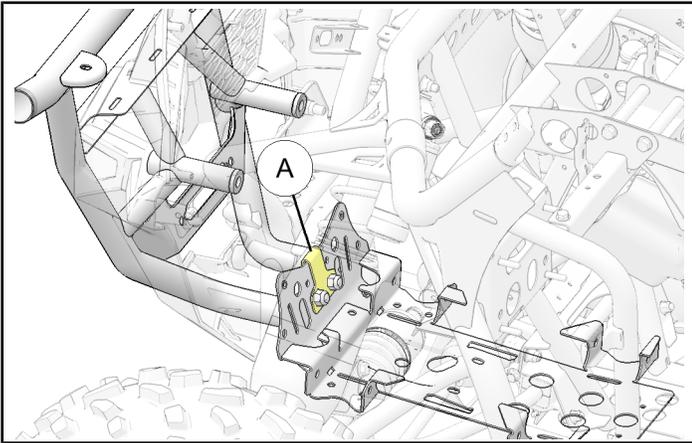


3. Remove front two lower bolts (B) from front drive assembly (C) as shown. New bolts ③ supplied in plow kit will be used for reinstallation.

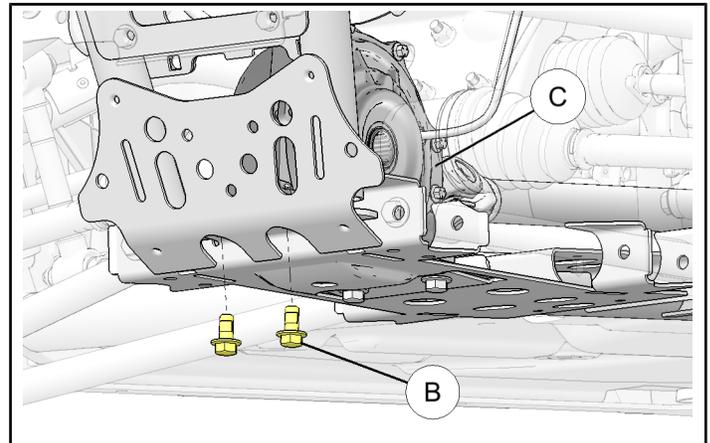


4. Align plow mount ⑦ to bracket (D) and install bolts ⑩ with flat washers ① from front of vehicle and four nuts ④ without washers at rear. Do not tighten bolts at this time.

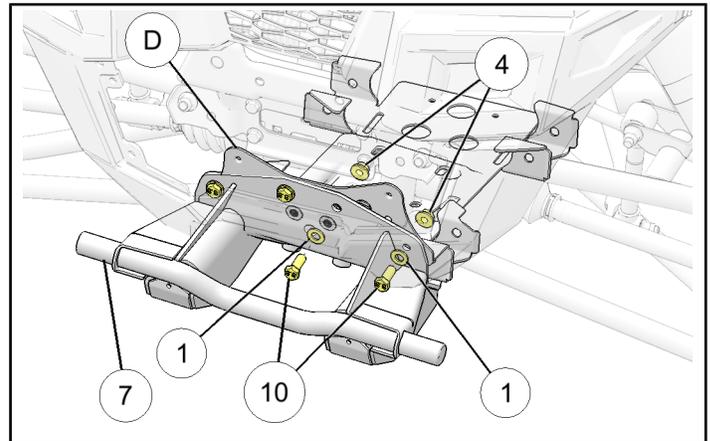

5. Install two lock washers ⑤ and flat washers ① onto front bolts ③. Install bolts from underneath and thread into front drive where bolts were removed in Step 3. Install flat washers on rear bolts as shown and insert through mount and skid plate (E) into nut plate ⑥ as shown. Do not tighten bolts at this time.

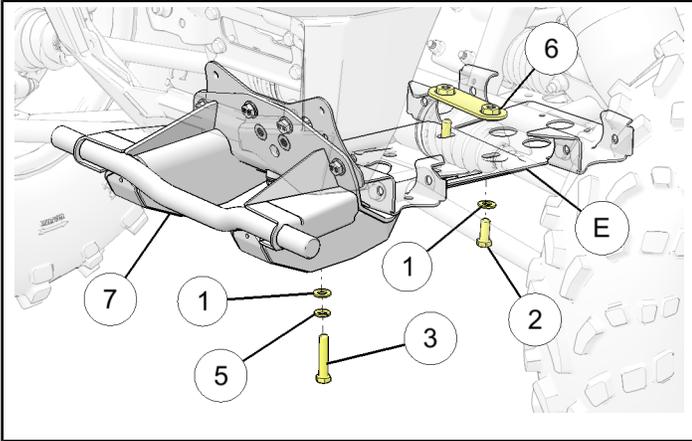

6. If you are not installing a front bumper at this time, set this nut plate ⑨ aside for possible future use. If you are installing a front bumper, install nut plate in position as shown to allow installation of upper bumper bolts in this location.

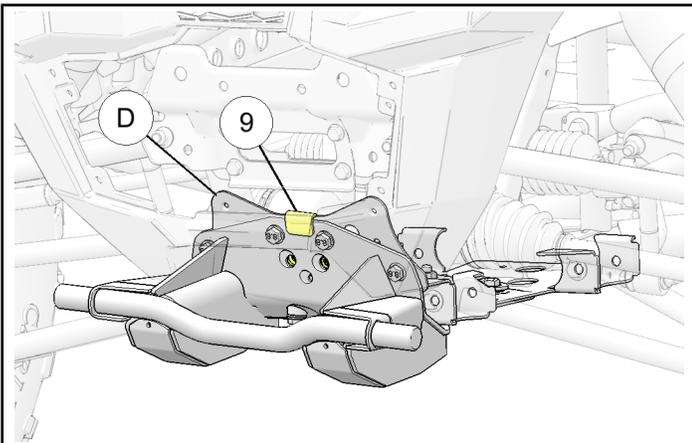

7. Tighten four front bolts ⑩ to following specification.

TORQUE
25 ft. lbs. (33.9 Nm)

8. Tighten rear bolts ② to following specification.

TORQUE
25 ft. lbs. (33.9 Nm)

9. Tighten bolts ③ into front drive to following specification.

TORQUE
33 ft. lbs. (44.7 Nm)

10. Connect winch hook to the plow lift link ⑧.

11. If bumper kit was removed in Step 2, reinstall at this time.

## COMPATIBILITY

- Compatible with Front Bumper Kit PN 2881094
- Not compatible with Plow Mount Extension Kit PN 2880267
- Plow mount kit PN 2881762 is meant to be used with Frame kit PN 2878822 and 72" Blade kit PN 2877736 or 2878848

## Additional Service Parts

Plow Marker	PN 2872726
Skid Shoe	PN 2877245
72" Standard Cutting Edge	PN 2204976
72" Hardened Cutting Edge	PN 2879875