

BED LINER KIT



P/N 2881933

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

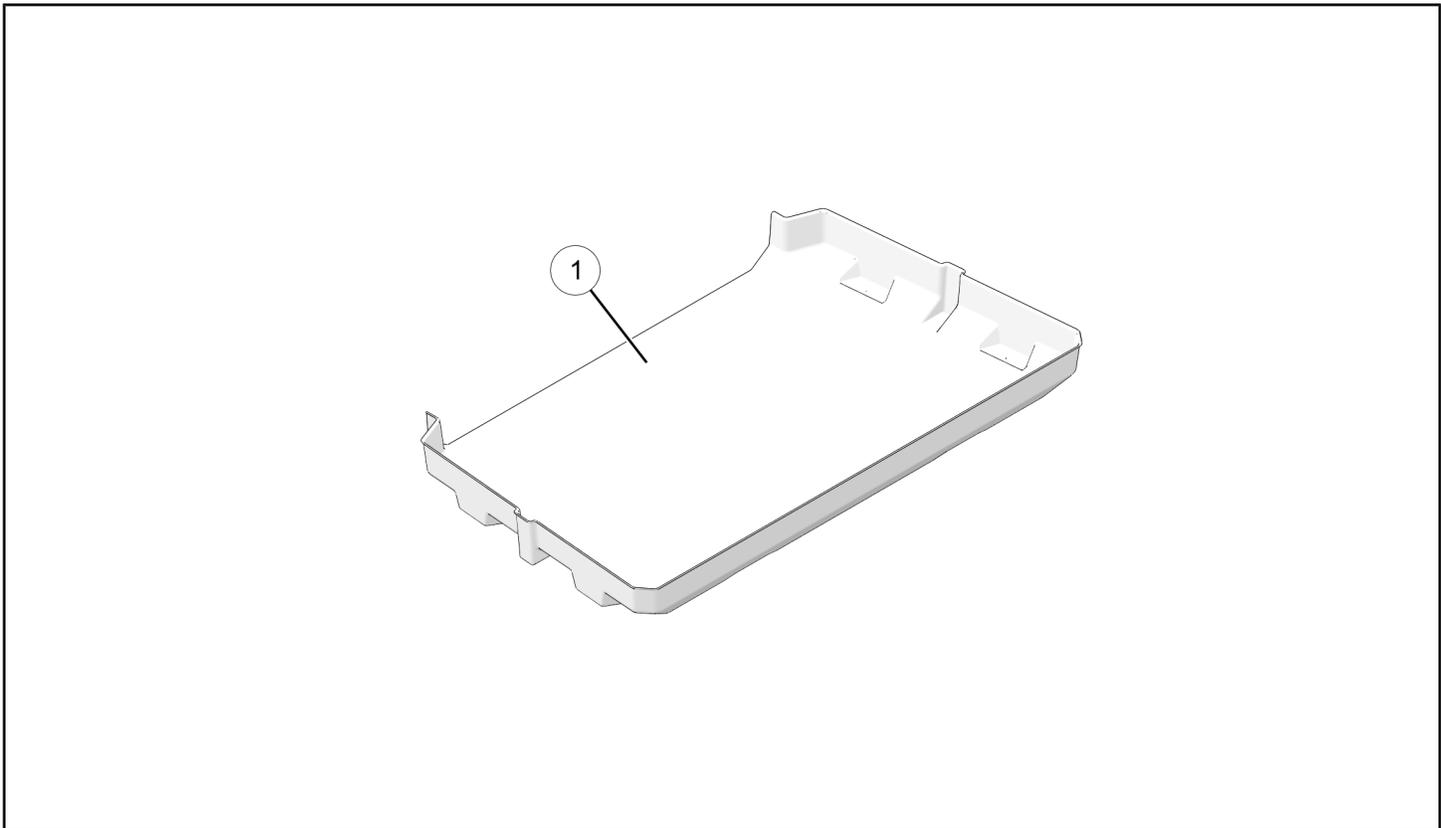

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Bed Liner	—
		Instructions	9927046

TOOLS REQUIRED

- Safety Glasses

IMPORTANT

Your Bed Liner Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 5 minutes

INSTALLATION INSTRUCTIONS

WARNING

Do not trailer vehicle with bed liner installed! Airflow, vibration, or other factors may cause liner to come out of vehicle bed and cause an accident, resulting in personal injury or death.

1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove all objects, dirt, and debris from vehicle bed.
3. Place liner into bed, ensuring liner is fully seated at each corner.