

# POLY HALF WINDSHIELD KIT



**P/N 2881111**

## APPLICATION


Verify accessory fitment at [Polaris.com](http://Polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

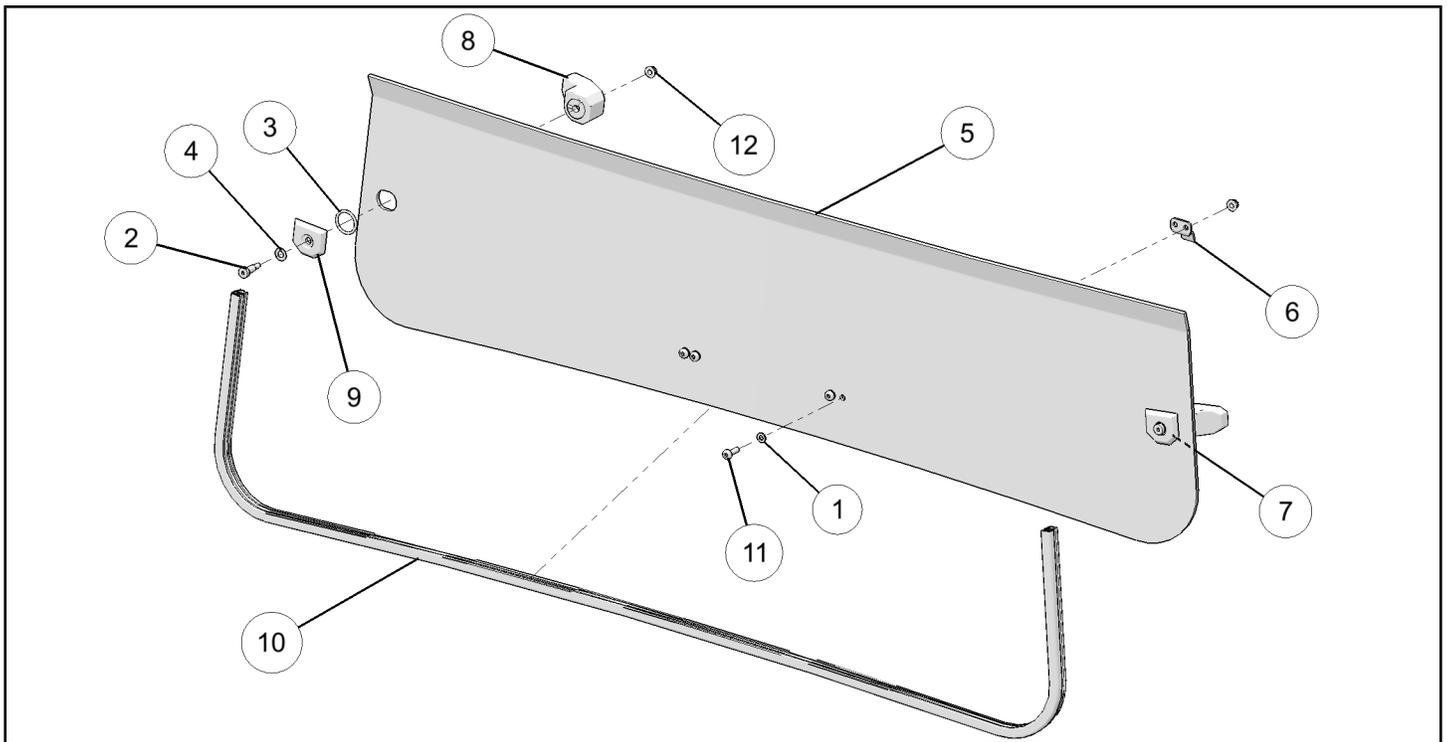

REF	QTY	PART DESCRIPTION	PART NUMBER
1*	4	Washer - 6.0 X 12 X 1.6	-
2*	2	Bolt, Shoulder, M8 – 16, M6 X 1.0	-
3*	2	O-Ring - 25 X 3.0	-
4*	2	Washer - 8.40 X 16 X 0.8	-
5	1	Poly Half Windshield	2635892
6*	2	Bracket	5259092
7*	1	Base, LH	5451908
8*	2	Handle	5452531
9*	1	Base, RH	5452532
10	1	Seal	5522140

REF	QTY	PART DESCRIPTION	PART NUMBER
11*	4	Screw, Torx® - M6 X 1.0 X 20	7518546
12*	6	Nut, Hex Flange, M6 X 1.0	7547453
	1	Instructions	9926169

Items marked (\*) are included in Hardware Kit PN 2205986.

## TOOLS REQUIRED

- Safety Glasses
- Screwdriver, Slotted
- Utility Knife or Other Cutting Tool

## IMPORTANT

Your POLY HALF WINDSHIELD KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME



Approximately 25 minutes

## INSTALLATION INSTRUCTIONS

1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle.
2. Prepare upper dash panel
  - a. Remove hood.
  - b. Remove five plastic push rivets (A) from forward side of upper dash panel (B) as shown.
  - c. Slide upper dash panel (B) to rear, disengaging eight spring clips (C) retaining upper dash panel to main dash panel (D) as shown.

### NOTE

Push rivets can be removed by prying up center pin with slotted screwdriver (or equivalent).

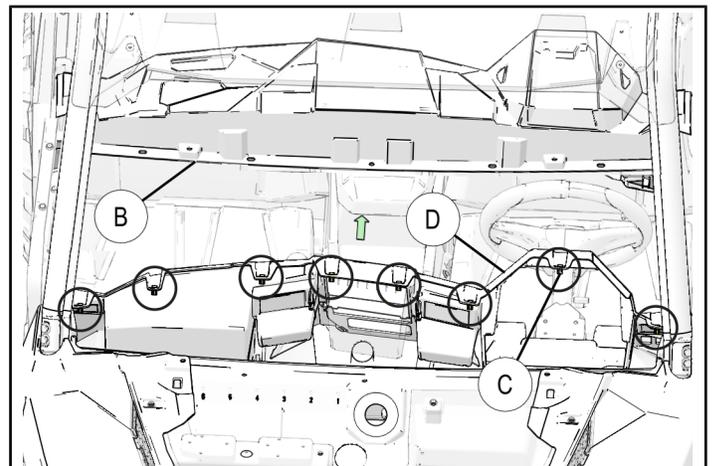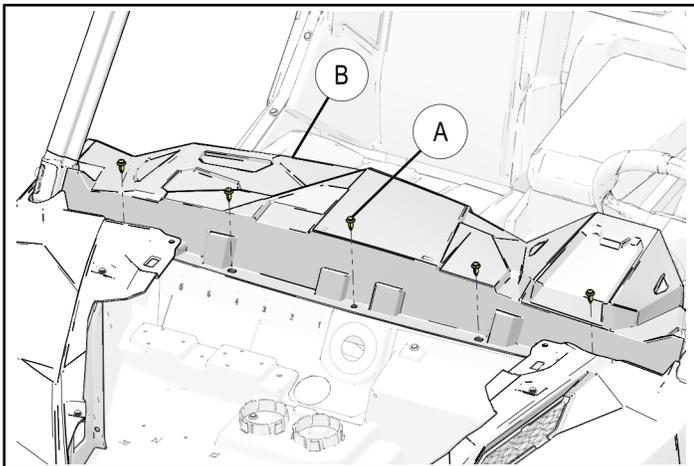


- d. Turn upper dash panel (B) upside down and place on protective surface.


- e. Using knife (or equivalent) carefully cut two rectangular slots (E) in upper dash panel (B) as shown.

**NOTE**

Cutting locations are marked in panel. Slots will accommodate brackets ⑥.

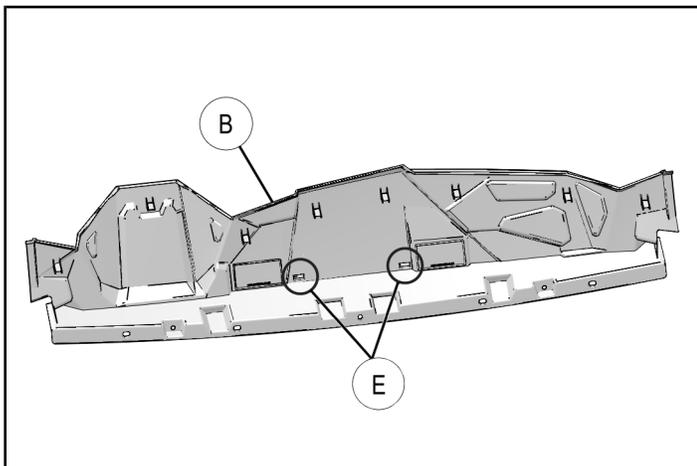

- f. Reinstall upper dash panel (B) by reversing previous steps.  
g. Reinstall hood.  
3. Turn two handles ⑧ so they are in unlocked position (parallel with sides of windshield) as shown.

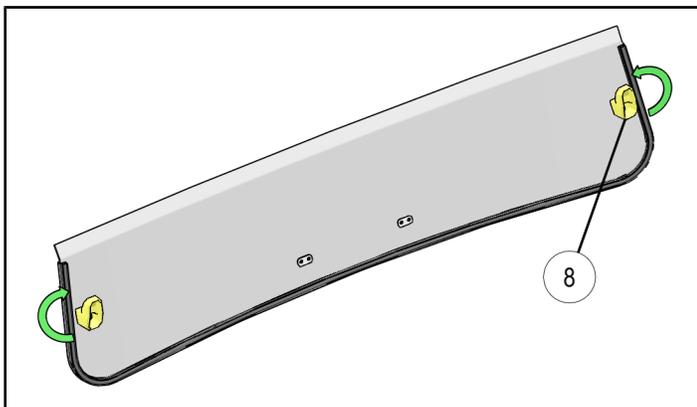

4. Install windshield ⑤ by inserting brackets ⑥ into newly cut slots (E) as shown. Pivot windshield into ROPS, then turn handles ⑧ to locked position (perpendicular to sides of windshield) as shown.

**NOTE**

Tighten bolts ② as required to achieve desired level of handle resistance.

