

# WINDSHIELD BAG 12V POWER KIT


**KIT P/N 2880105**



## Application

Chief and Vintage models with 2879577 windshield bag kit installed

**NOTE:** Before you begin, read these instructions and check to be sure all parts and tools are accounted for in package. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown below.

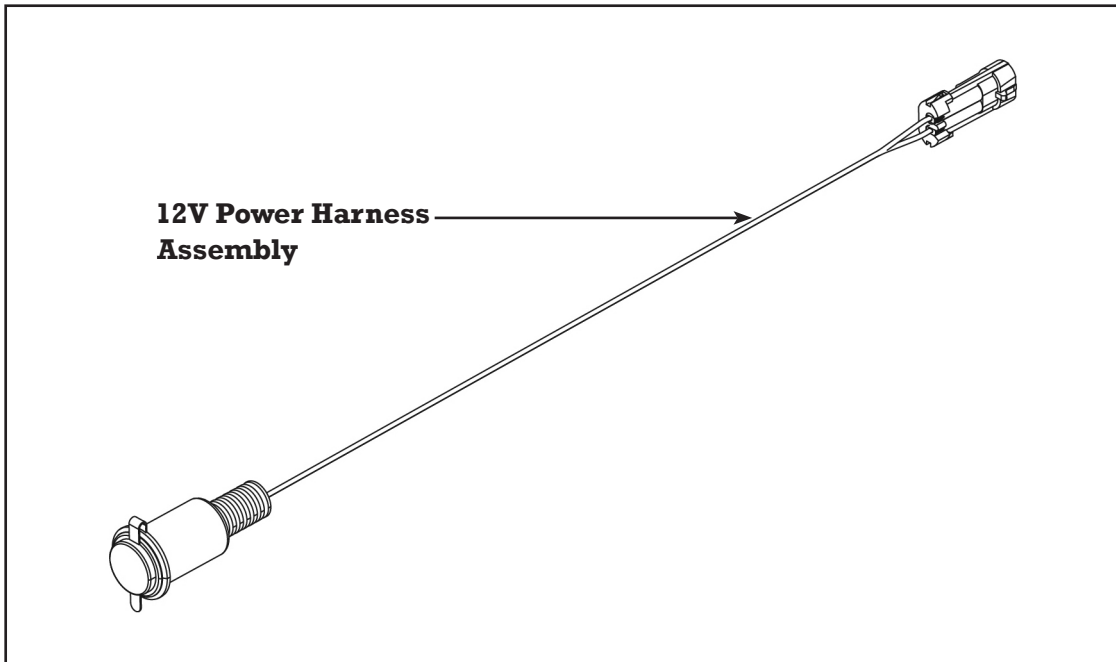

## Kit Contents:

Quantity	Part Description	Part Number
1	12V Power Harness Assembly	2412740
1	Panduit Strap	7080138
1	Instructions	9924999

**APPROXIMATE ASSEMBLY TIME:** 12 minutes

## **INSTALLATION INSTRUCTIONS**

1. From the inside of the windshield bag, route the wire end of the 12V harness through the velcro opening of the liner then through the opening found in the lower LH corner of the windshield bag. Secure 12V plug inside the windshield bag using the existing elastic loop. See Figure 1.
2. Route the wire through the opening at the headlight nacelle used to route the clutch cable.
3. Route the wire in front of the steering neck and over to the RH side of the vehicle.
4. Assemble Delphi plug to the harness ends. Note A and B pin locations on the plug and mate them with the coordinating labeled wire pins. Snap connector seal into place. See Figure 2.
5. Locate the accessory 12V power supply (the mating male Delphi connector) inside the headlight nacelle on the RH side of the rear opening. This connector will be part of the main vehicle wiring harness. Remove protective dust cap from Accessory 12V Supply. Plug the connector into vehicle harness.
6. Use panduit strap from kit to secure power harness inside the headlight nacelle.  
**NOTE:** Check for binding. Rotate steering angles from left to right lock. Adjust if necessary.

