

BILLET PASSENGER FLOORBOARD KIT



P/N 2882866-156, 2882866-468

APPLICATION

2014 and newer Indian® Motorcycles with Thunderstroke 111


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This kit contains parts for installation of the Billet Passenger Floorboards only. Prior installation of the Floorboard Mount Kit, PN 2880288 (sold separately), or Original Equipment Floorboards is also required.

This Kit includes:

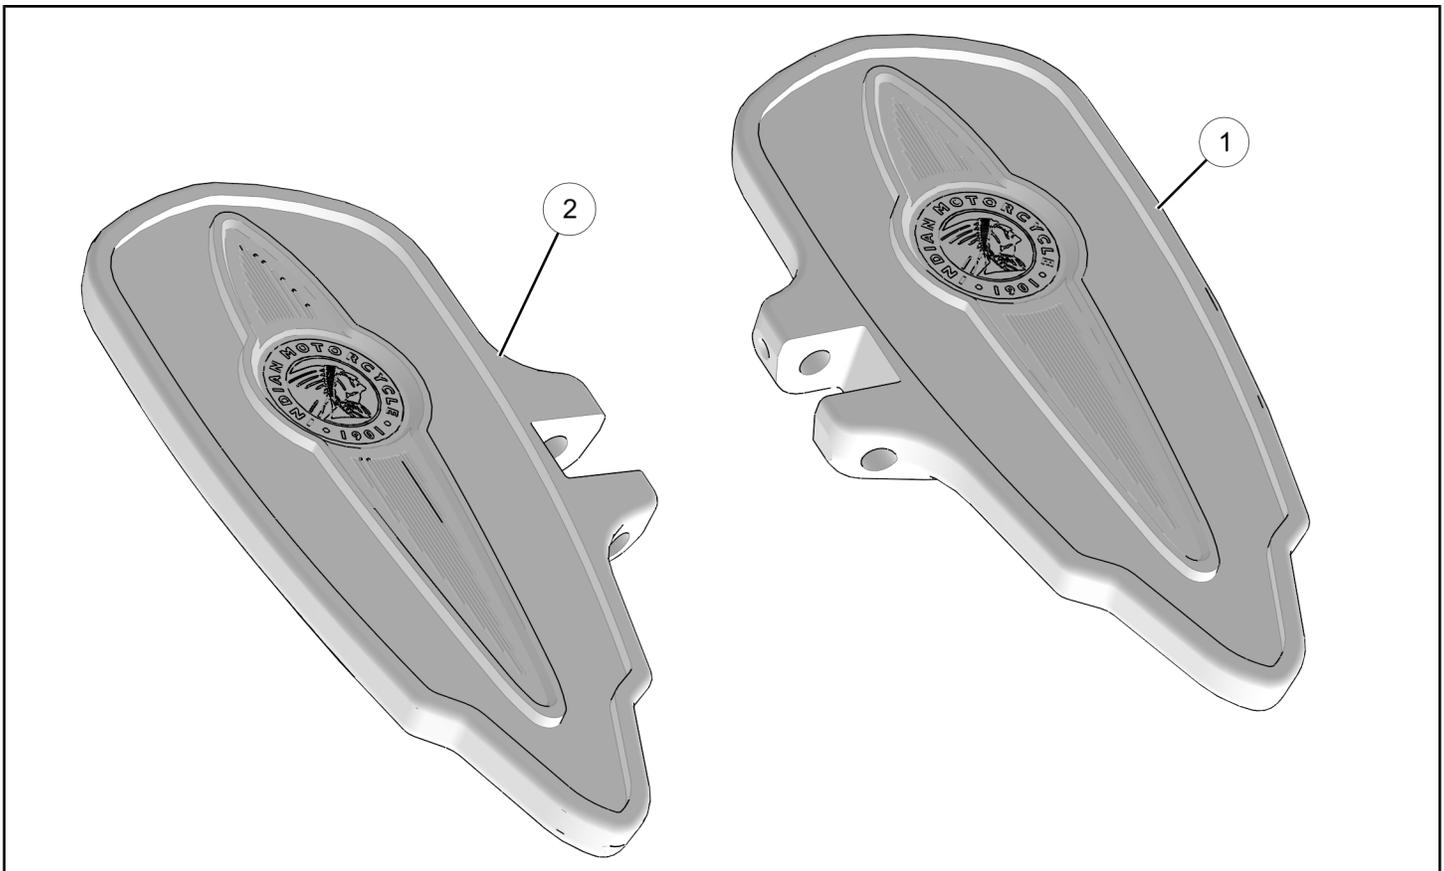

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Floorboard, Passenger, Ness, 16, RH, Chrome Floorboard, Passenger, Ness, 16 RH, Anodized Black	5141384-156 5141384-468
2	1	Floorboard, Passenger, Ness, 16, LH, Chrome Floorboard, Passenger, Ness, 16, LH, Anodized Black	5141385-156 5141385-468
	1	Instructions	9924998

TOOLS REQUIRED

- Safety Glasses
- Screwdriver, Slotted

- Pick Tool Set
- Small Needle Nose Pliers

IMPORTANT


Your Indian Billet Passenger Floorboard Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 18 minutes

INSTALLATION INSTRUCTIONS


1. Turn key or ignition switch to “OFF” position and remove key. If equipped with keyless fob, remove fob from proximity of vehicle.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.
3. If no floorboards are installed, install Floorboard Mount Kit 2880288 and skip to **step 5**.
4. **If floorboards previously installed:**
 - a. Remove and retain spiral ring clip **A** from pin **B**.

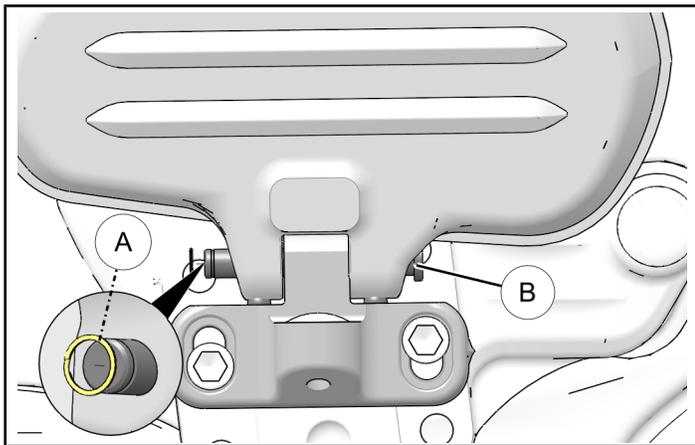


- b. Remove pin **B** by pressing out towards large end. Use caution not to lose Detent Balls **D** and Detent Springs **C** when removing original floorboard.

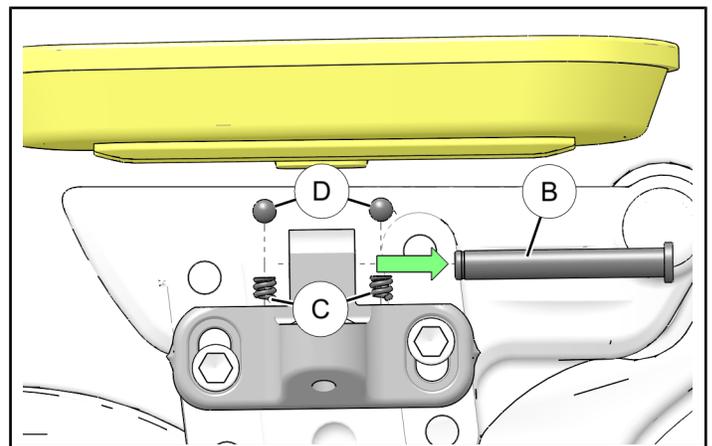


5. Ensure two Detent Springs **C** and two Detent Balls **D** are installed in Floorboard Mount holes.

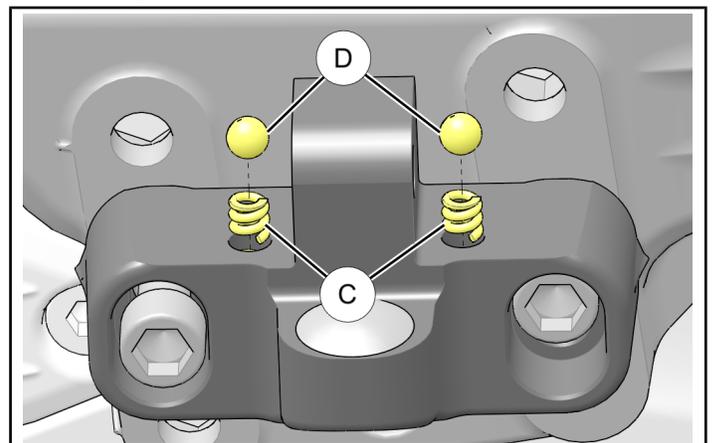

6. Carefully place Floorboard ① into position, depressing springs and balls into pivot. Align holes and insert pin ② from front side.

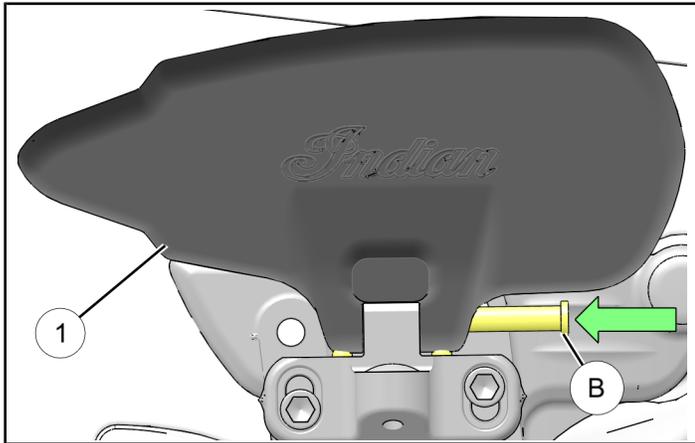

7. Install Spiral Ring Clip ③ into groove on Pin ②. Ensure ring is fully seated in groove.

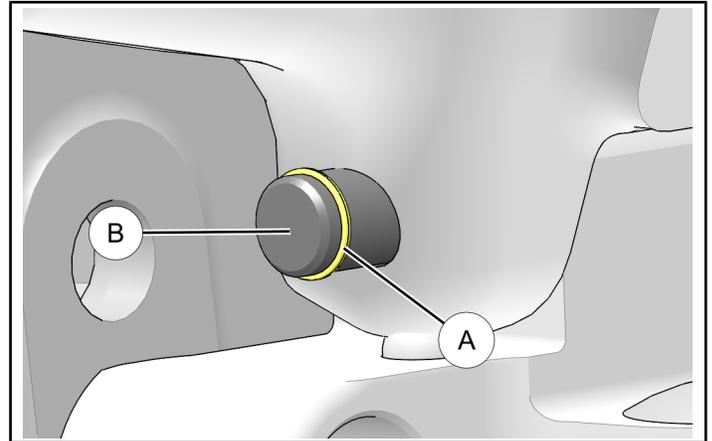

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

