

FLOORBOARD KIT



P/N 2883056-XXX

APPLICATION

All Indian Scout Motorcycles


Verify accessory fitment at www.indianmotorcycle.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

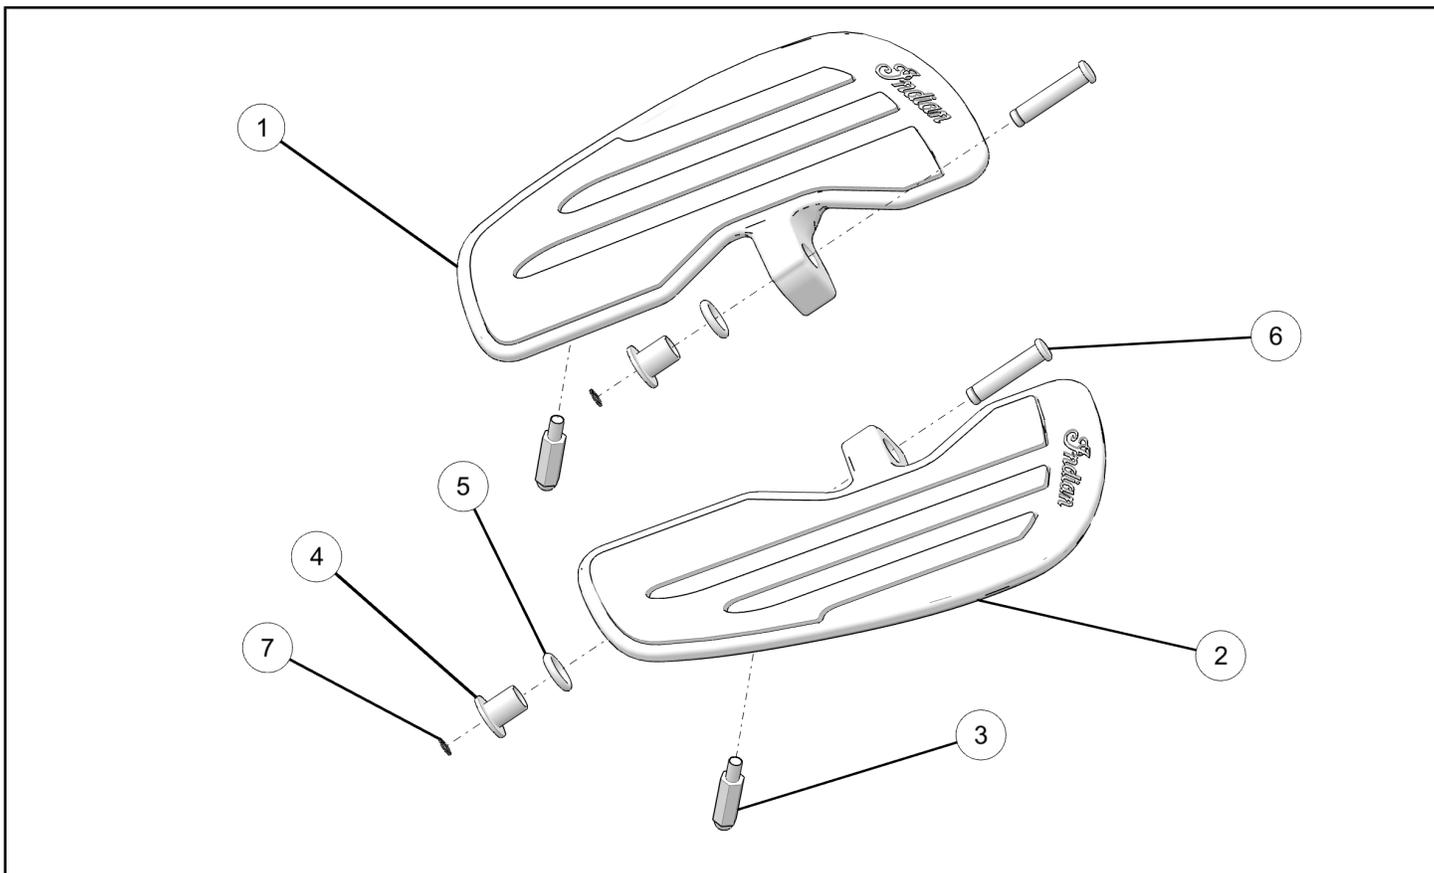

NOTE

XXX = Indian® color code (For example: 658= Black)

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Assembly, Floorboard, Scout, LH	-
2	1	Assembly, Floorboard, Scout, RH	-
3	2	Peg-Feeler, Floorboard	5141025
4	2	Bushing, Floorboard	-
5	2	O-ring, .484 X .139	5410675

REF	QTY	PART DESCRIPTION	PART NUMBER
6	2	Pivot Pin, Footpeg	7661980
7	2	Retaining Ring, Spiral, External	7710644
	1	Instructions	9927057

TOOLS REQUIRED

- Safety Glasses
- Screwdriver, Slotted
- Socket Set, Metric
- Torque Wrench

IMPORTANT


Your Indian Floorboard Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 24 minutes

INSTALLATION INSTRUCTIONS


1. Remove retaining ring (A) from footpeg pivot pin (B). Repeat process on opposite side of vehicle.

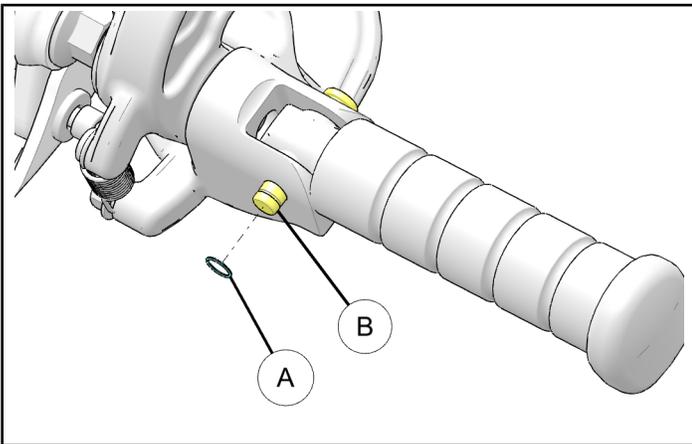

2. Remove pivot pin (B) from footpeg mount and remove footpeg (C). Repeat process on opposite side of vehicle.

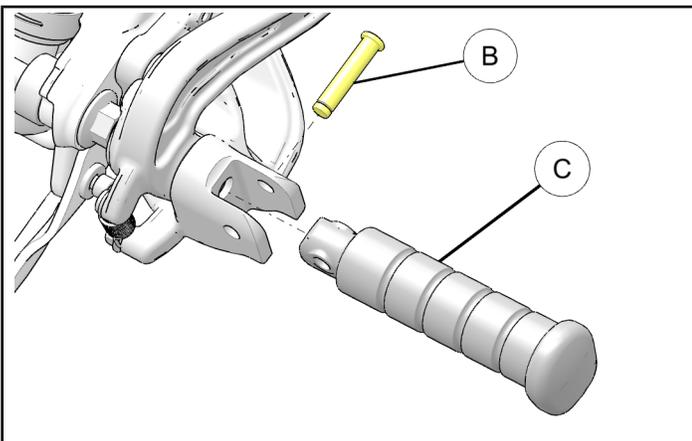


3. Install floorboard feeler (3) into left (1) and right (2) floorboards. Torque to specification.

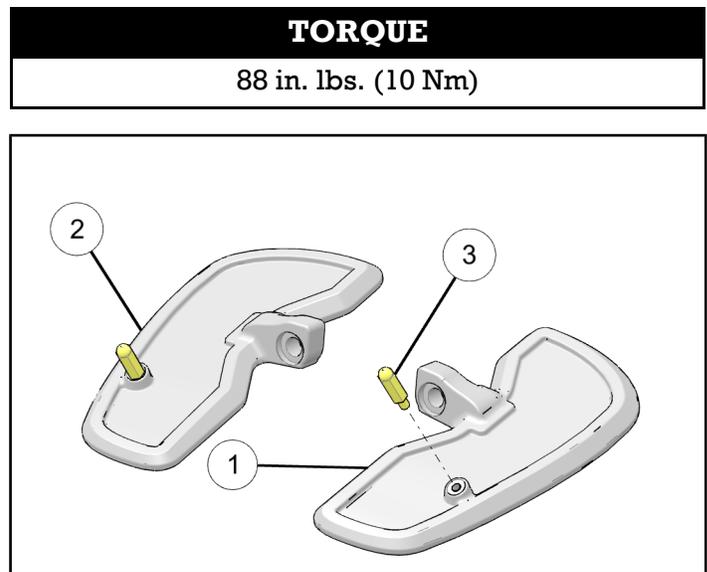


TORQUE

88 in. lbs. (10 Nm)


4. Slide O-ring (5) onto floorboard bushing (4). Repeat process for second O-ring and bushing.

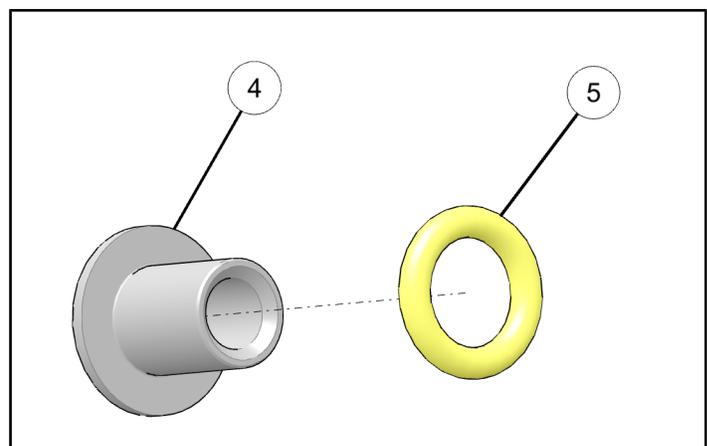


5. Install the floorboard bushing sub-assembly ④ ⑤ into left ① and right ② floorboards.

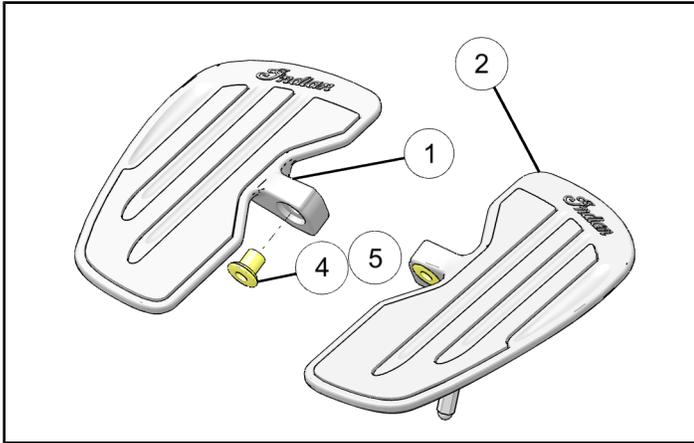


7. Install pivot pin ⑥ through mount and floorboard ②.

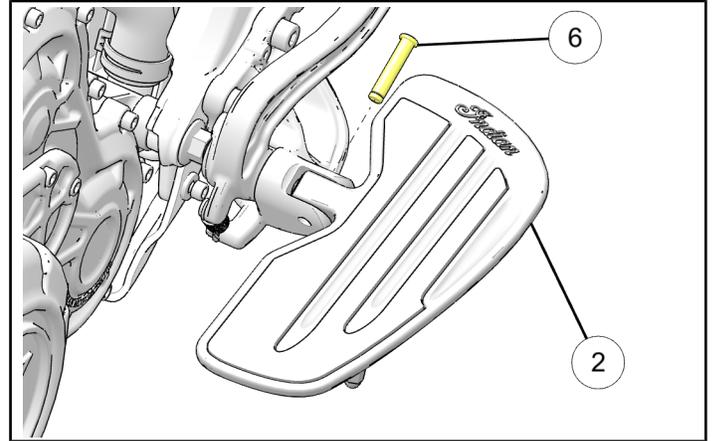

6. Slide RH floorboard ② into mounting slot.

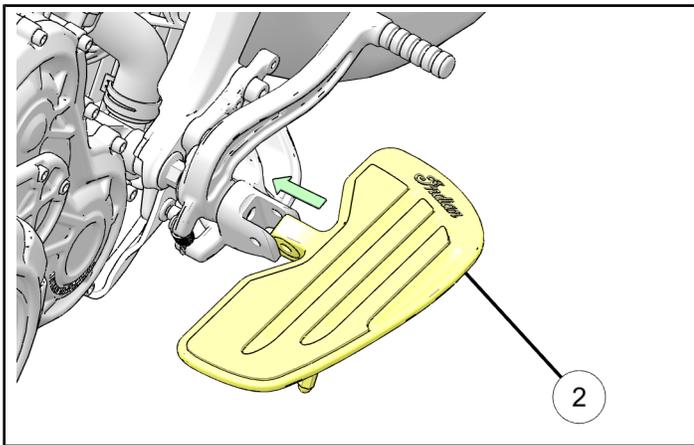

8. Install retaining ring ⑦ onto pivot pin ⑥.

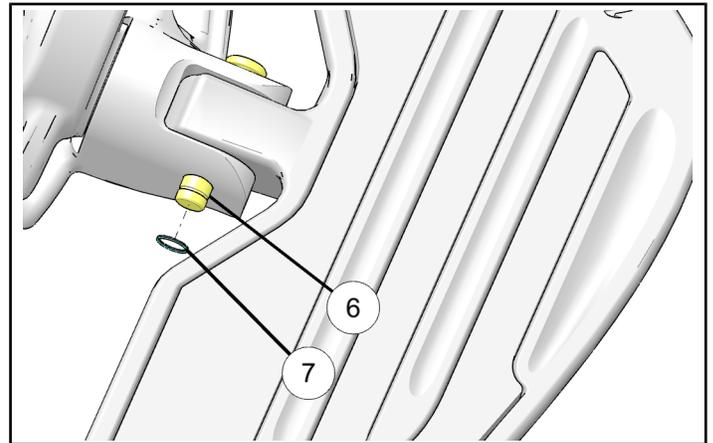

9. Repeat Steps 6-8 to install LH floorboard ①.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

