

# CARBON FIBER FRONT MUDGUARD KIT



P/N 2884088

## INTERNATIONAL INSTRUCTIONS

### DE DEUTSCH

Laden Sie die neuesten PDF-Anweisungen von [www.indianmotorcycle.de](http://www.indianmotorcycle.de) herunter.

### FR FRANÇAIS

Télécharger les dernières instructions en format PDF sur [www.indianmotorcycle.fr](http://www.indianmotorcycle.fr).

### IT ITALIANO

Scarica l'ultima versione delle istruzioni in formato PDF da [www.indianmoto.it](http://www.indianmoto.it).

### EN ENGLISH


Download the latest PDF instructions from [www.indianmotorcycle.com](http://www.indianmotorcycle.com).

### ES ESPAÑOL

Descargue las instrucciones más recientes en formato PDF de [www.indianmotorcycle.mx](http://www.indianmotorcycle.mx) / [www.indianmotorcycle.es](http://www.indianmotorcycle.es).

### ZH 中文

从 [www.indianmotorcycle.cn](http://www.indianmotorcycle.cn) 下载最新的PDF说明。

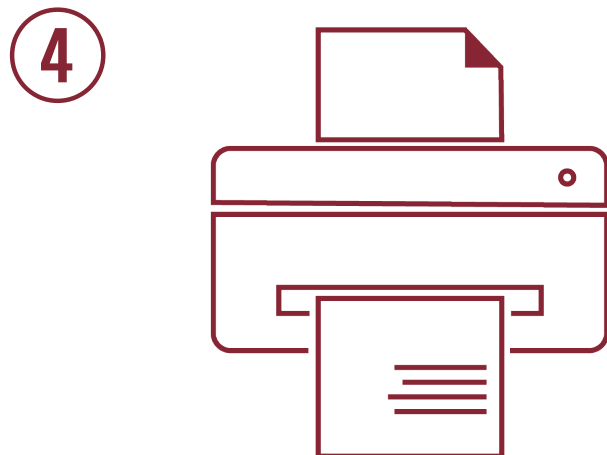

## APPLICATION

Verify accessory fitment at [www.indianmotorcycle.com](http://www.indianmotorcycle.com).


### IMPORTANT

The Indian Motorcycle® FTR™ 1200 Carbon Fiber Front Mudguard Kit P/N 2884088 is not compatible with Fork Guards Kit P/N 2884103

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

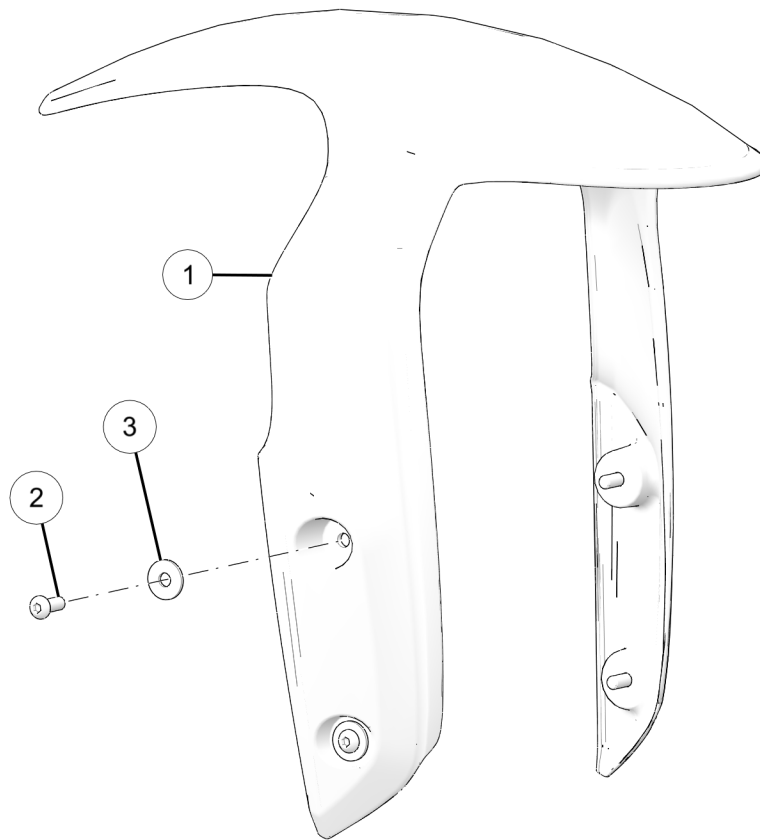

| REF | QTY | PART DESCRIPTION                     | P/N AVAILABLE SEPARATELY |
|-----|-----|--------------------------------------|--------------------------|
| 1   | 1   | Fender-Front, Main, Carbon Fiber     | N/A                      |
| 2   | 4   | Screw-Hex Button Head, M6 x 1.0 x 16 | 7517783                  |
| 3   | 4   | Washer, 6.4 x 18 x 1.6               | 7556064                  |
|     | 1   | Instructions                         | 9929449                  |

## TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Hex Key Set, Ball End, Metric
- Socket Set, Hex Bit, Metric
- Torque Wrench

## IMPORTANT

Your accessory kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS


### VEHICLE PREPARATION

#### GENERAL

1. Turn key or ignition switch to OFF position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.


#### FRONT MUDGUARD REMOVAL

1. Remove two screws (A) from each side of front mudguard. Remove mudguard from motorcycle.

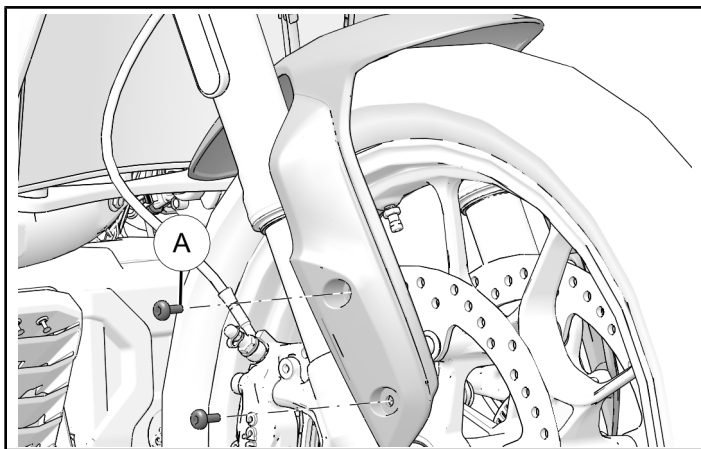

### ACCESSORY INSTALLATION

1. Place new fender (1) over front tire.

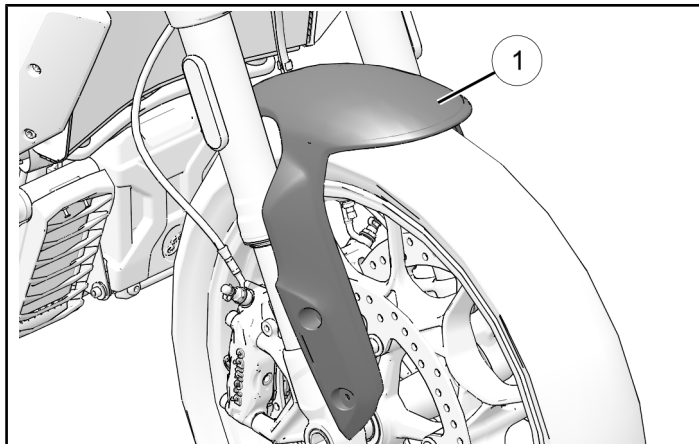


2. Loosely install fender (1) with four mud guard fasteners (2) and four washers (3), before torquing hardware.

#### TIP

Install top screws and washers before installing bottom hardware.

#### TORQUE

Mud Guard Fasteners (2):  
**96 in-lbs (11 N·m)**

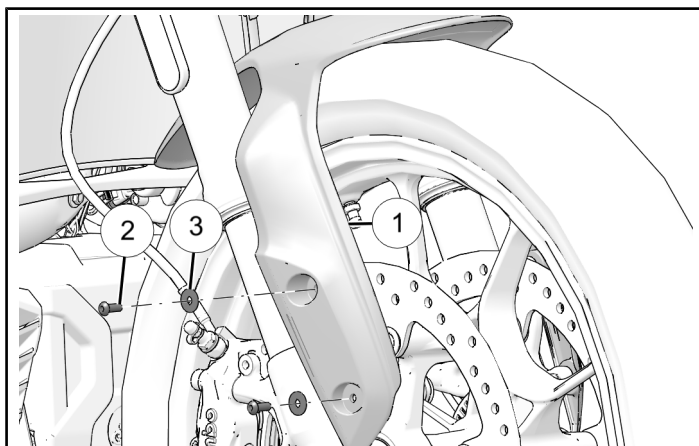

## FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

