

REAR FENDER BUMPER KIT



P/N 2879550-XXX

APPLICATION

All 2014 – 2016 Indian Motorcycle® models with Thunderstroke® 111 engine


Verify accessory fitment at www.indianmotorcycle.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

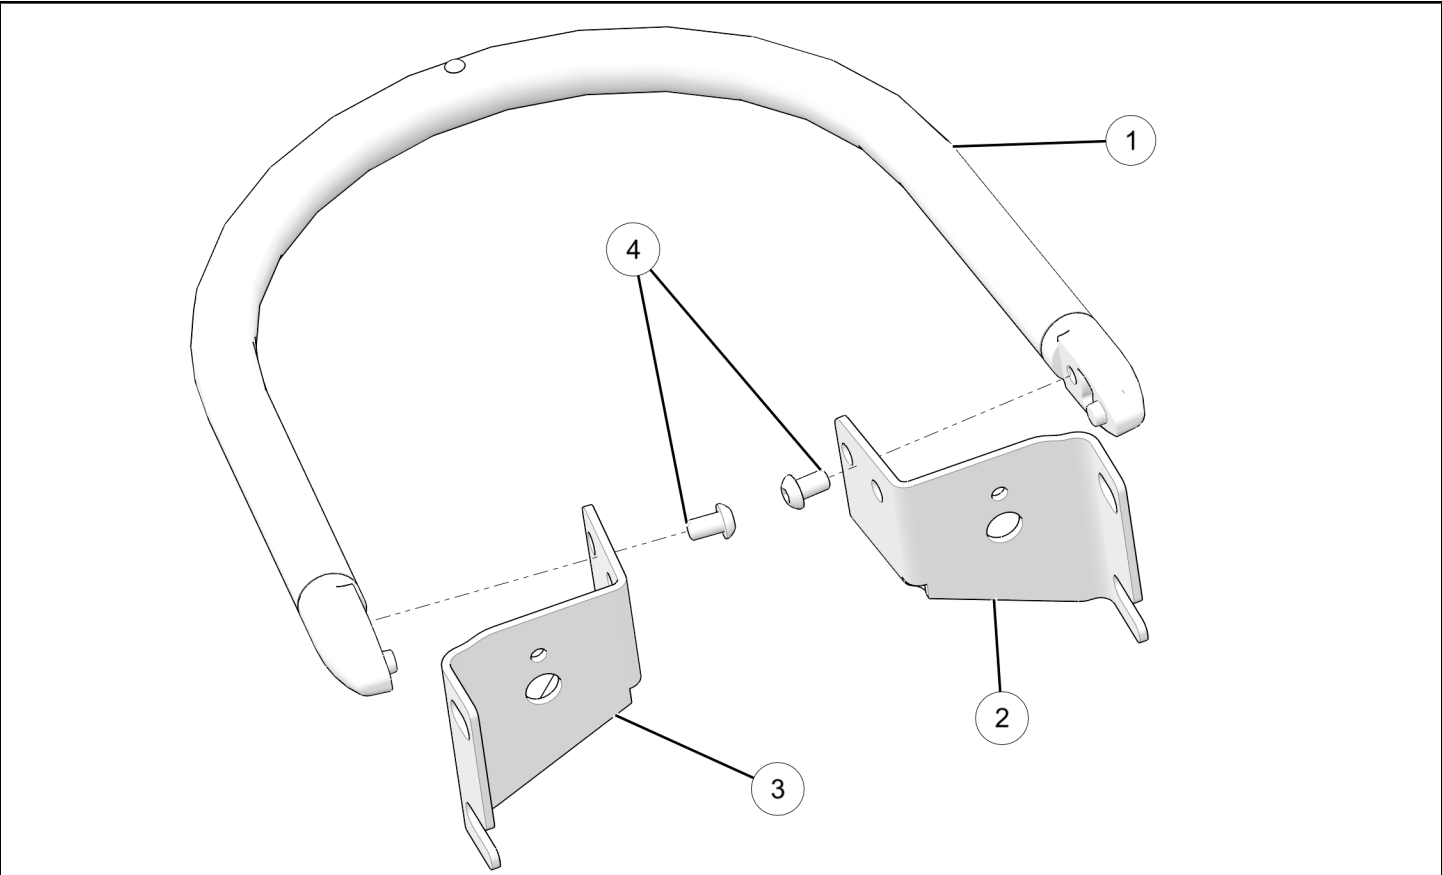

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Rear Bumper	–
2	1	Bracket, Bumper Mount, LH	–
3	1	Bracket, Bumper Mount, RH	–
4	2	Screw, Hex Button Head, M6 X 1.0 X 10	7517406
	1	Instructions	9924329

TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric

- Socket Set, Metric
- Torque Wrench

IMPORTANT

Your Indian Rear Fender Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 18 minutes

INSTALLATION INSTRUCTIONS

1. Turn key or ignition switch to OFF position and remove key. If equipped with keyless fob, remove fob from proximity of vehicle.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.


ASSEMBLE REAR FENDER BUMPER

1. Install bumper brackets ② and ③ to bumper ① with two screws ④.

Torque two screws ④ to specification.


TORQUE

90 in. lbs (10 Nm)

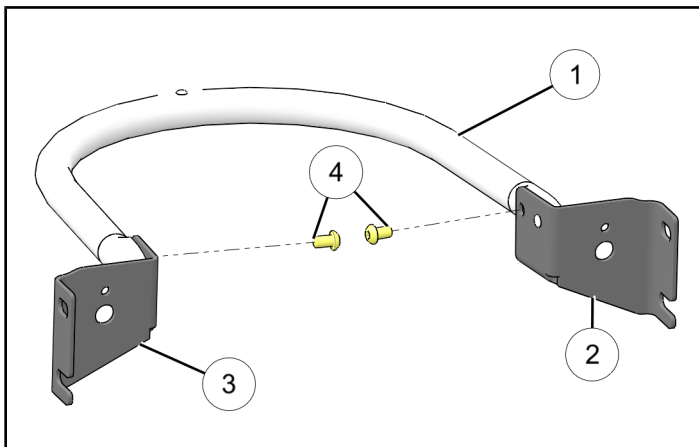


TOURING MODELS

1. Remove and retain antenna assembly ①.
 - a. Remove and retain nut ②, large washer ③, small washer ④, and antenna ring ⑤ from antenna assembly ①.

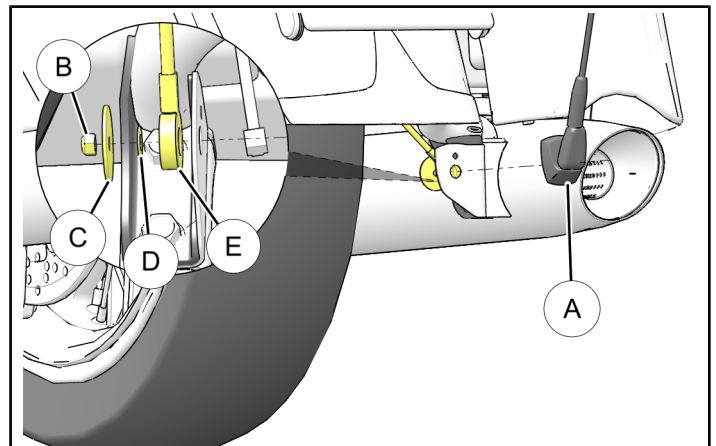

- b. Remove and retain two top fasteners ⑥ from exhaust brackets ⑦. Loosen but do not remove two lower fasteners ⑥.

Remove and discard antenna bracket ⑧.

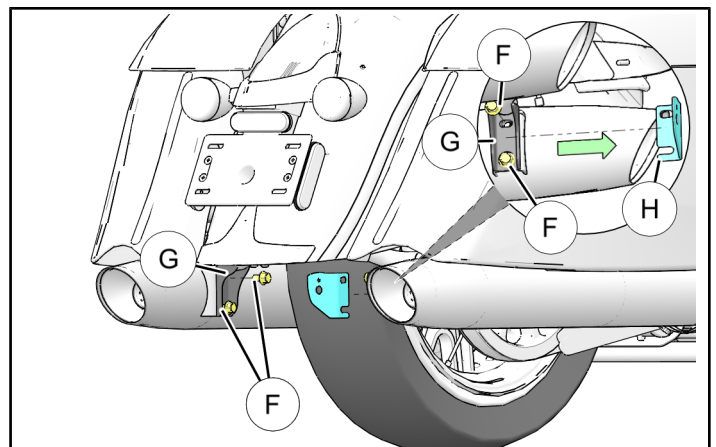


- Slide slot of bumper brackets ② and ③ between exhaust brackets ⑥ and exhaust frame at lower fastener location. Line up top fastener locations of exhaust bracket ⑥ and bumper bracket ② to install two fasteners ⑤ retained from **Previous Step**.


Torque four fasteners ⑤ to specification.

TORQUE

18 ft. lbs. (24 Nm)

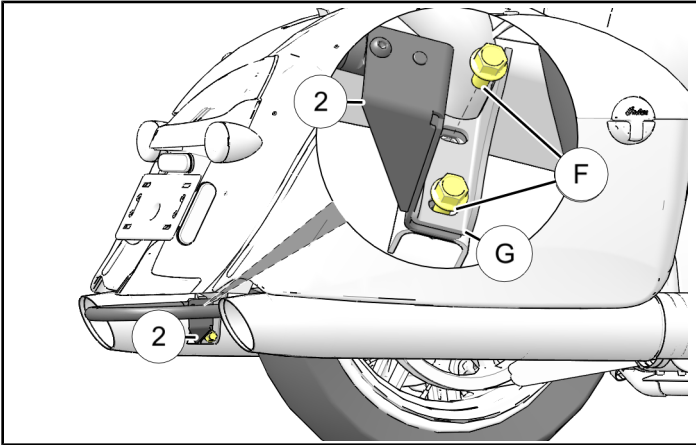


- Reinstall antenna assembly ① with nut ②, large washer ③, small washer ④, and antenna ring ⑤ retained in **Step 1** of **this section**.

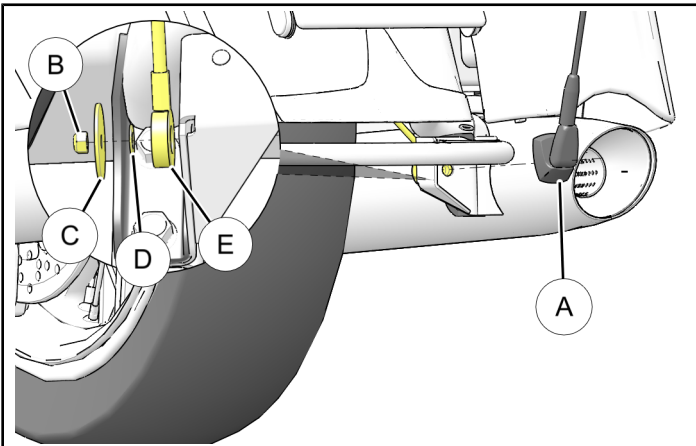

BAGGER AND CRUISER MODELS

- Remove and retain two top fasteners ⑤ from exhaust brackets ⑥. Loosen but do not remove two lower fasteners ⑤.

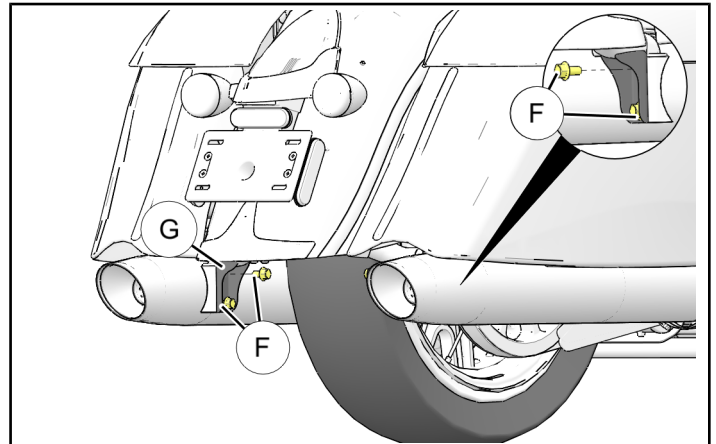


- Slide slot of bumper brackets ② and ③ between exhaust brackets ⑥ and exhaust frame at lower fastener location. Line up top fastener locations of exhaust bracket ⑥ and bumper bracket ② to install two fasteners ⑤ retained from **Previous Step**.

Torque four fasteners ⑤ to specification.

TORQUE

18 ft. lbs. (24 Nm)

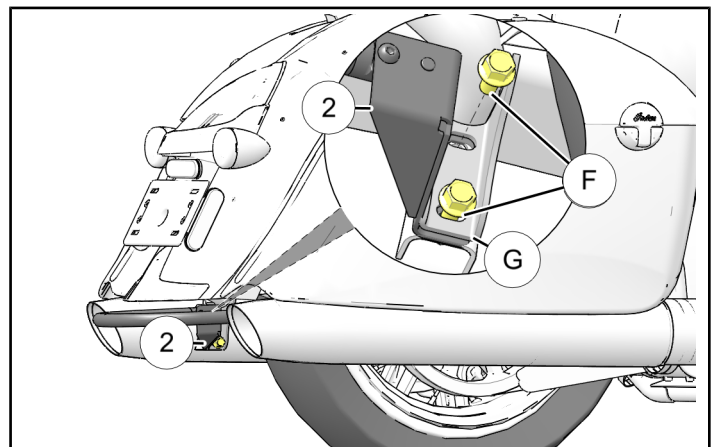

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

