

FRONT FENDER BUMPER KIT



P/N 2880750-156, 2880750-266

APPLICATION

Verify accessory fitment at Polaris.com.


2014 and newer Indian® Roadmaster®, Chieftain®, and Springfield® Motorcycles

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

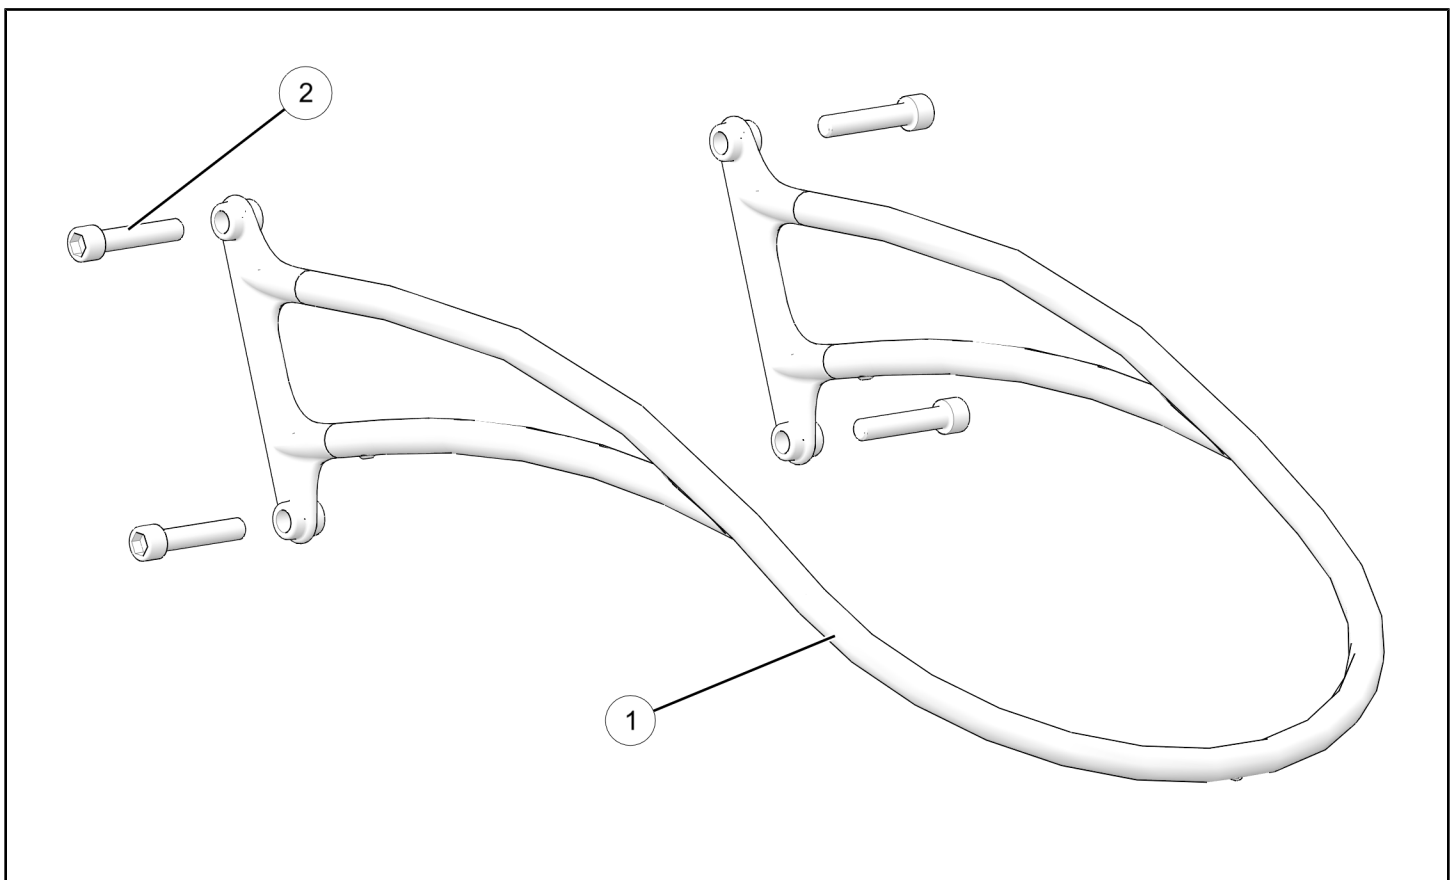

NOTE

XXX = Indian® Color Code (For Example: 266 = Black)

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Bumper, Front	1021112-XXX
2	4	Screw, Socket Head, M8 X 1.25 X 40, Chrome Screw, Socket Head, M8 X 1.25 X 40, Black	7520192 7518178
	1	Instructions	9924330

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Hex Bit, Metric

- Torque Wrench

IMPORTANT


Your Indian Front Fender Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 12 minutes

INSTALLATION INSTRUCTIONS

1. Turn key or ignition switch to "OFF" position and remove key. If equipped with keyless fob, remove fob from proximity of vehicle.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.
3. Remove and discard four forward located hex socket head screws **A** from front fork.
4. Install front bumper **1** to front fork with four new screws **2** as shown. Torque Screws to specification.

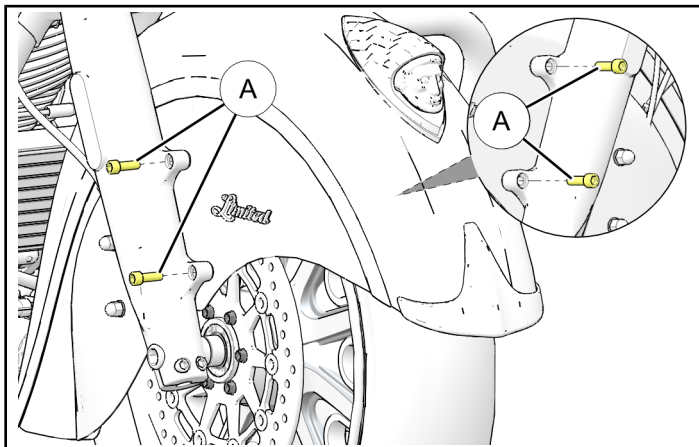

TORQUE
18 ft. lbs. (24 Nm)

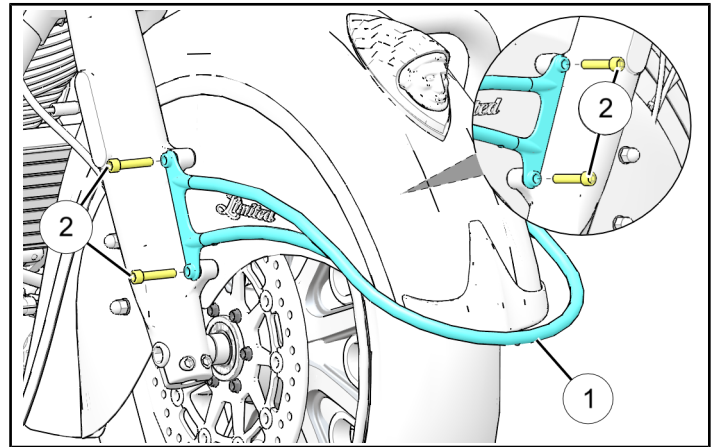

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

