

REAR SEAT BOLT KIT




P/N 2881187

APPLICATION

ALL MY16 INDIAN SCOUT MOTORCYCLES

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

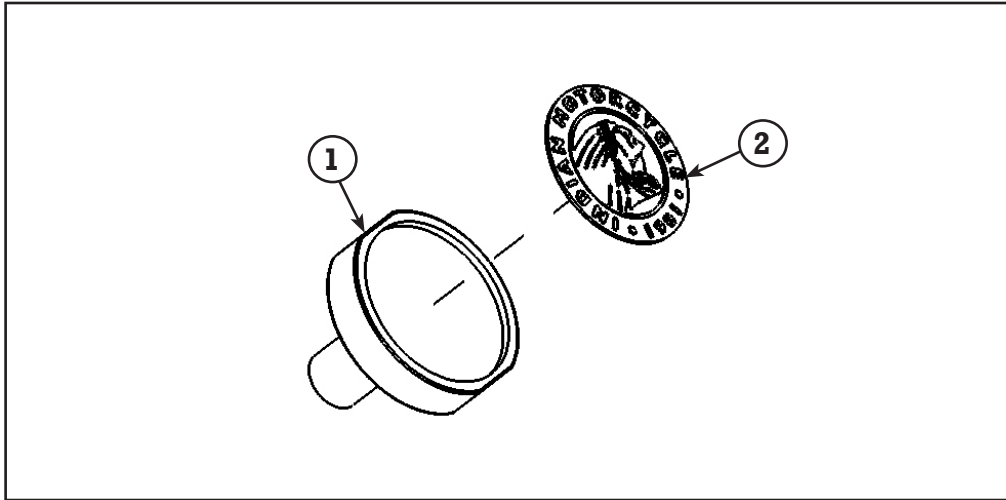

KIT CONTENTS

Ref	Qty	Part Description	Part Number
1	1	Screw	5139254
2	1	Logo	5451209
	1	Instructions	9926130

TOOLS NEEDED

5 mm Hex Key Socket

Socket Wrench

Torque Wrench

APPROXIMATE ASSEMBLY TIME


6 min

IMPORTANT

Your Indian REAR SEAT BOLT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

1. Remove the rear seat mounting bolt (A) and flat washer (B). Verify the nylon washer (C) remains assembled under the seat mount bracket (D). See figure.

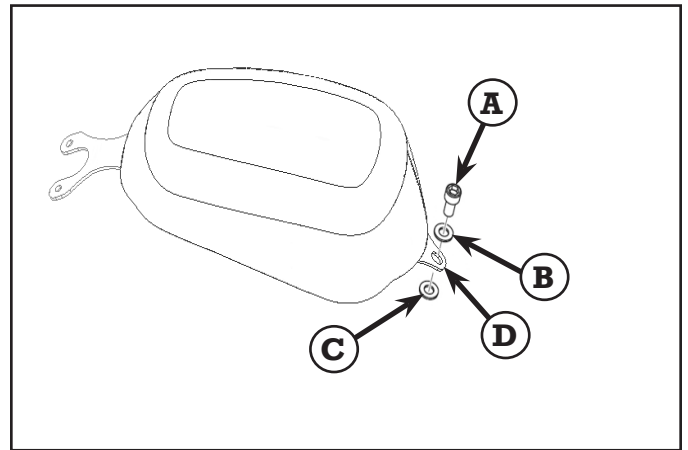

2. Install accessory rear seat screw (1). Torque to 84 in-lbs. (9.5 Nm) as shown in figure.
3. Remove adhesive paper backing from the logo (2).
4. Orient logo as desired and place into recess of the accessory rear seat screw. See figure.
5. Apply firm pressure to the logo for 20 seconds to complete the installation.

