

FORK GUARDS KIT



P/N 2884103

INTERNATIONAL INSTRUCTIONS

DE DEUTSCH

Laden Sie die neuesten PDF-Anweisungen von www.indianmotorcycle.de herunter.

FR FRANÇAIS

Télécharger les dernières instructions en format PDF sur www.indianmotorcycle.fr.

IT ITALIANO

Scarica l'ultima versione delle istruzioni in formato PDF da www.indianmoto.it.

EN ENGLISH

Download the latest PDF instructions from www.indianmotorcycle.com.

ES ESPAÑOL

Descargue las instrucciones más recientes en formato PDF de www.indianmotorcycle.mx / www.indianmotorcycle.es.

ZH 中文

从www.indianmotorcycle.cn 下载最新的PDF说明。

1



2



3



4



APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.


IMPORTANT

The *Fork Guards Kit* P/N 2883401 is only compatible with the stock mudguard and is not compatible with accessory mudguard kits.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

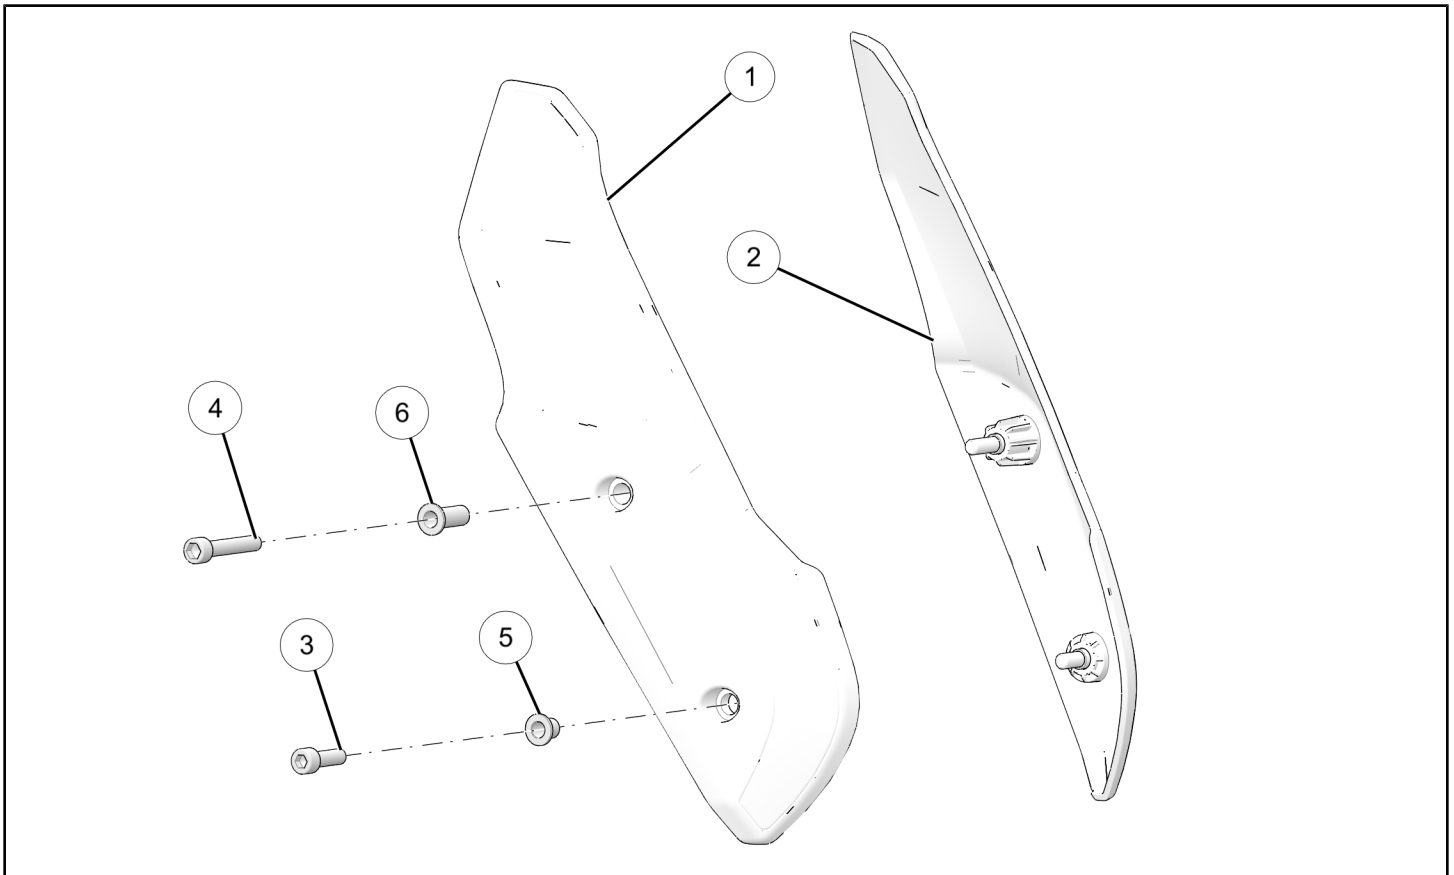

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Guard-Fork, RH	5454999
2	1	Guard-Fork, LH	5454998
3	2	Screw-Socket Head, M6 x 1.0 x 20	7517305
4	2	Screw-Socket Head, M6 x 1.0 x 35	7518308
5	2	Limiters-Comp, Lower	5142319
6	2	Limiters-Comp, Upper	5142318
	1	Instructions	9929464

TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Socket Set, Hex Bit, Metric
- Torque Wrench

IMPORTANT

Your accessory kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL


1. Turn key or ignition switch to OFF position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicles is stable prior to installation.

ACCESSORY INSTALLATION

NOTE

Ensure longer fork guard fasteners ④ and longer compression limiters ⑥ are installed in upper location.

1. Remove and discard two screws ① from mudguard.

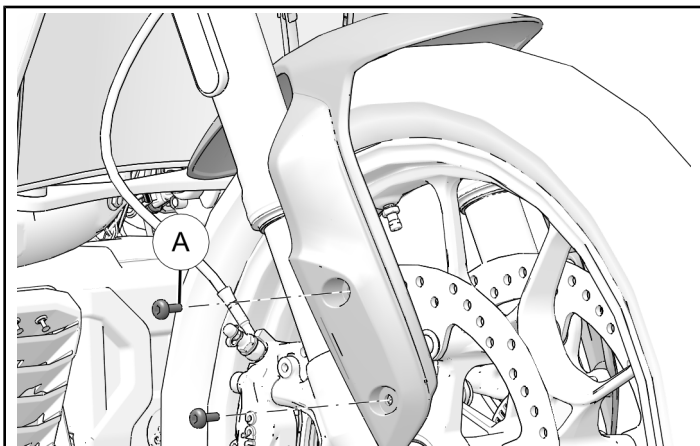


2. Align RH fork guard ① with front mudguard. Loosely install top fastener ④ and compression limiter ⑥ before securing bottom. Loosely install bottom with bottom fastener ③ and compression limiter ⑤.

TORQUE


Top Fork Guard Fastener ④:
96 in-lbs (11 N·m)

TORQUE

Bottom Fork Guard Fastener ③:
96 in-lbs (11 N·m)

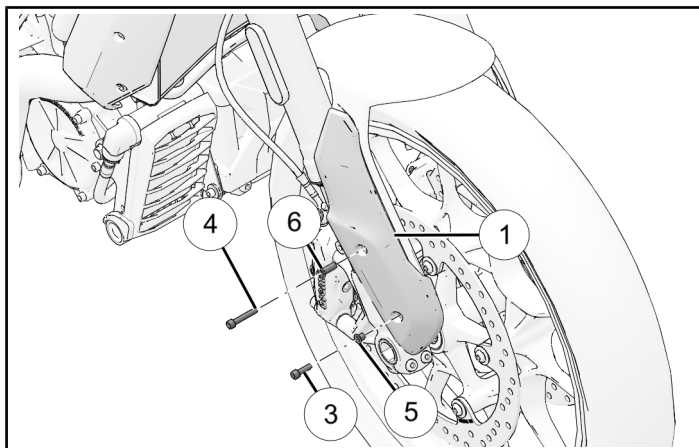

3. Remove and discard two screws ① from mudguard.

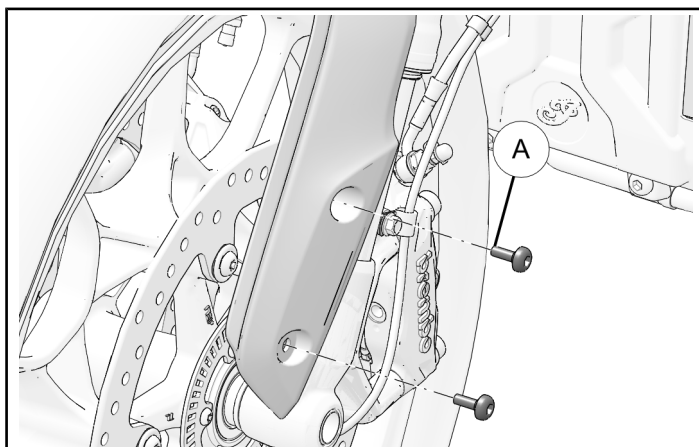


4. Align LH fork guard ① with front mudguard. Loosely install top fastener ④ and compression limiter ⑥ before securing bottom. Loosely install bottom with bottom fastener ③ and compression limiter ⑤.

TORQUE

Top Fork Guard Fastener ④:
96 in-lbs (11 N·m)

TORQUE

Bottom Fork Guard Fastener ③:
96 in-lbs (11 N·m)

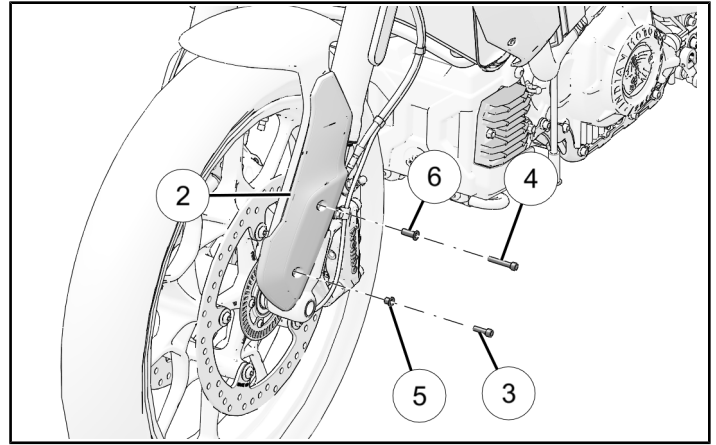

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

