

INDIAN® BADGE KIT



P/N 2883321-XX, 2883322-XX

APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

Kit PN 2883321 shown; Kit PN 2883322 similar except as noted below.

This Kit includes:



NOTE

XX = Indian® color code (For example: 13 = Black Pearl)

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Badge, Airbox Cover,	5263833-XX
2	1	Badge, Outer Cam Cover	5263834-XX
3	1	Badge, Outer Primary Cover	5263835-XX
4	1	Badge, Upper Right Side Engine Cover	5263836-XX

REF	QTY	PART DESCRIPTION	PART NUMBER
5	1	Console, Inner, No Gauge (Only in kit PN 2883321-XX)	5262804-XX
	1	Instructions	9928548

TOOLS REQUIRED

- Safety Glasses
- Heat Gun (or equivalent)
- Pry Tool, Plastic, Paint Safe

CONSUMABLES REQUIRED

- Gloves, Chemical Resistant
- Solvent Wipe (99% Isopropyl Alcohol)

IMPORTANT

Your Indian® Badge Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 24 minutes

INSTALLATION INSTRUCTIONS


1. Turn key or ignition switch to “OFF” position and remove key. If equipped with keyless fob, remove fob from proximity of vehicle.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.
3. Remove paper backing from new airbox cover badge ①. Ensure proper alignment and adhere airbox cover badge ① to airbox cover. Apply even pressure for 30 seconds to activate adhesive.

CAUTION

Do not overheat paint with heat gun or damage to paint surface can occur.

AIRBOX COVER BADGE


1. Carefully pry off stock airbox cover badge ①. Use caution not to scratch paint. If needed, use heat gun to loosen adhesive.

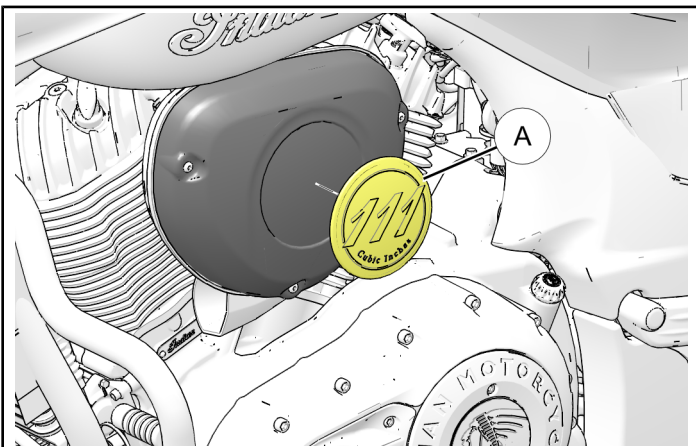

2. Remove any extra adhesive from surface. Clean surface with Isopropyl Alcohol.

OUTER CAM COVER BADGE


1. Carefully pry off stock outer cam cover badge ②. Use caution not to scratch paint. If needed, use heat gun to loosen adhesive.

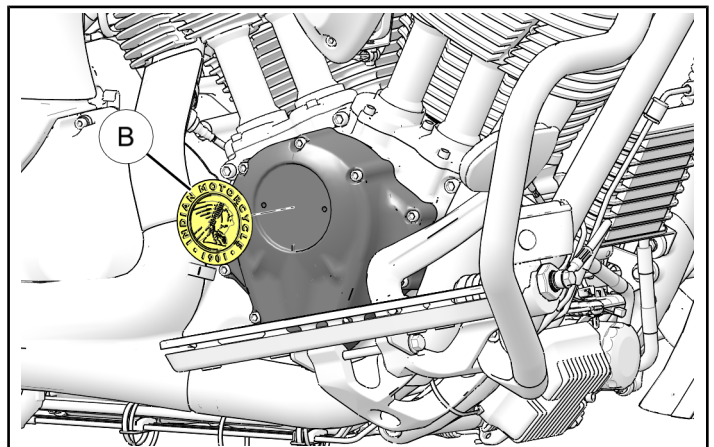

2. Remove any extra adhesive from surface. Clean surface with Isopropyl Alcohol.
3. Remove paper backing from new outer cam cover badge ②. Ensure proper alignment and adhere outer cam cover badge ② to outer cam cover. Apply even pressure for 30 seconds to activate adhesive.

OUTER PRIMARY COVER BADGE


1. Carefully pry off stock outer primary cover badge ①. Use caution not to scratch paint. If needed, use heat gun to loosen adhesive.

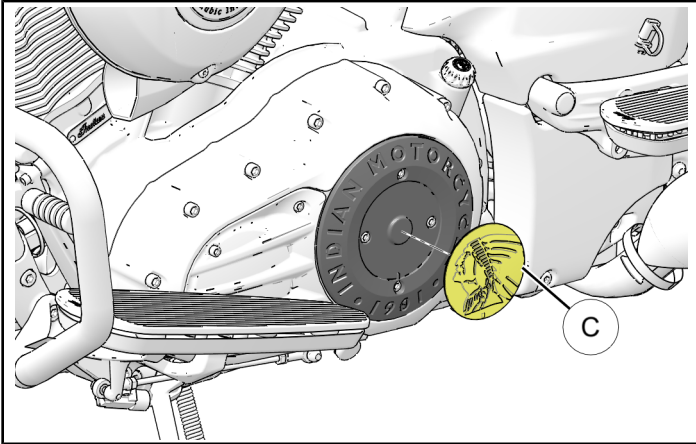

2. Remove any extra adhesive from surface. Clean surface with Isopropyl Alcohol.
3. Remove paper backing from new outer primary cover badge ③. Ensure proper alignment and adhere primary cover badge ③ to primary cover. Apply even pressure for 30 seconds to activate adhesive.

UPPER RIGHT SIDE ENGINE COVER BADGE

1. Carefully pry off stock upper right side engine cover badge ②. Use caution not to scratch paint. If needed, use heat gun to loosen adhesive.

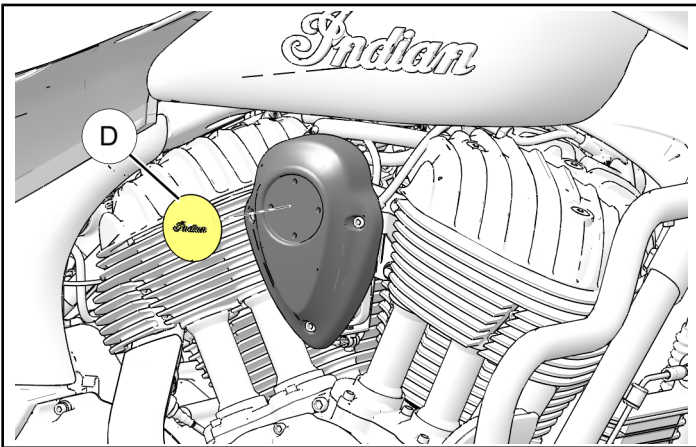


FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

2. Remove any extra adhesive from surface. Clean surface with Isopropyl Alcohol.
3. Remove paper backing from new upper right side engine cover badge ④. Ensure proper alignment and adhere upper right side engine cover badge ④ to upper right side engine cover. Apply even pressure for 30 seconds to activate adhesive.

INNER CONSOLE COVER (KIT PN 2883321 ONLY)

1. Carefully pry off stock inner console cover ⑤. Use caution not to scratch paint. If needed, use heat gun to loosen adhesive.

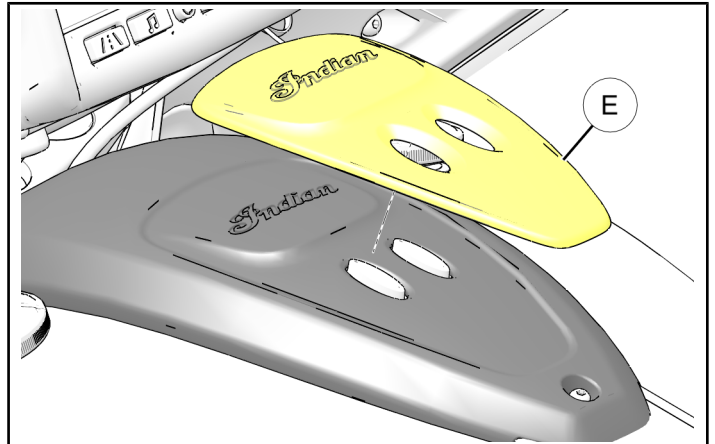

2. Remove any extra adhesive from surface. Clean surface with Isopropyl Alcohol.
3. Remove paper backing from new inner console cover ⑤. Ensure proper alignment and adhere inner console cover ⑤ to console. Apply even pressure for 30 seconds to activate adhesive.

FEEDBACK FORM

