

HANDLEBAR WAFFLE GRIPS KIT BY PROTAPER®



P/N 2884100

INTERNATIONAL INSTRUCTIONS

DE DEUTSCH

Laden Sie die neuesten PDF-Anweisungen von www.indianmotorcycle.de herunter.

FR FRANÇAIS

Télécharger les dernières instructions en format PDF sur www.indianmotorcycle.fr.

IT ITALIANO

Scarica l'ultima versione delle istruzioni in formato PDF da www.indianmoto.it.

EN ENGLISH

Download the latest PDF instructions from www.indianmotorcycle.com.

ES ESPAÑOL

Descargue las instrucciones más recientes en formato PDF de www.indianmotorcycle.mx / www.indianmotorcycle.es.

ZH 中文

从www.indianmotorcycle.cn
下载最新的PDF说明。

1



2



3



4




APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

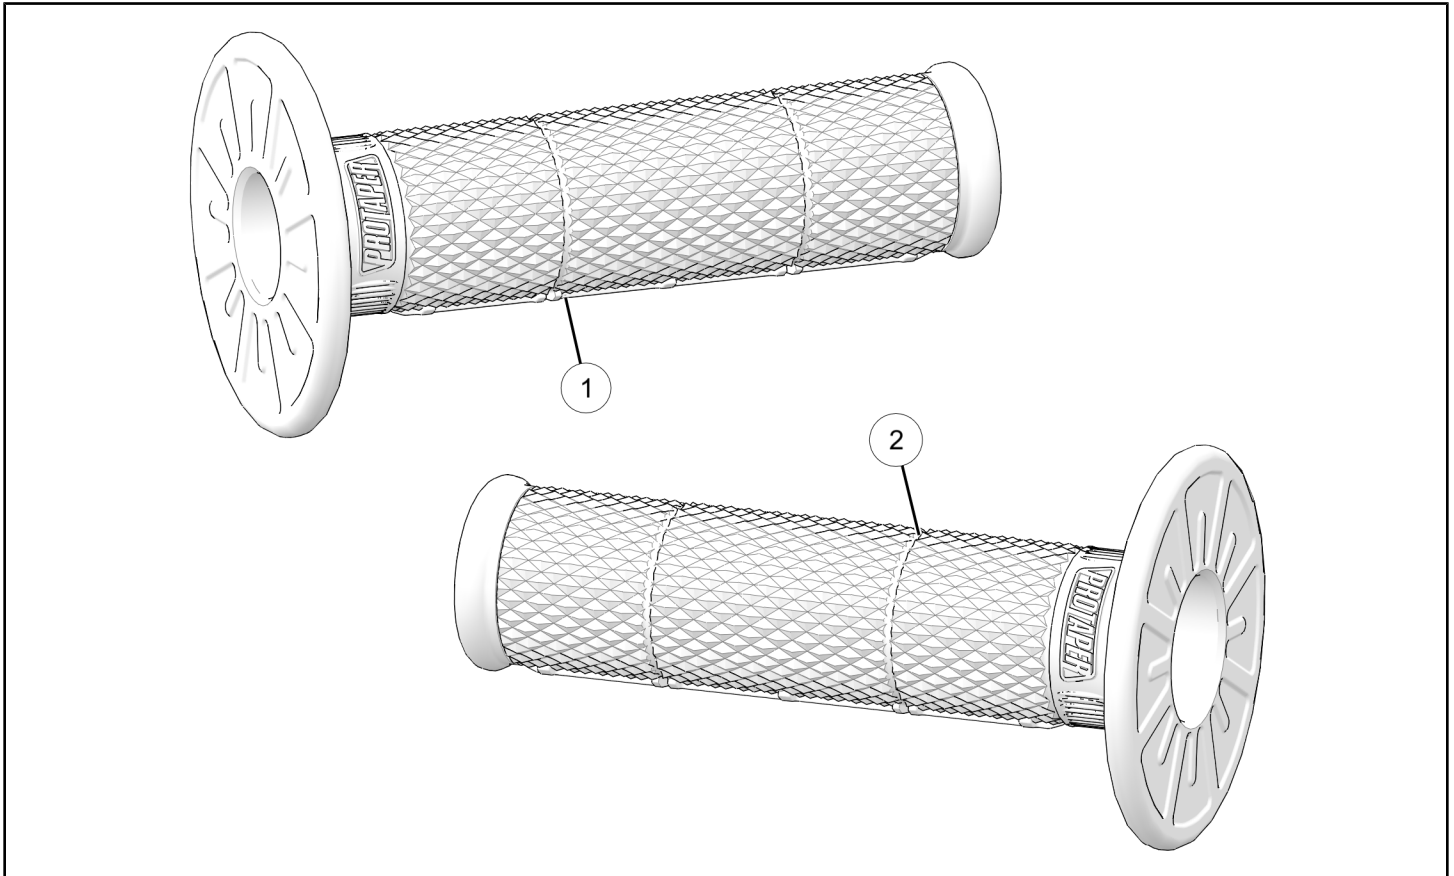

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Grip, ProTaper®, LH	N/A
2	1	Grip, ProTaper®, RH	N/A
	1	Instructions	9929462

TOOLS REQUIRED

- Safety Goggles
- Hex Key Set, Metric
- Socket Set, Hex Bit, Metric
- Air Compressor
- Blow Gun, Air Compressor

CONSUMABLES REQUIRED

- Isopropyl Alcohol (IPA)
- Gloves, Chemical Resistant

IMPORTANT

Your accessory kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL

1. Turn key or ignition switch to OFF position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.

BAR END REMOVAL

1. Loosen, but DO NOT completely remove, screw **A** until end cap and wedge anchor assembly can be removed from handlebar tube.

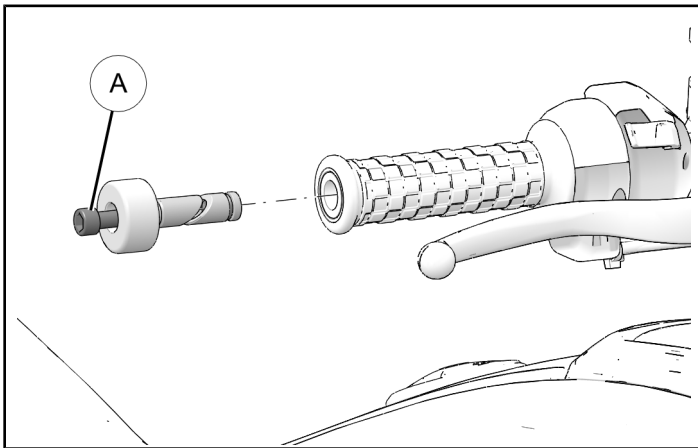

2. Repeat this section for opposite side.

GRIPS REMOVAL


1. Align nozzle of air blow gun between handlebar and grip. Blow air to loosen and remove grip.

TIP

After grip is loosened with air, isopropyl alcohol may be used to decrease friction and remove grip.

⚠ WARNING


Isopropyl alcohol is hazardous to your health. See isopropyl alcohol packaging for proper handling instructions, including recommended personal protective equipment such as goggles and chemical resistant gloves.

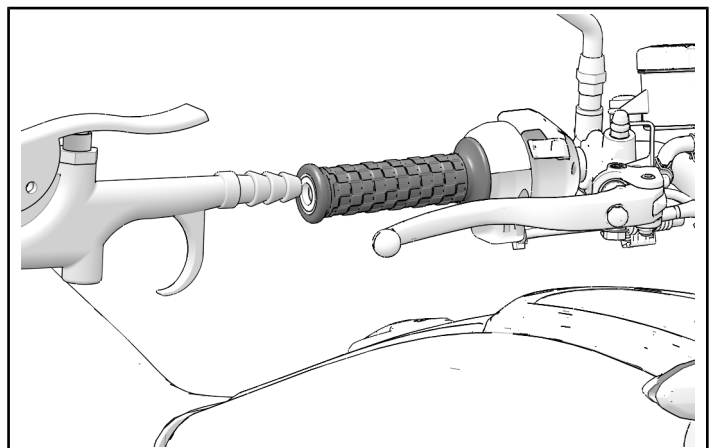

2. Repeat this section for opposite grip.

ACCESSORY INSTALLATION


1. Identify RH grip. RH grip has slightly large inner diameter than LH grip.

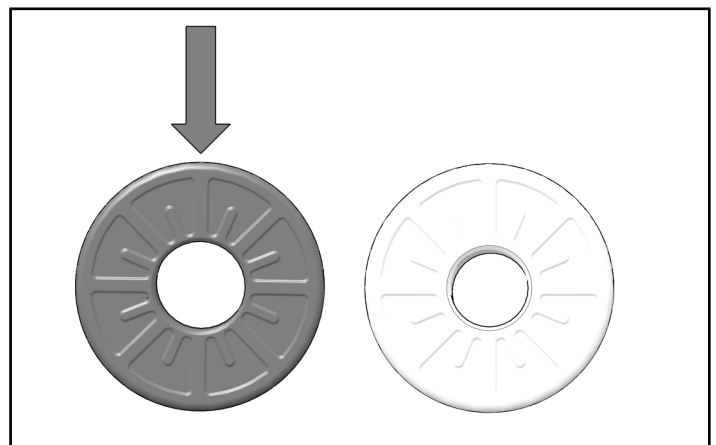

2. Thinly coat inside of RH grip ② with isopropyl alcohol to help reduce friction during installation. Install by twisting grip back-and-forth until fully seated on handlebar.

⚠ WARNING

Isopropyl alcohol is hazardous to your health. See isopropyl alcohol packaging for proper handling instructions, including recommended personal protective equipment such as goggles and chemical resistant gloves.

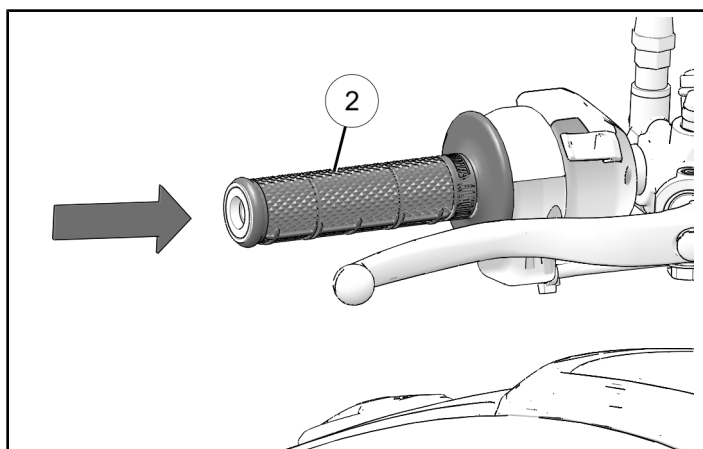


3. Partially thread bar end fastener ① into wedge anchor assembly. Slide wedge anchor into handlebar tube until bar end is flush against handlebar tube.

TORQUE

Bar End Fastener ①:
18 ft-lbs (24 N·m)

IMPORTANT

Twist throttle and ensure throttle returns without friction. Friction may be caused by grip rubbing against bar end.

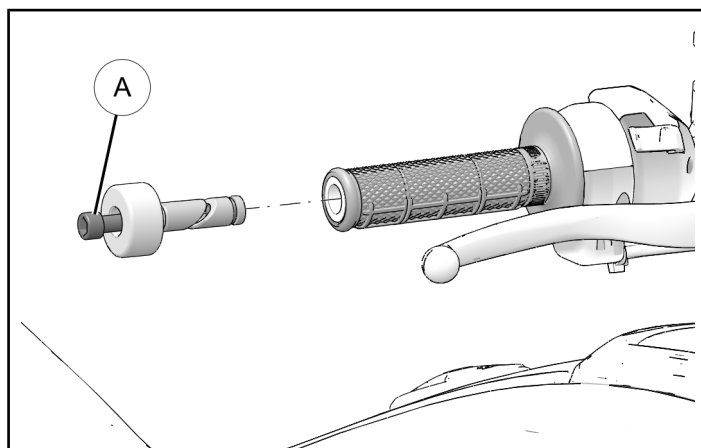

4. Repeat this section for LH grip.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

