

CLUTCH RAM MOUNT KIT




P/N 2880920

APPLICATION

ALL FULL-SIZED INDIAN MODELS

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown below.

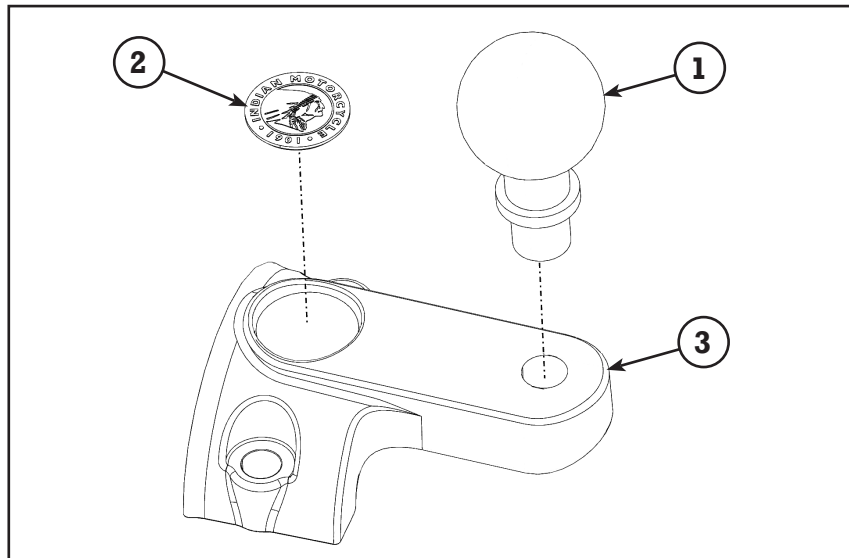

KIT CONTENTS

Ref	Qty	Part Description	Part Number
1	1	M10 Ball-Ram	5136705
2	1	Plate-Emblem, Dipstick	5257416
3	1	Clamp-Clutch Mount, Ram	5633348
	1	Instructions	9925898

TOOLS NEEDED

Torque Wrench (in-lbs. and ft. lbs.)

T30 Socket

Ratchet

APPROXIMATE ASSEMBLY TIME

20 mins

IMPORTANT

Your Indian CLUTCH RAM MOUNT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation Steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


Removal

1. Remove the M6 fasteners (A) from the clutch clamp. The fasteners will be re-used.

Installation

1. Install the Clutch Ram Mount. See figure. Reuse the fasteners (A) from Removal Step 1. Torque fasteners to 60-80 in-lbs. (6.8-9 Nm).

NOTE: Orient the clutch lever to your preference.

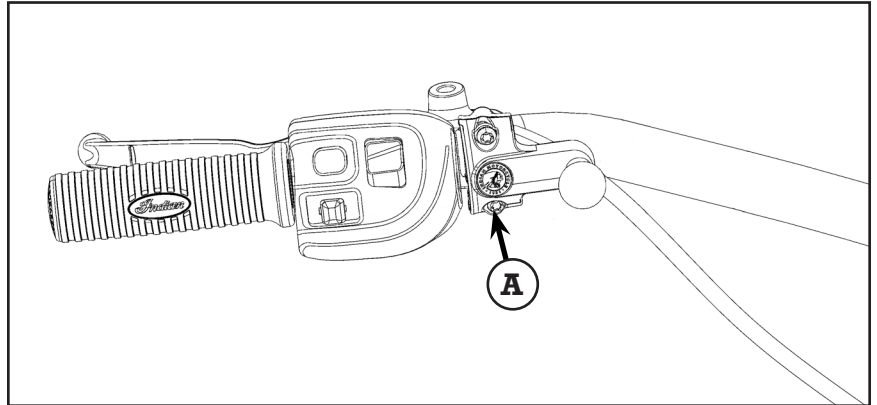

⚠ WARNING

Torque all fasteners to specification.