

SMOKED TURN SIGNAL KIT



P/N 2884129


APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

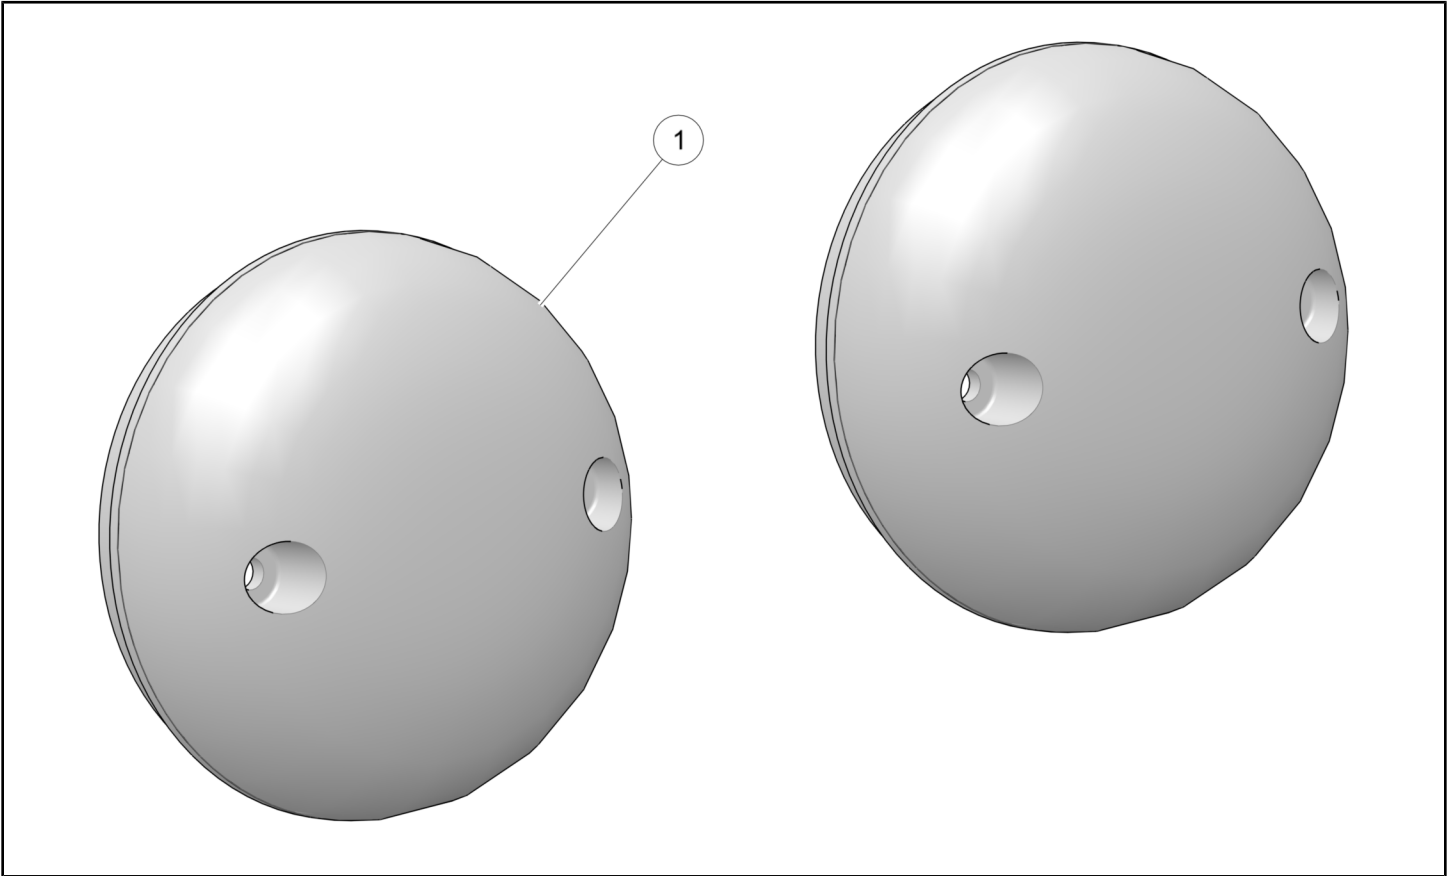

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	4	Signal Lens, Scout, Smoke	-
	1	Instructions	9929540

TOOLS REQUIRED

- Safety Glasses
- Screwdriver, Phillips
- Torque Wrench

IMPORTANT

Your Indian Motorcycle® Smoked Turn Signal Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Turn key or ignition switch to **OFF** position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.

ACCESSORY INSTALLATION

1. Remove and retain two screws (A) from each turn signal lens.

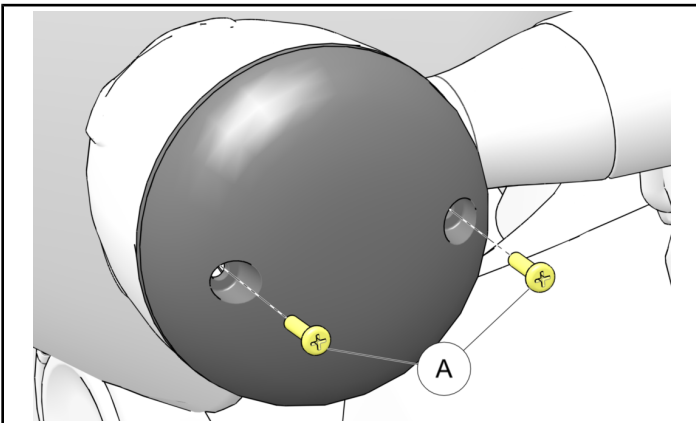


2. Remove and discard all four stock turn signal lenses (B).

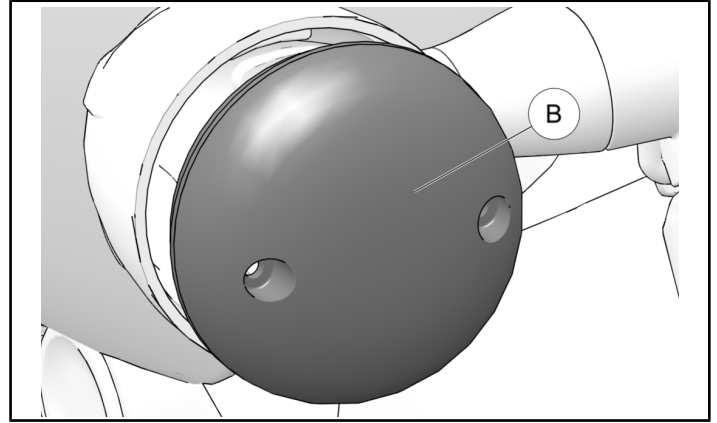

3. Install new turn signal lenses (1) and secure with retained screws (A). Torque screws to specification.

TORQUE

6 in-lbs. (0.65 Nm)

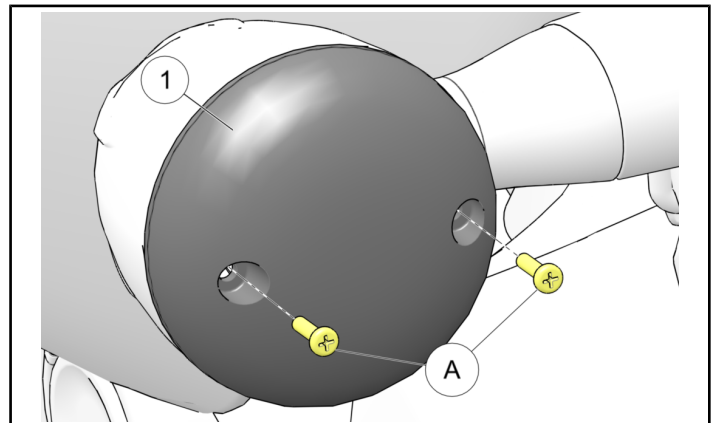

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

