

# SADDLEBAG TRIM KIT



## P/N 2881769 (GLOSS BLACK)

### APPLICATION


Indian Motorcycles with Thunderstroke 111 Engine and Hard Saddlebags

### BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

### KIT CONTENTS

This Kit includes:

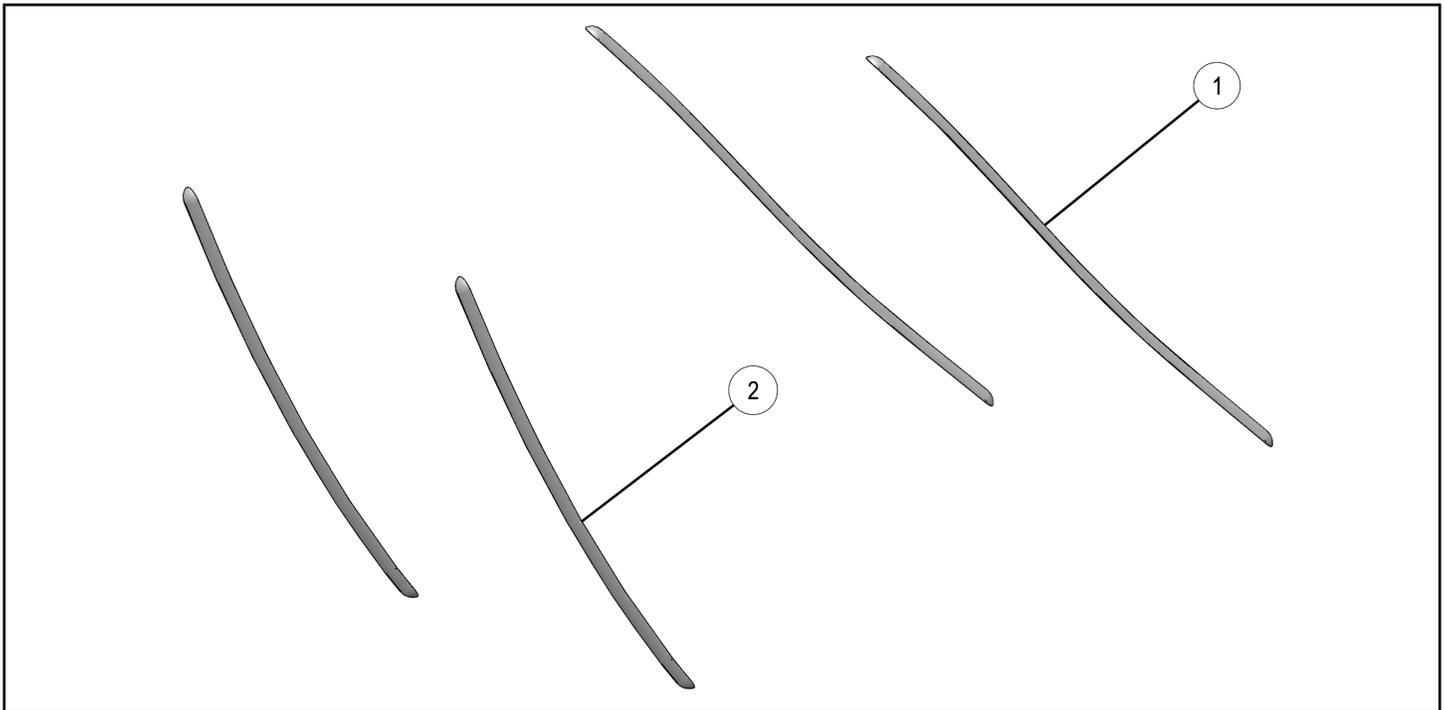

REF	QTY	PART DESCRIPTION	PART NUMBER
1	2	Saddlebag Rear Trim	5452911
2	2	Saddlebag Front Trim	5452912
	1	Instructions	9926867

### TOOLS REQUIRED

- Denatured Alcohol
- Warm water and a mild dish-washing soap
- Soft lint free cloth

### IMPORTANT

Your Indian SADDLEBAG TRIM KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME

Approximately 30 minutes


## INSTALLATION INSTRUCTIONS

### NOTE

Place motorcycle on firm surface on side stand.

### Removal

1. Remove all four pieces of stick on trim (A) from front and rear of both saddlebags. Be careful not to damage paint during removal.

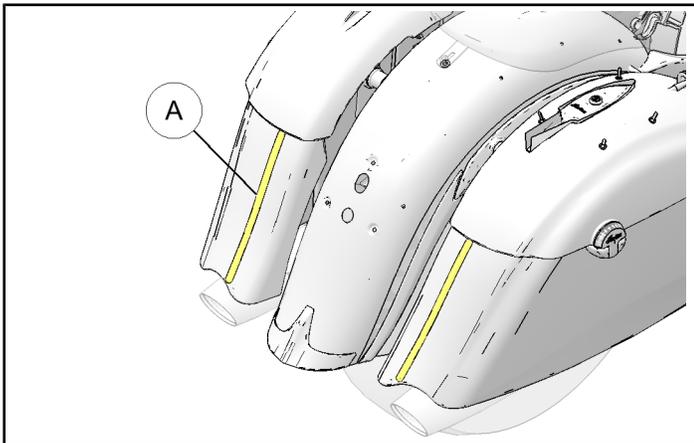

2. Ensure residue is removed from bag before installation of new trim.

### IMPORTANT

#### Cleaning Matte Clear Coat Finishes:

Matte finish products are prone to trapping dirt, oils and other contaminants. Always clean this type of finish with warm water and a mild dish-washing detergent. Use a soft sponge to gently rub the surface, and then rinse with clean warm water. For stubborn stains such as grease or oil, use a citrus-based cleaner. Spray the cleaner onto the area and rub gently with a soft sponge. Allow the cleaner to sit for a couple of minutes, and then rinse well with clean warm water. Repeat as needed.

### NOTE

Never use a polishing/buffing wax or any sponge that has an abrasive surface when cleaning a matte finish. These products will buff the matte surface of the finish and result in a glossy finish. Never clean matte finishes with a pressure washer, as this will further imbed contaminants into the clear coat and may damage labels and decals.


### Installation

1. Trim ① and ② may be installed with saddlebags on or off the motorcycle. It is recommended that once location of trim is tested the bag is kept in that position until installation is complete.
2. Clean trim area with warm water and a mild dish-washing detergent before applying trim to remove any residue, dust, dirt, or grime.
3. Test-fit trim to all locations orientating the trim correctly. Repeat this step several times, ensuring that you will be able to correctly position the trim on the saddlebags when the tape covering is removed.

### IMPORTANT

The tape used to adhere the trim is aggressive. If you do not position it correctly, it will not be possible to remove or reposition without damaging the trim.

4. Remove the tape cover from trim ① / ②. Position trim in desired area as tested in Step 3. Trim should be centered on each saddlebag surface.

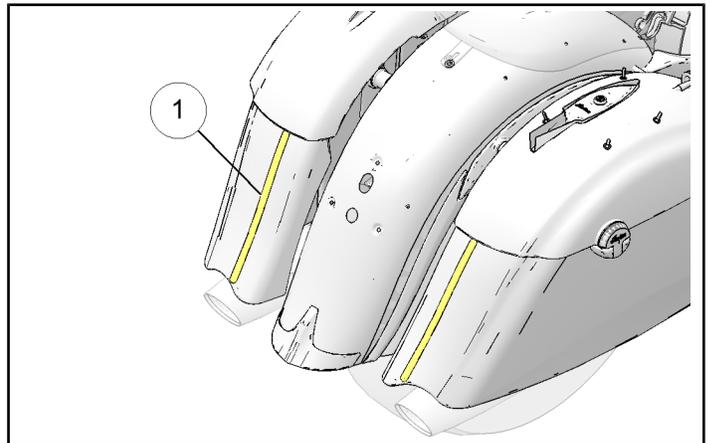

5. Apply firm pressure along the trim during installation. Confirm all edges are adhered to the saddlebag.
6. Repeat steps 1-5 until all four trim pieces are installed.